




TYGER®

T1 | SOFT ROLL-UP TONNEAU COVER

For JEEP GLADIATOR

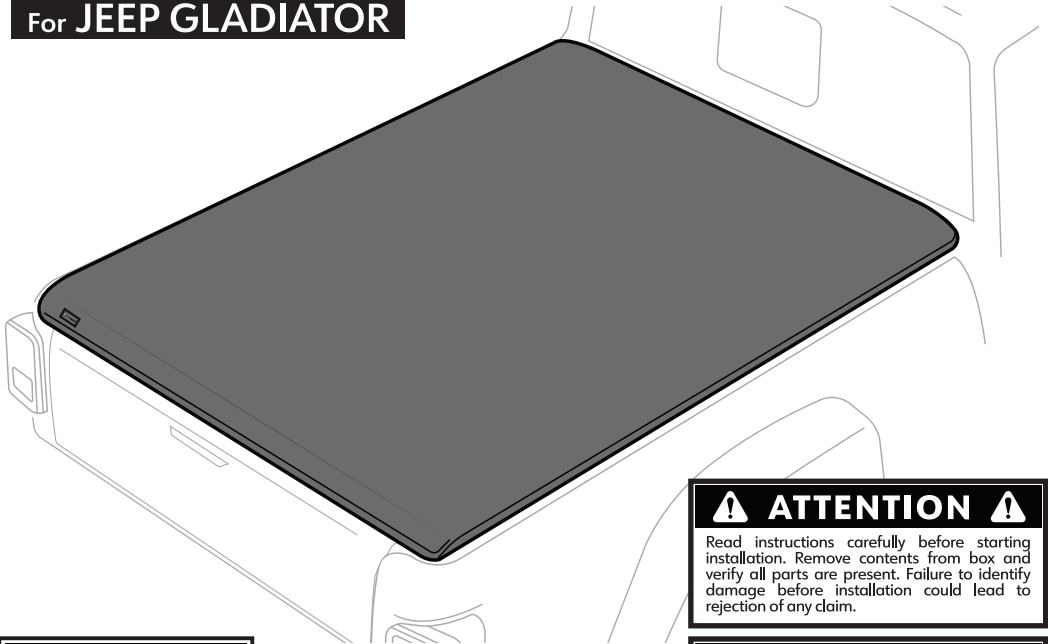

TOOLS REQUIRED (NOT INCLUDED)



10mm
Socket



Ratchet
Wrench



Phillips
Screwdriver

⚠ ATTENTION ⚠

Read instructions carefully before starting installation. Remove contents from box and verify all parts are present. Failure to identify damage before installation could lead to rejection of any claim.

DAMAGED or MISSING PARTS?

NEED HELP?

contact us: **1-866-340-3038**

PARTS LIST

(ONLY MARKED ITEMS ARE INCLUDED)

- ☒ Bed Cover



- ☒ Side Rails (L & R)



SP-BC1022 **A**
SP-BC1023 **B**
SP-BC1024 **C**
Mounting Clamps



SP-BC1025 **A**
SP-BC1026 **B**
SP-BC1027 **C**
Alternative Sliding
Mounted Clamps
for Utility Track



SP-BC0003
Front Seal Strip
170 x 2.5 x 1cm







SP-BC0003




1 APPLYING SEAL STRIPS ⓘ


IF THE TRUCK'S FRONT BED RAIL IS LOWER THAN THE SIDES, USE THE PROVIDED WEATHER SEAL STRIPS. GAPS ON THE FRONT BED AND TAILGATE CAN CAUSE NOISE AND FLAPPING ISSUES WHILE DRIVING ALONG WITH WATER LEAKAGE.

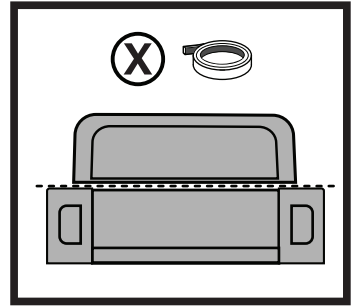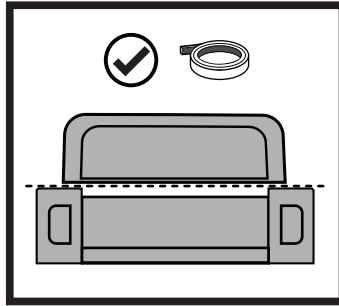


a

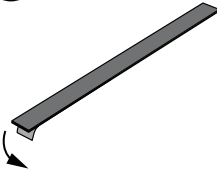


b

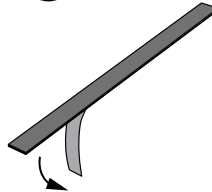


c

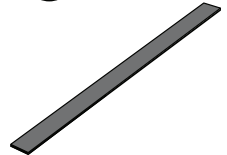


d

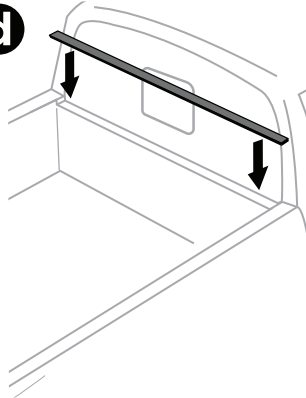

e

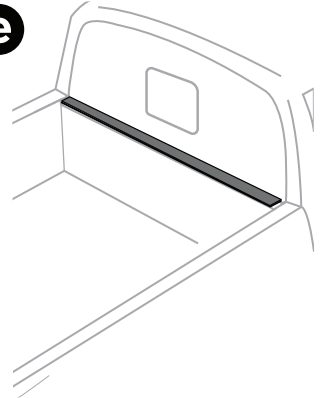


YOU NEED

  Phillips-Head
Screwdriver

ATTENTION




 Lift tarp while inserting
side rail to prevent
tearing!

NOTE

 Make sure the side rail
lines up with the inner
edge of the truck bed
rail. Place the side rail
evenly so that the
distance between the
rear end of the side rail
to the tailgate is the
same on both sides.

2 ASSEMBLING COVER

- PLACE COVER ASSEMBLY ON FRONT TRUCK BED RAIL AGAINST THE CAB.
- LOOSEN THE SCREW IN BULKHEAD ASSEMBLY ON BOTH SIDES, THEN SLIDE IN THE SIDE RAILS.
- REINSTALL AND TIGHTEN SCREWS TO ATTACH SIDE RAILS TO COVER ASSEMBLY.

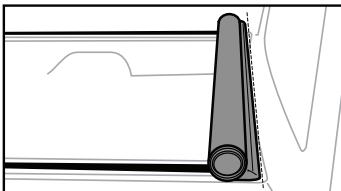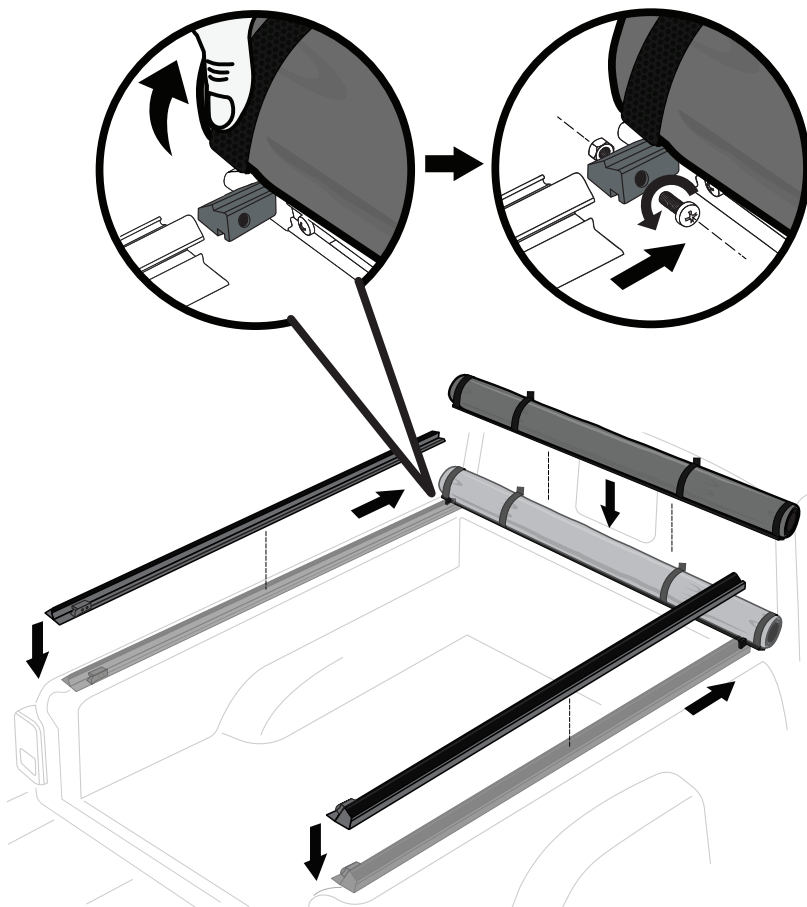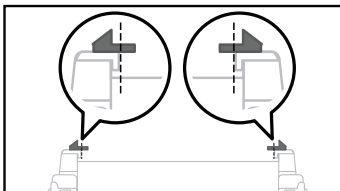
 The base of the front cover assembly must be
aligned flush against the outer edge of the
front bed panel rail.

 The inner edges of the bed cover side rails taper off
towards the center as they run closer to the tailgate.
It is normal for the rails to partially hover over the
side panel railings into the bed space in order for
the rear clamps to fully access the rail channels.

 The cover side rails may not seem parallel with
the bed panel railings but both side rails must
be symmetrically spaced between each other
and their tailgate ends must be aligned for
proper latching.

3 POSITIONING SIDE RAILS & CLAMPS

- i** • FIRST REMOVE CLAMP ASSEMBLIES FROM THE PACKAGE. THEN MATCH LETTERS **A**, **B** AND **C** ETCHED ON CLAMPS WITH CORRESPONDING POSITIONS ETCHED ON SIDE RAILS. PROCEED TO HOOK THE UPPER CLAMP INTO THE INNER CHANNEL OF TONNEAU COVER SIDE RAILS. THEN ADJUST THE POSITION OF THE BOTTOM HOLE ON THE CLAMPS SO THEY LINE UP WITH THE FACTORY SCREW HOLES.

NOTE: FOR MODELS WITH FACTORY UTILITY TRACKS, REFER TO **PAGE 5** FOR SPECIAL INSTRUCTION ON UTILITY TRACK BRACKET INSTALLATION.

 


NOTE



DO NOT
over-tighten
the clamps

ATTENTION




Inside Channel






Out of Channel

ATTENTION!

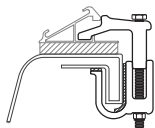


CLAMPS MUST BE ATTACHED SECURELY TO THE **METAL PART** OF THE TRUCK BED RAIL LIPS; SMALL HOLES MIGHT NEED TO BE CUT ON THE BED LINER.

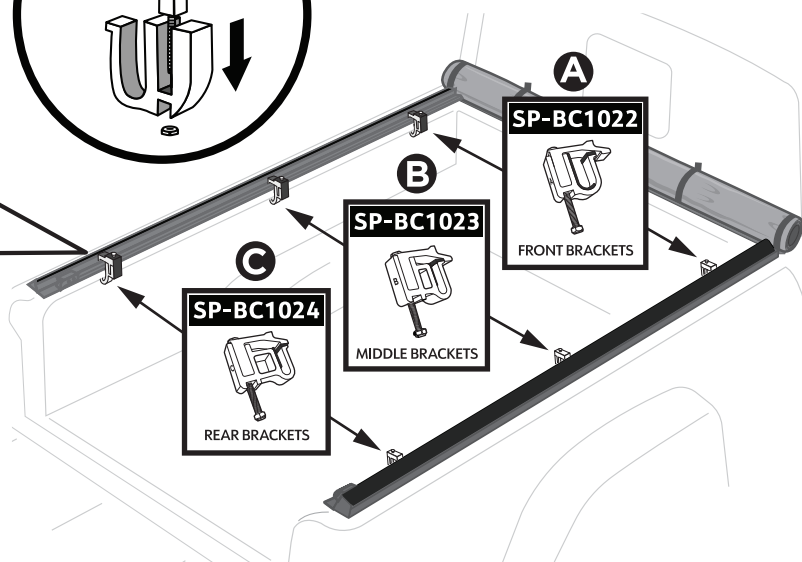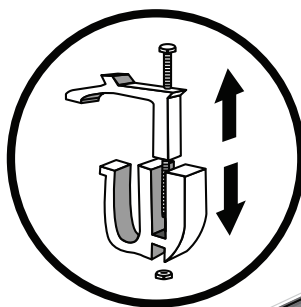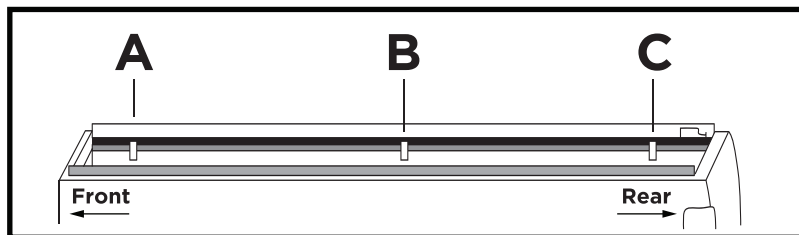

INSTRUCTION FOR ALTERNATIVE BRACKETS

(FOR MODELS WITH UTILITY TRACKS)

MODELS WITH UTILITY TRACKS REQUIRE ALTERNATIVE BRACKETS TO ACCESS THE BED RAILING LIP. FIRST, REMOVE ANY TIE-DOWN ANCHORS INSTALLED ALONG THE TRACKS. THEN, IN THE FOLLOWING ORDER, SLIDE IN **C > B > A** MARKED ALTERNATIVE BRACKETS TO EACH MATCHING POSITION MARKED ON THE COVER SIDE RAILS. SLIDE ANCHORS BACK IN BETWEEN THE BRACKETS IF NEEDED. RETURN TO **STEP 2** TO MOUNT BRACKETS TO THE SIDE RAILS WITH UPPER CLAMP.

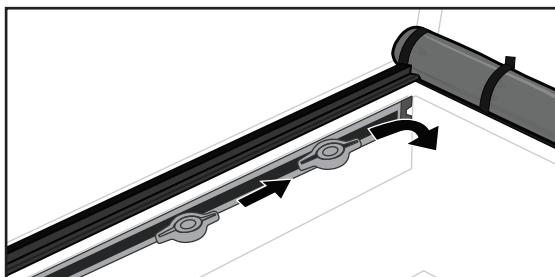

SP-BC1027




SP-BC1026

SP-BC1025

C


B

A

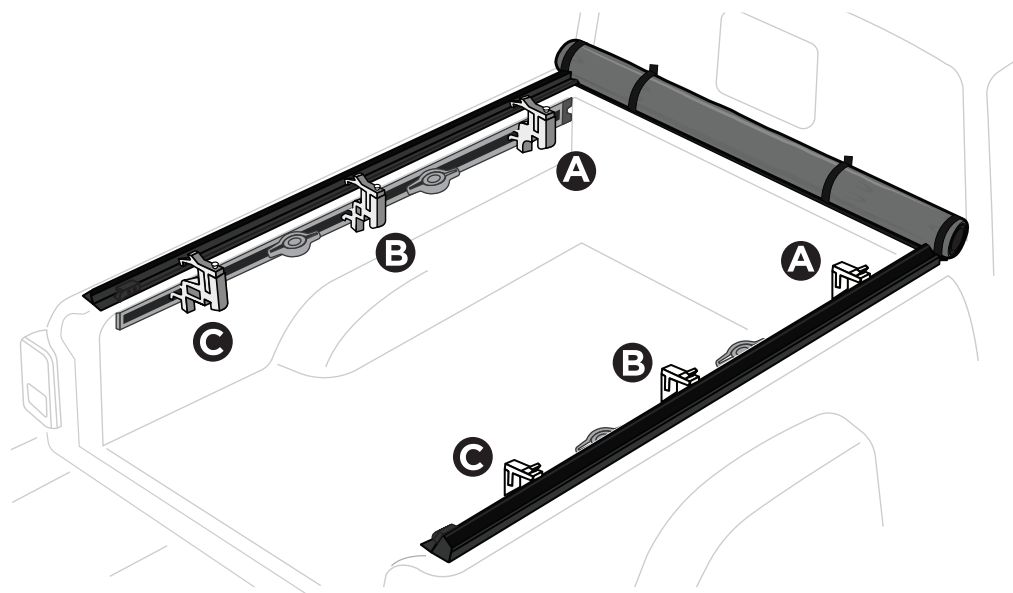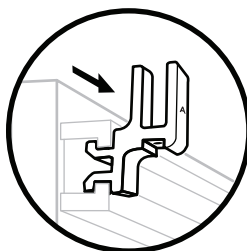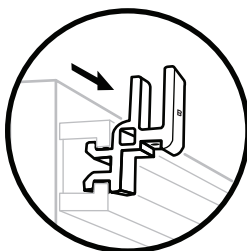



ATTENTION

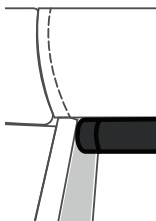

Incorrect positioning of the crossbars can cause water to pool on the cover.


ATTENTION




Horizontal crossbars are arched by design to help drain and prevent water pooling. Make sure the arched side is facing up during installation.



WARNING!

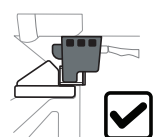

In Channel

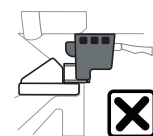


NOT In Channel

NOTE

For latching issue, refer to **PAGE 12** for trouble shooting instruction.

6 ROLLING OUT THE COVER


- UNHOOK THE SAFETY STRAPS.
- MAKE SURE THE ENDS OF THE CROSSBARS ARE RESTING ON THE SIDE RAIL LEDGES AND CROSSBARS ARE ARCHED UPWARD.

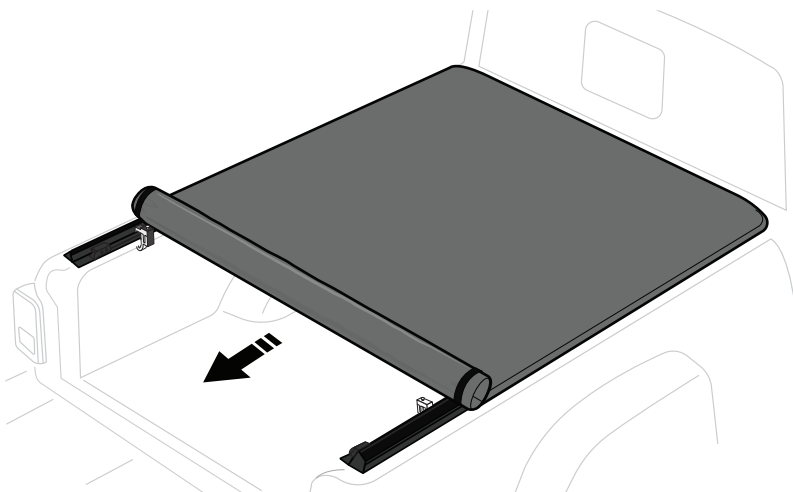


7 LOCKING THE COVER

- PUSH DOWN THE END OF THE COVER WITH SUFFICIENT FORCE TO CLOSE IT.
- THE COVER MUST BE CLOSED FIRST BEFORE YOU SHUT THE TAILGATE.

a

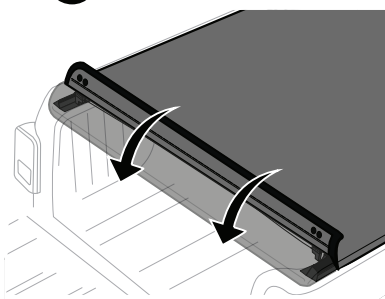

b

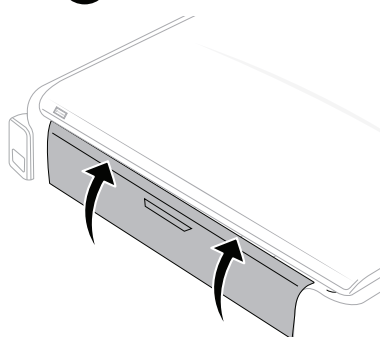

CLICK!!!




NOTE



Velcro Strips must be fully fastened to prevent water from leaking in.

8 STRAIGHTENING OUT THE COVER ⓘ

- STRETCH OUT THE COVER TARP ON BOTH SIDES TO REMOVE ANY WRINKLES AND MAKE SURE BOTH VELCRO STRIPS ARE PROPERLY FASTENED AND SEALED TO PREVENT WATER LEAK.

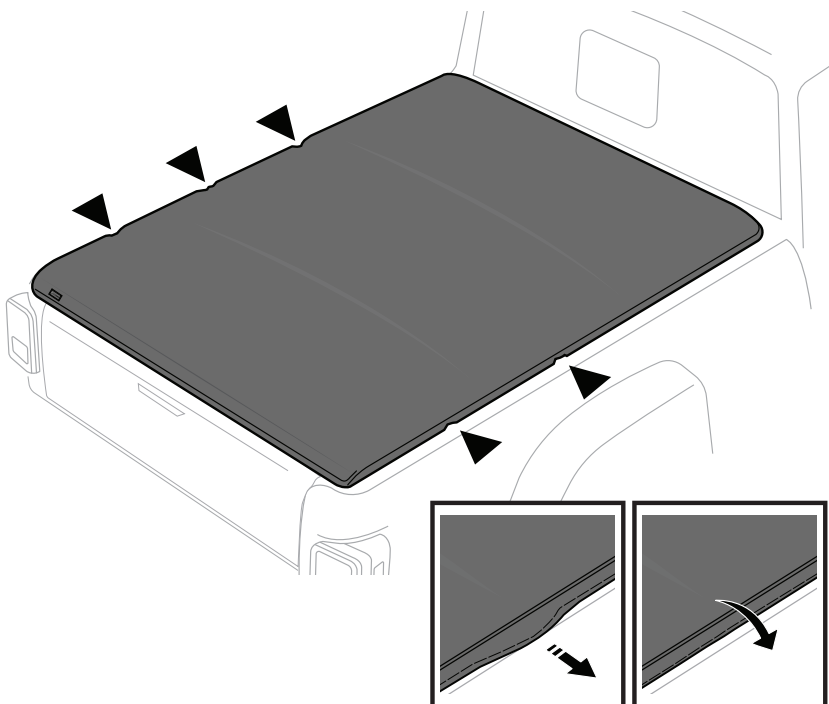


SEAL STRIP




9 CHECKING FOR GAPS ⓘ

- WITH THE TAILGATE OPEN, VISUALLY INSPECT FOR LIGHT LEAKING THROUGH THE GAPS. APPLY ADDITIONAL SEALING STRIPS TO FILL THE GAPS THEN REINSPECT AND REPEAT.

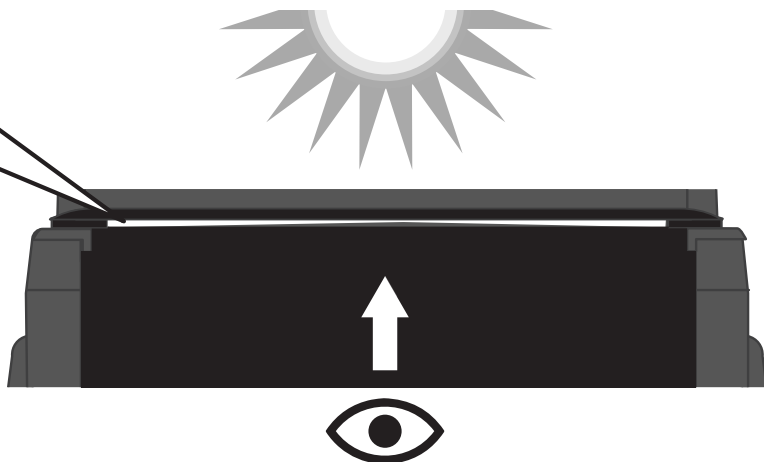

INSTALLATION COMPLETE!!!

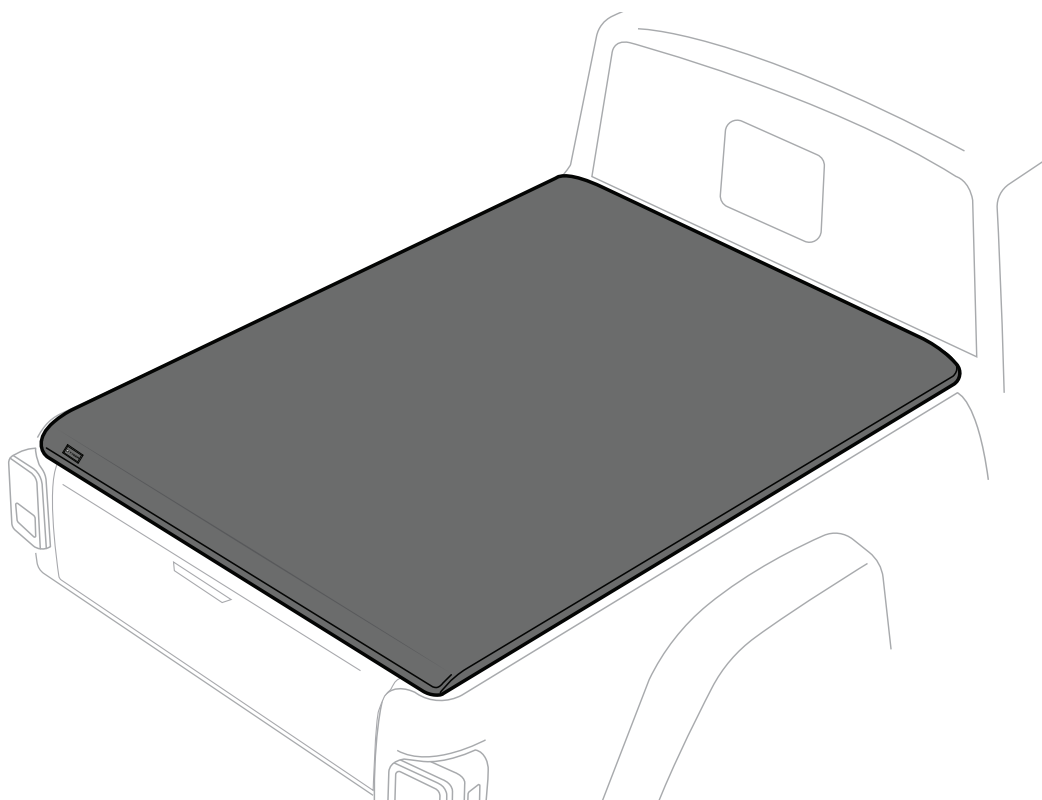


AFTER INSTALLATION

10 RELEASING THE COVER ⓘ



NOTE


Pressing down on the cover edge will improve the release.

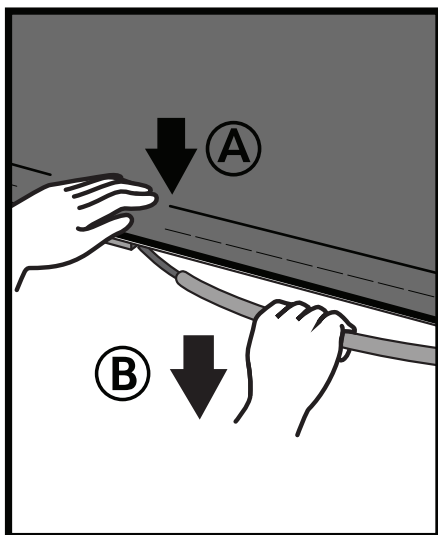

• OPEN THE TAILGATE AND PUSH DOWN AGAINST THE COVER EDGE WITH ONE HAND.



• PULL ON LATCH CABLE TO RELEASE THE COVER WITH THE OTHER HAND.

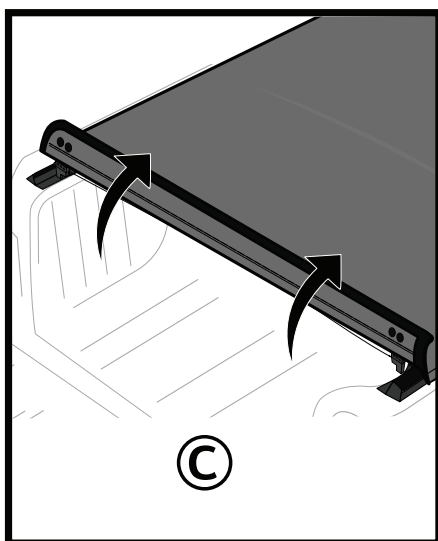

• ROLL UP THE COVER CLOSELY.



ATTENTION

Make sure the cover is free from any debris before rolling it up. Safety straps must be buckled and tightened before driving.

NOTE

Cover may not fully cover all the way to the outer edges of the bed rails due to small variance in bed sizes from different year models.



DO NOT
overload cargo



Secure strap buckles
before driving





Remove snow before
rolling up cover




Use water and
soap to clean.
Avoid abrasive
chemical cleaners

11 ROLLING UP THE COVER

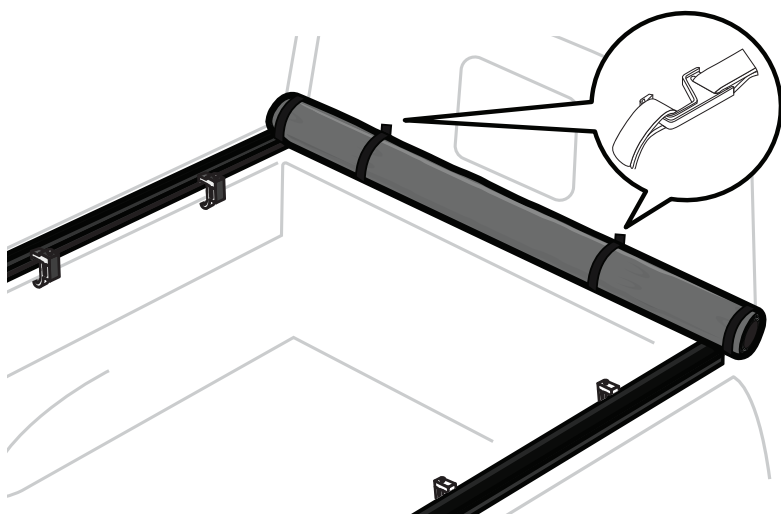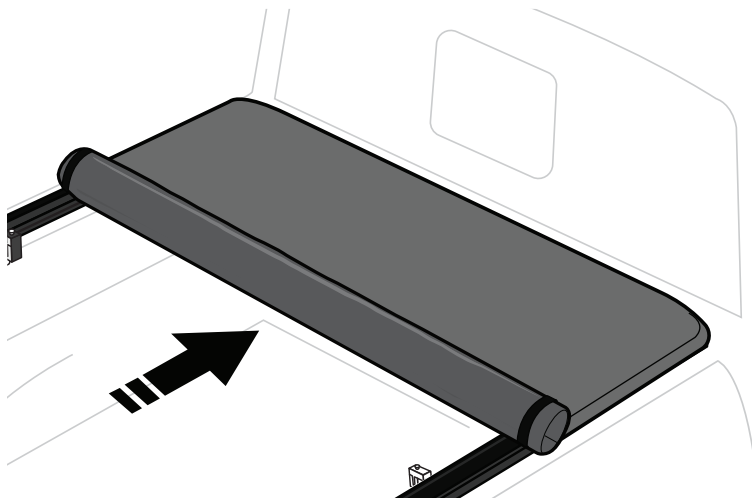

12 SELF-MAINTENANCE THE TENSION CONTROL SYSTEM ⓘ

NOTE: TENSION PLATE ADJUSTMENT IS NOT REQUIRED FOR BRAND-NEW TONNEAU COVERS. IF THE TENSION BETWEEN THE BULKHEAD & TENSION PLATE HAS BECOME LOOSE OR TIGHT OVER TIME, YOU CAN ADJUST THE TENSION PLATE POSITION TO IMPROVE THE TENSION CONTROL.


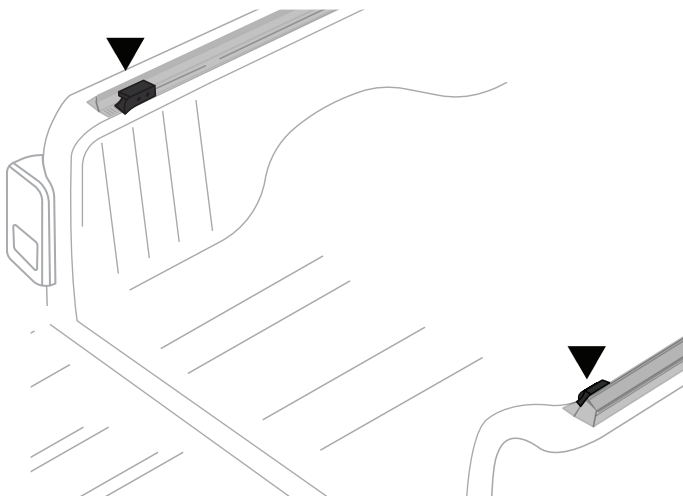


NOTE

Only move one increment at a time. Each increment gives you 1/8" of tension adjustment. Apply the same adjustment to both sides' tension plates.

YOU NEED

 Phillips-Head
Screwdriver

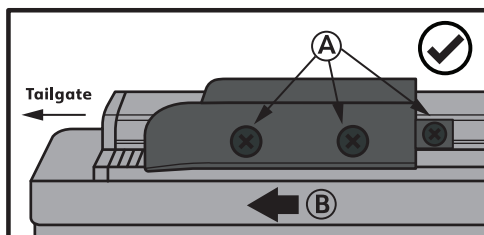


A

- LOOSEN THE PHILLIPS SCREWS ON THE TENSION PLATE TO ALLOW THE TENSION PLATE TO SLIDE BACK AND FORTH.

B

- TO TIGHTEN THE TENSION (LATCH IS TOO LOOSE), MOVE THE TENSION PLATE TOWARDS THE TAILGATE.

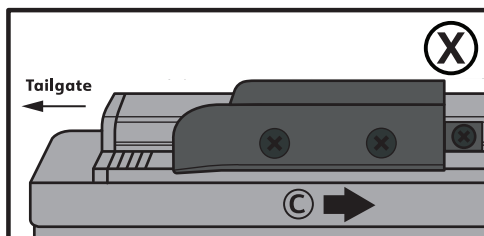


C




- **DO NOT** ADJUST THE TENSION PLATE BEYOND THE LAST INCREMENT LINE.

13 COVER DOESN'T STAY LATCHED?


- MAKE SURE THE LOCKING CLIP ON BOTH SIDES ARE COMPLETELY INSERTED INTO THE CHANNEL ON THE SIDE RAILS TO AVOID END OF THE COVER BECOMING UNLATCHED.

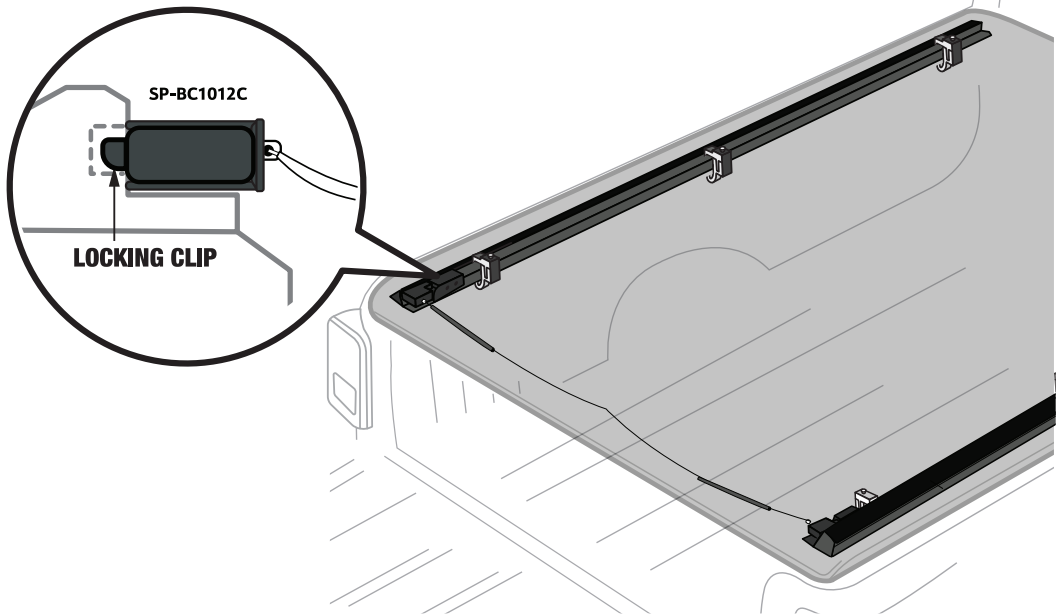

- ## 14
- IF COVER DOESN'T STAY CLOSED AND YOU FIND THE LOCKING CLIP IS NOT FULLY INSERTED.

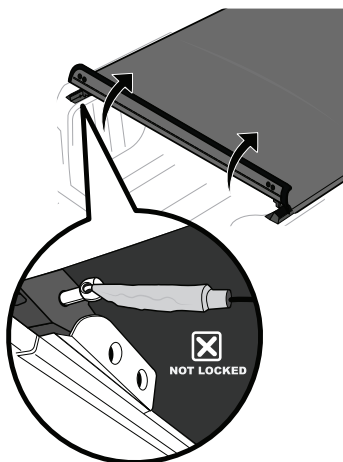

- ## 15
- IF NEEDED, FOLLOW INSTRUCTIONS IN **PAGE 11** TO ADJUST THE TENSION PLATE.

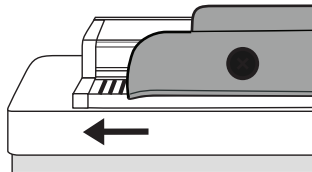

- ## 16
- MAKE SURE THE LOCKING CLIP ON BOTH SIDES ARE INSERTED INTO THE CHANNEL ON THE SIDE RAILS.

