TYGER FURY™

TG-BP6T80568

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTI-FY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

| Fastener Size | Class 8.8 Torque (ft-lbs) | Class 10.9 Torque (ft-lbs) |
|---------------|---------------------------|----------------------------|
| 6mm | 6-7 | 6-7 |
| 8mm | 15-16 | 22-23 |
| 10mm | 31-32 | 44-45 |
| 12mm | 54-55 | 78-79 |
| 14mm | 87-88 | 125-126 |

Parts List

x1 Front Bumper

Light Hoop

Driver/Left Mounting Bracket

Passenger/Right Mounting Bracket

Driver/Left Support Bracket

Passenger/Right Support Bracket

L-Brackets

License Plate Bracket

License Plate Plugs

10-1.5mm x 35mm Hex Bolts

10mm x 34mm x 3mm Flat Washers

10mm Lock Washers

10mm Hex Nuts

8mm-1.25mm x 25mm Button Head Bolts

8-1.25mm x 16mm Hex Bolts

8mm x 28mm x 3mm Large Flat Washers

8mm x 24mm x 2mm Small Flat Washers

8mm Lock Washers

8mm Hex Nuts


6-1.0mm x 20mm Button Head Bolts

6mm x 18mm x 1.6mm Flat Washers

6mm Nylon Lock Nuts

5mm Hex Wrench

4mm Hex Wrench

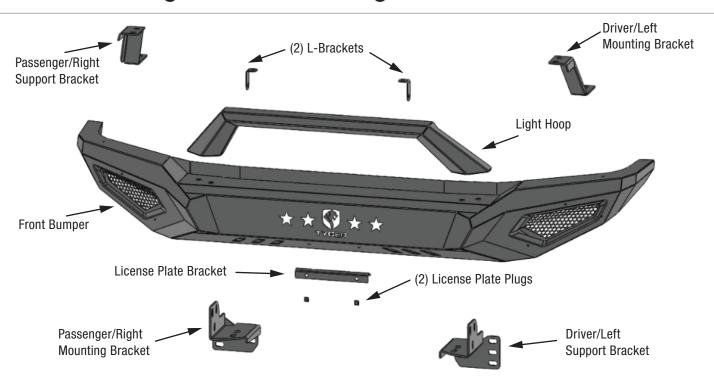

Customer Support: www.TygerAuto.com/Contact

V200924

PROCEDURE:


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. BUMPER IS HEAVY, ASSISTANCE IS HIGHLY RECOMMENDED TO AVOID POSSIBLE INJURY OR DAMAGE TO THE VEHICLE.

INSTALLATION IS NOT COMPATIBLE WITH LASER CONTROLLED CRUISE CONTROL SYSTEMS.


STEP1

Move to the Passenger/Right wheel opening. Remove the hardware attaching the plastic cover to the back and bottom of the outer end of the front bumper, (Figs 1 & 2). Next, remove the plastic clip attaching the cover to the side of the frame and remove the cover, (Fig 3).

WARNING! Do not crawl under bumper unless the bumper is properly supported on blocks or stands or the bumper may fall.

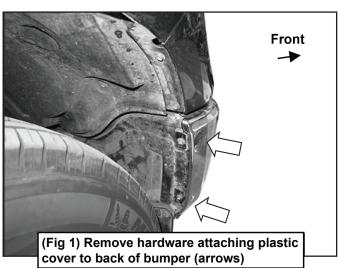



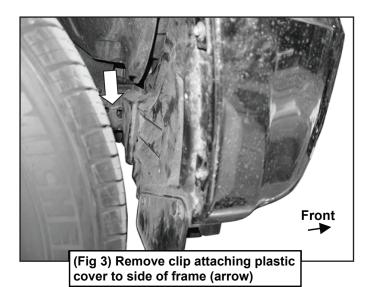


STEP 2

Repeat **STEP 1** to remove the plastic covers from the Driver/Left side of the vehicle.

STEP 3

On models with factory fog lights and/or bumper mounted sensors, unplug the harness leading to the front bumper, (Fig 4).


NOTE: Fog lights and sensors will not be reinstalled.

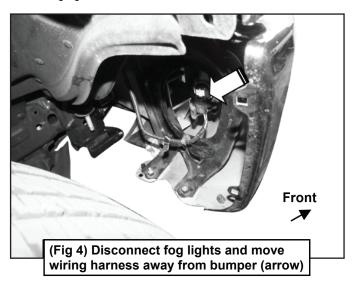


Customer Support: www.TygerAuto.com/Contact

STEP 4

Remove the license plate. Remove hardware attaching the plastic cover on bottom of bumper, (Fig 5). Next, temporarily remove both tow hooks, (if equipped).

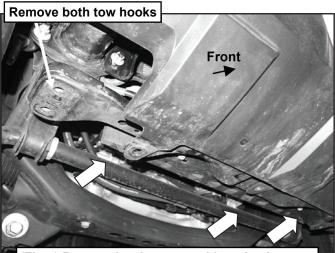


(Fig 5) Remove hardware attaching plastic cover on bottom of bumper to cross member (arrows)

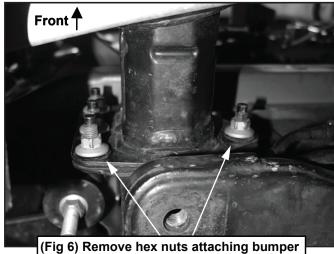

(Fig 6) Remove hex nuts attaching bumper brackets to end of frame. Passenger side bumper bracket pictured from below

STEP 6

With assistance, remove the bumper and move to a flat stable surface, (Fig 7).

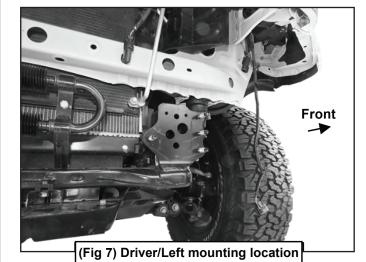

STEP 5

Place blocks or jack stands under the front bumper to support it during mounting bolt removal. Once the bumper has been supported, remove the factory hex nuts attaching the inner bumper bracket to the end of the frame, (Fig 6).

WARNING! Assistance is required to hold the bumper in place during hardware removal to prevent the bumper from falling.

STEP 7


Select Driver/Left Mounting Bracket. Slide the Bracket onto the (4) factory studs on the mounting plate at the end of the frame. Attach the Mounting Bracket with (4) factory hex nuts and (4) 8mm x 28mm x 3mm Large Flat Washers, (Figs 8 & 9). DO NOT tighten hardware at this time.

(4) 8mm x 28mm Large Flat Washers Front (Fig 8) Attach the Driver/Left Mounting Bracket. (Reuse the factory hex nuts)




STEP 8

Next, select the Driver/Left Support Bracket. Attach the Support Bracket to the bottom of the Mounting Bracket with (2) 10mm Hex Bolts, (4) 10mm Flat Washers, (2) 10mm Lock Washers and (2) 10mm Hex Nuts, (Figs 10 & 11). Leave hardware loose at this time. Reuse the factory tow hook hardware to attach the tow hook to the bottom of the Support Bracket and frame.

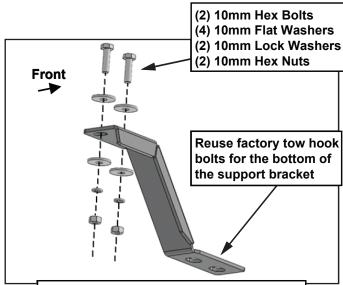

(Fig 10) Attach Driver/Left Support Bracket to the Mounting Bracket and frame

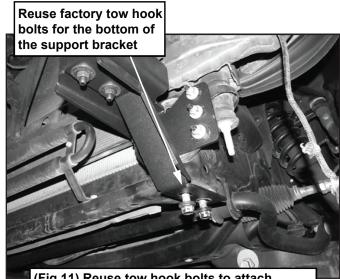

(Fig 11) Reuse tow hook bolts to attach Support Bracket and tow hook to bottom of frame (pictured without tow hook, optional)


STEP 9

Repeat **STEPS 7 & 8** to attach the Passenger/Right Mounting and Support Brackets and reinstall tow hook.

STEP 10

Unwrap the Bumper. Remove the plugs in the top of the bumper. Select the Light Hoop. Attach the Hoop to the top of the Bumper with (4) 8mm x 25mm Button Head Bolts, (8) 8mm x 24mm Small Flat Washers, (4) 8mm Lock Washers and (4) 8mm Hex Nuts, (Fig 12). (Installation optional)

- (2) 8mm Button Head Bolts
- (4) 8mm Small Flat Washers
- (2) 8mm Lock Washers
- (2) 8mm Hex Nuts

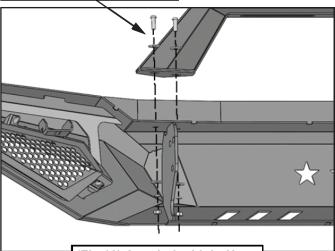

(Fig 12) Attach the Light Hoop to the top of the bumper

STEP II


Determine if lights, (not included), will be installed at this time.

IMPORTANT: It may be easier to install lights before attaching the Bumper to the vehicle


Hoop mounted bar style light, (light not included).

a. Select the (1) L-Bracket. Attach the Bracket to the bottom of the Hoop with (1) 8mm x 25mm Button Head Bolt, (2) 8mm Flat Washers, (1) 8mm Lock Washer and (1) 8mm Hex Nut, (Fig 13). DO NOT tighten hardware at this time.

8mm Button Head Bolt (2) 8mm Small Flat Washers 8mm Lock Washer 8mm Hex Nut

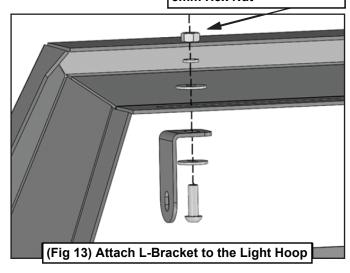

- **b.** Repeat **STEP 11a** to attach (1) L-Bracket to the Passenger/Right side of the Hoop.
- **c.** Select light, (light not included). Attach light to L- Brackets with (2) 8mm x 16mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm x 24mm Small Flat Washers. Adjust the width of the Brackets to the light and fully tighten bracket hardware, (Fig 14).

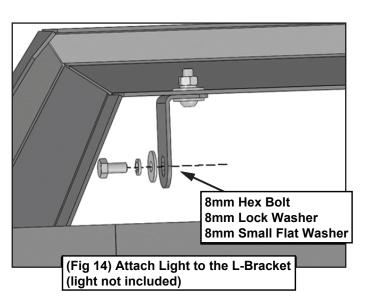


Customer Support: www.TygerAuto.com/Contact



Outer light installation (light not included).

- a. Remove mesh panel in outer light location.
- **b.** Attach lights (not included) to mounting tabs on back of the Bumper, (Fig 15).

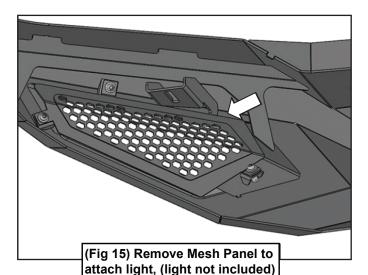

STEP 12


12. With assistance, position the Bumper up to the outside of the Mounting Brackets. Temporarily support the weight of the Bumper.

WARNING: To avoid possible injury or damage to the vehicle, do not proceed until the Bumper is fully and safely supported.


STEP 13

Attach the Bumper to the outside of the Mounting Brackets with (6) 10mm Hex Bolts, (12) 10mm Flat Washers, (6) 10mm Lock Washers and (6) 10mm Hex Nuts, (Figs 16 & 17). DO NOT fully tighten hardware at this time.

- (3) 10mm Hex Bolts
- (6) 10mm Flat Washers
- (3) 10mm Lock Washers
- (3) 10mm Hex Nuts

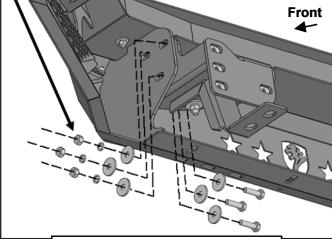


(Fig 16) Attach Bumper to outside of the Driver/Left Mounting Bracket

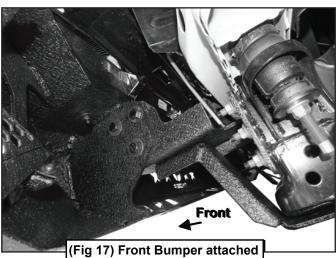


to Driver/Left Mounting Bracket

STEP 14

Attach the License Plate Bracket to the Bumper with (2) 6mm x 20mm Button Head Screws, (4) 6mm Flat Washers and (2) 6mm Nylon Lock Nuts. Insert (2) Plastic Plugs into the square holes in the Bracket. Reuse the factory screws to attach the license plate to the plastic plugs, (Figs 18 & 19).

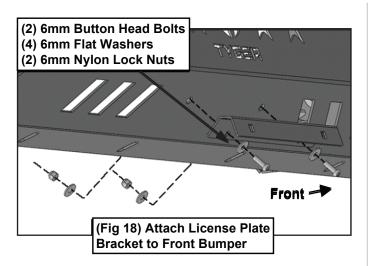

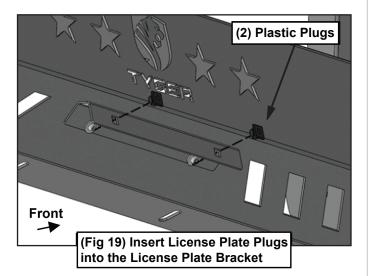



Level and adjust the Bumper and fully tighten all hardware.



Do periodic inspections to the installation to make sure that all hardware is secure and tight.