



HITCH LOCK

FOR CLASS III IV V TRAILER HITCHES

www.tygerauto.com

STEP 1

 
•Slide to open the key cover.



STEP 3

Optional: To help reduce rattling, apply the provided rubber o-rings as needed to fill any gaps between the receiver and the pin.






STEP 2

- •Insert the key the turn clockwise.
- •Pull out the hitch pin.

ATTENTION:

 Key CANNOT be pulled out when it is in the unlocked position.



IMPORTANT

Key are unique and CANNOT be replaced. Please keep the spare key in a safe place. In an emergency, please contact your local locksmith to access the lock.

