



TAIL LIGHT GUARD

TG-TG7T86668

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

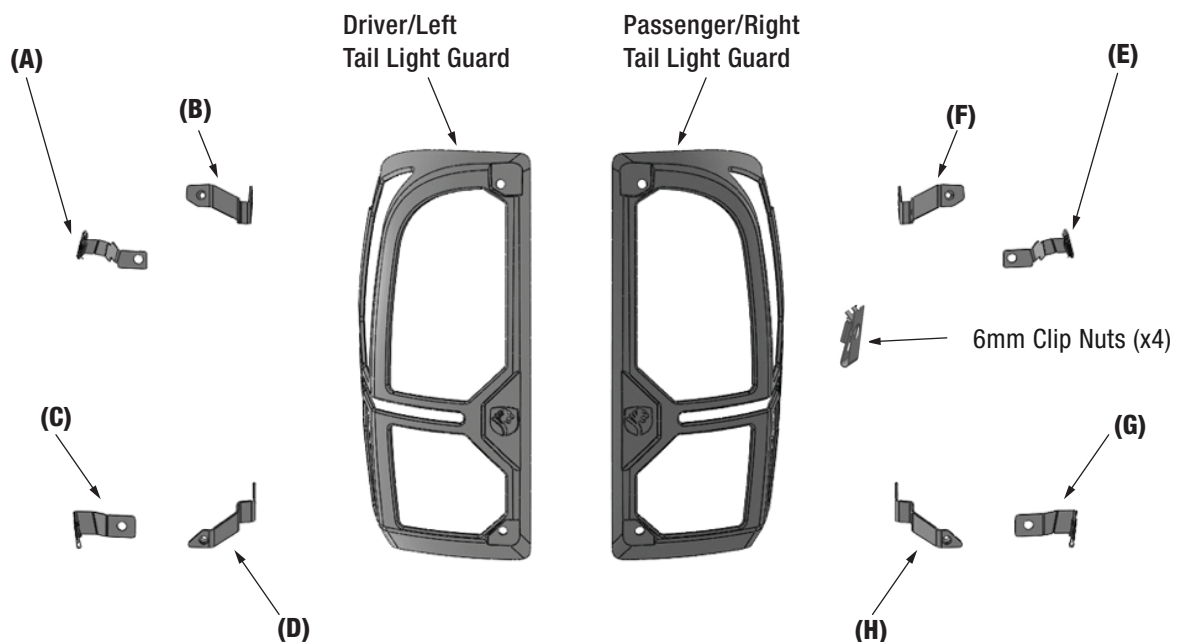
TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1 Driver/Left Tail Light Guard
- x1 Passenger/Right Tail Light Guard
- x1 Driver/Left Upper Light Bracket (A)
- x1 Driver/Left Upper Bed Bracket (B)
- x1 Driver/Left Lower Light Bracket (C)
- x1 Driver/Left Lower Bed Bracket (D)
- x1 Passenger/Right Upper Light Bracket (E)
- x1 Passenger/Right Upper Bed Bracket (F)

- x1 Passenger/Right Lower Light Bracket (G)
- x1 Passenger/Right Lower Bed Bracket (H)
- x4 Foam Protectors
- x8 6mm x 12mm Button Head Bolts
- x8 6mm Lock Washers
- x8 6mm x 12mm OD x 1.6mm Flat Washers
- x4 6mm Clip Nuts
- x1 Allen Key S4

Parts List



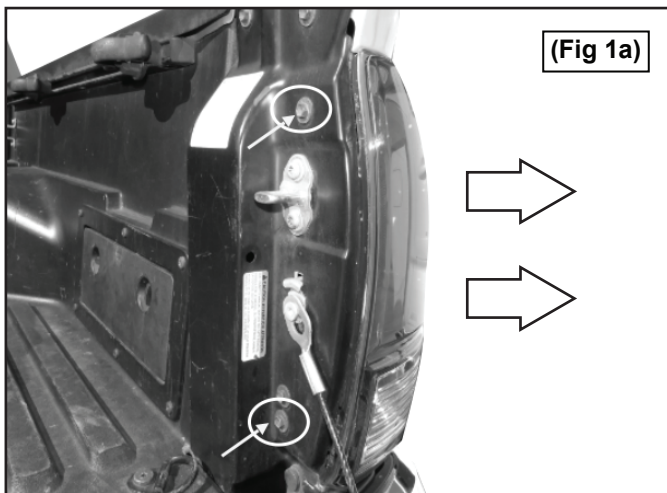
PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

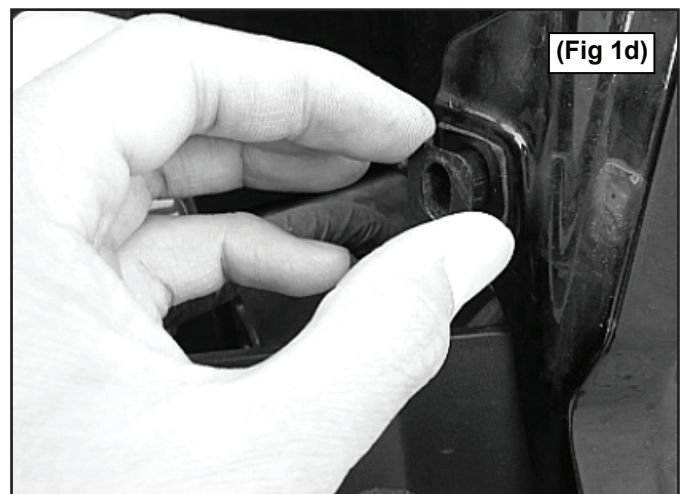
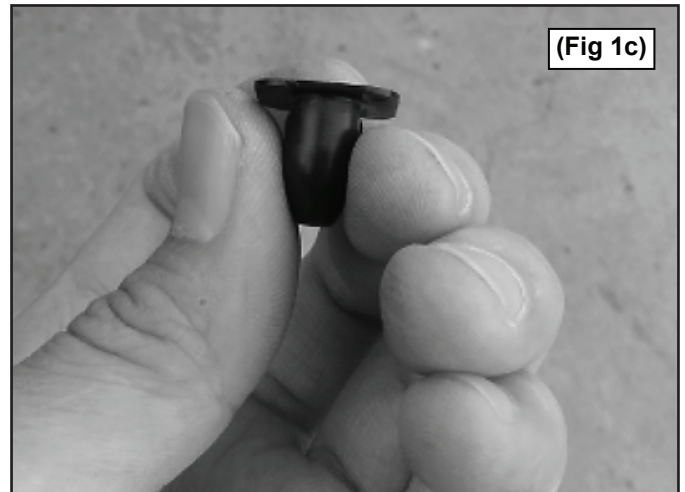
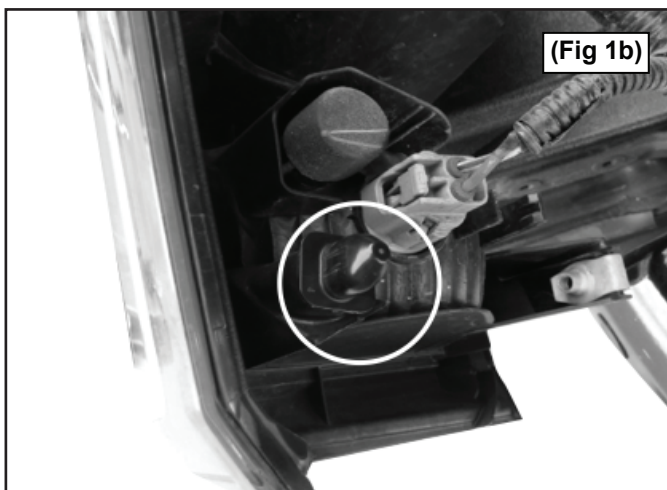
STEP 1

Start the on the Passenger/Right side of the vehicle. Lower the tailgate, and remove the two hex head bolts holding the taillight in place. Retain this hardware as it will be reinstalled later. Gently pull the taillight out of the vehicle (Fig 1a).

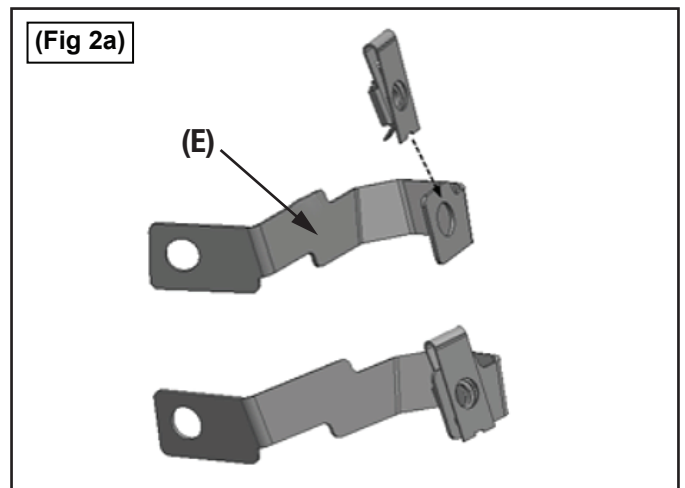
Passenger/Right Side Installation Pictured

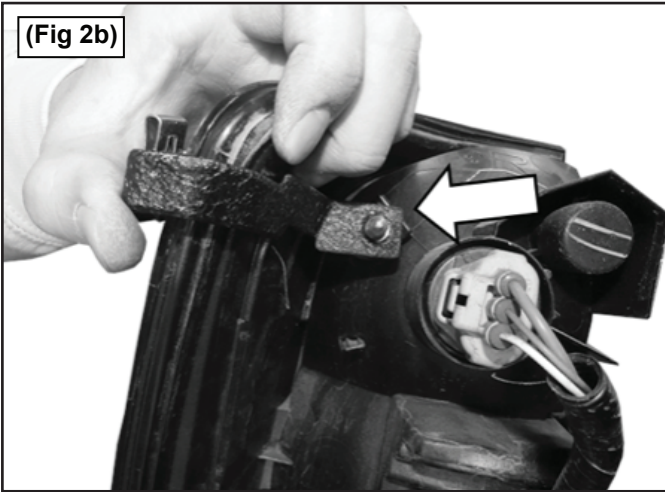


PRO TIP: Sometimes the factory plastic retainer gets stuck on the lower taillight stud rather than remaining attached to the vehicle. Simply remove the plastic retainer and reinstall onto the vehicle (Fig 1b-1d)


STEP 2

Select the Passenger/Right Upper Light Bracket **(E)**. Attach (1) clip nut with upper light bracket (Fig 2a) and then slide the Bracket onto the upper metal pin (Fig 2b).

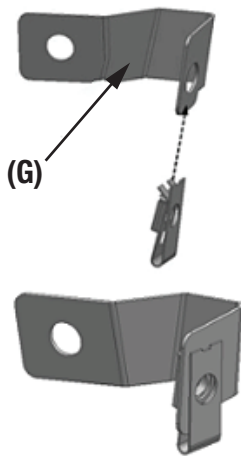
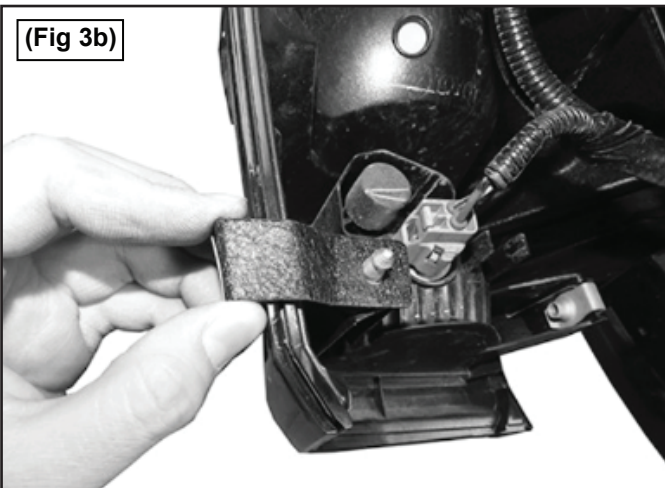


(Fig 2b)


STEP 3

Select the Passenger/Right Lower Light Bracket **(G)**. Attach (1) clip nut with lower bracket (Fig 3a) and slide the Bracket onto the lower metal pin (Fig 3b).

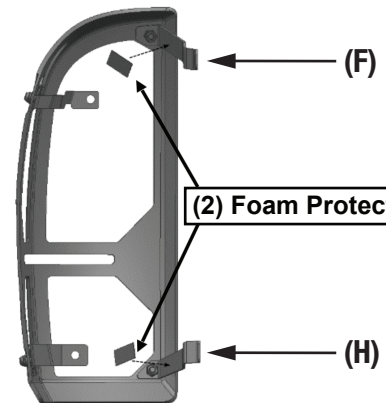
Slide the taillight back into the vehicle cavity making sure the taillight metal pins are aligned with the plastic inserts

(Fig 3a)

(Fig 3b)


STEP 4

Preinstall the Protective Foam on the Passenger/Right Upper **(F)** and Lower **(H)** Bed Brackets (Fig 4)

Passenger/Right Side Installation Pictured

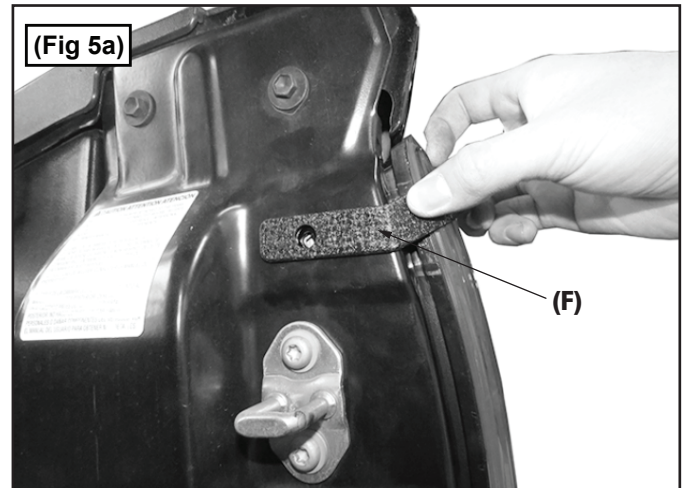
(Fig 4)


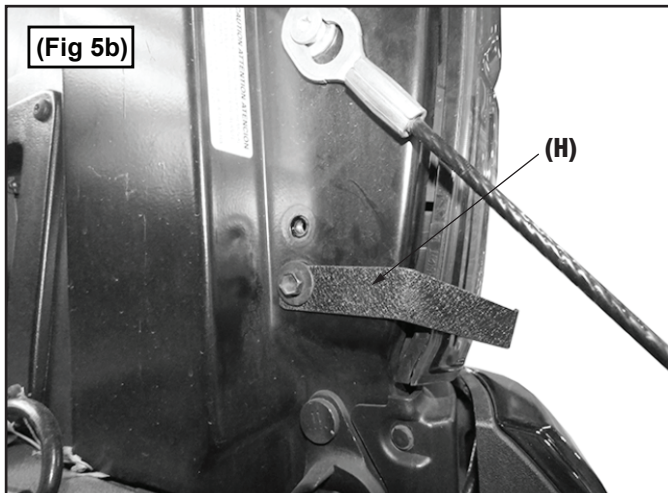
(Fig 6) Preinstall those foams on the upper (F) and lower (H) bed brackets

STEP 5

Reuse the factory hardware to attach the Passenger/Right Upper **(F)** and Lower Bed Brackets **(H)** to the bed and tail light (Fig 5a-b). **DO NOT tighten hardware.**

Passenger/Right Side Installation Pictured

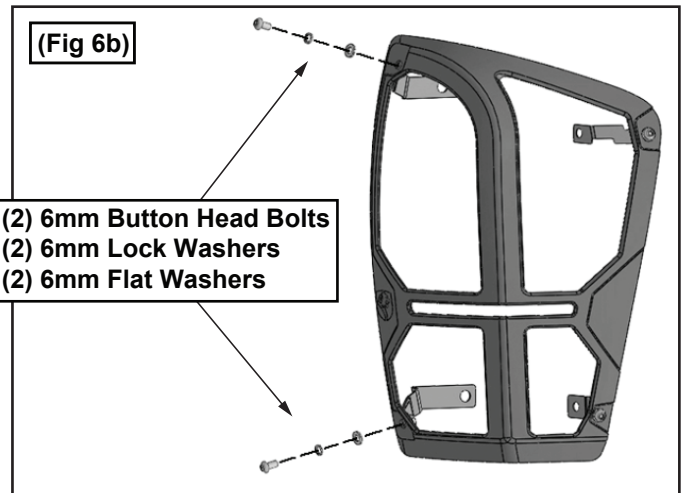
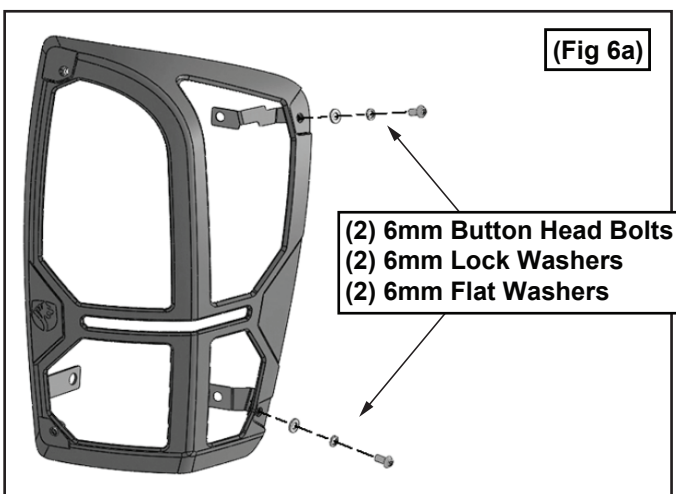
(Fig 5a)




STEP 6

Attach the Passenger/Right Tail Light Guard to brackets **(E, F, G & H)** with the supplied 6mm hardware: (4) 6mm Button Head Bolts, (4) 6mm Lock Washers and (4) 6mm Flat Washers (Fig 6a-6b, vehicle not shown for clarity). Hand tighten only.

Passenger/Right Side Installation Pictured



STEP 7

Level and adjust the Tail Light Guard, then tighten all hardware.

STEP 8

Repeat **STEPS 1-7** to attach the Driver/Left Tail Light Guard.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.