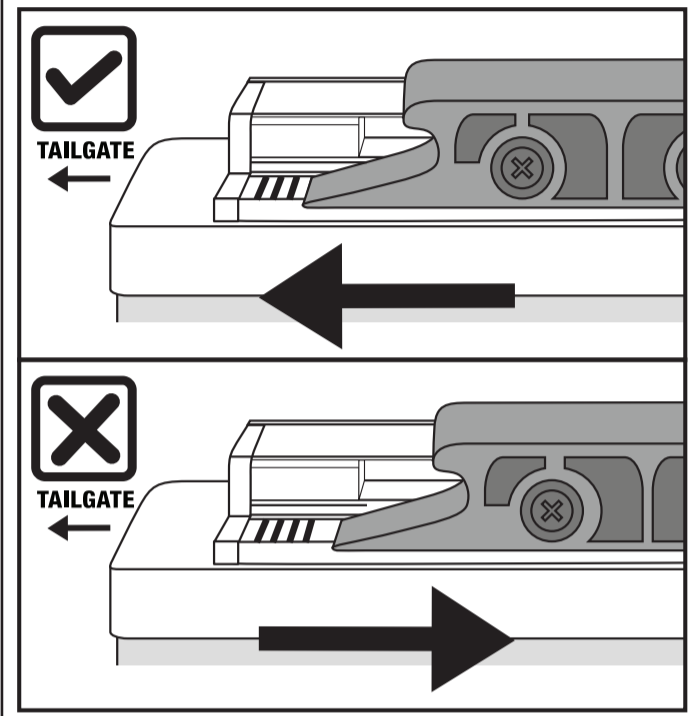
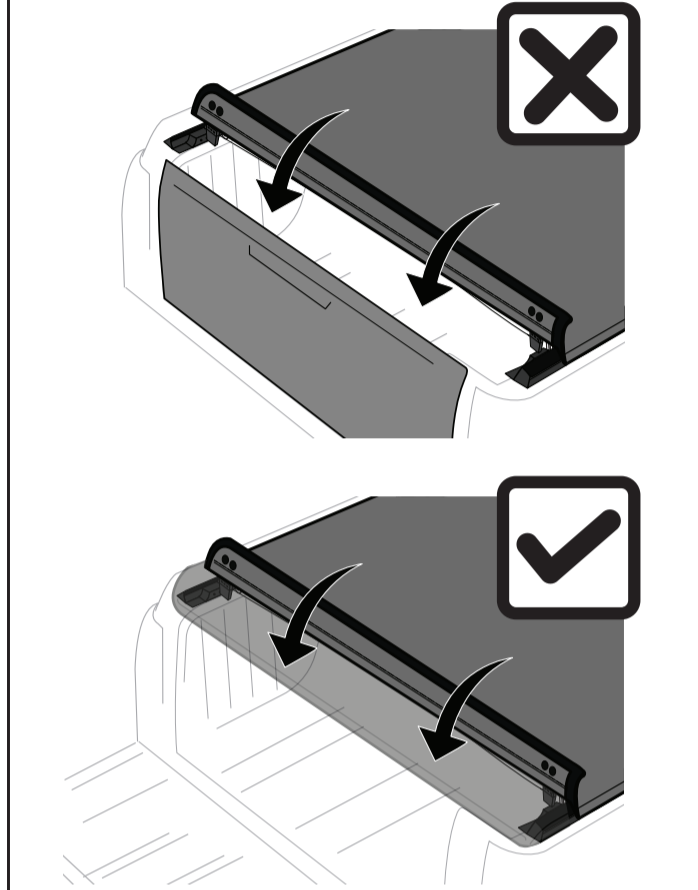
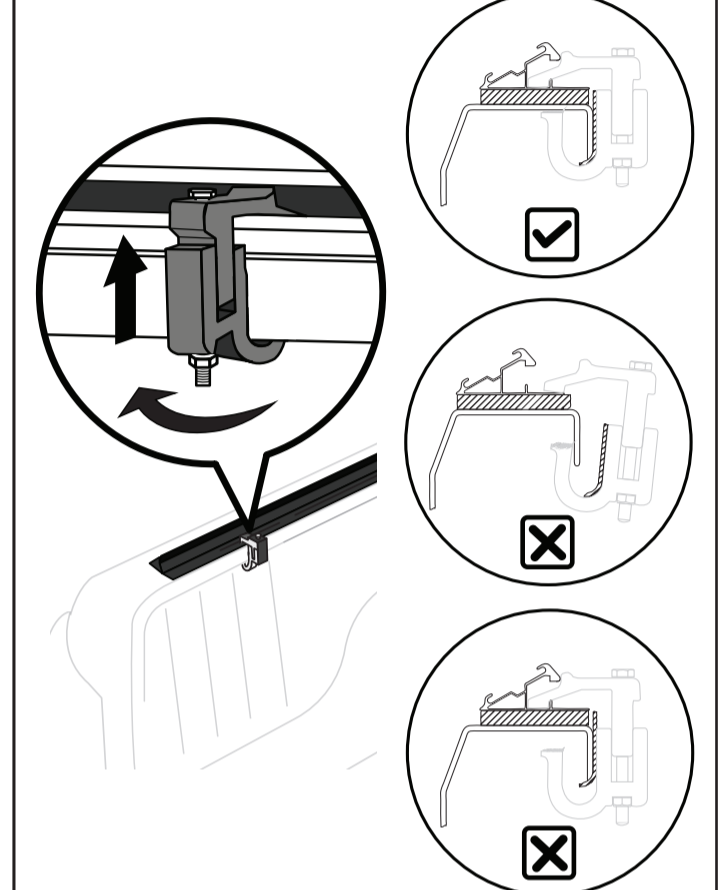
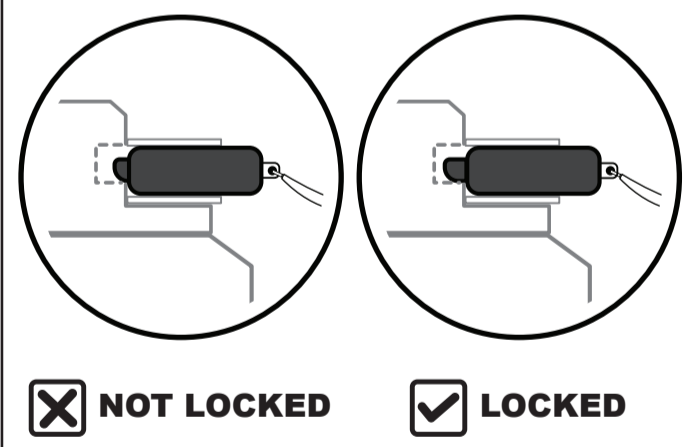
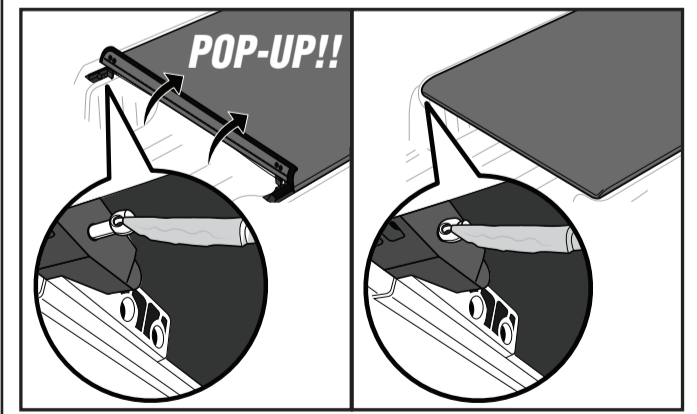
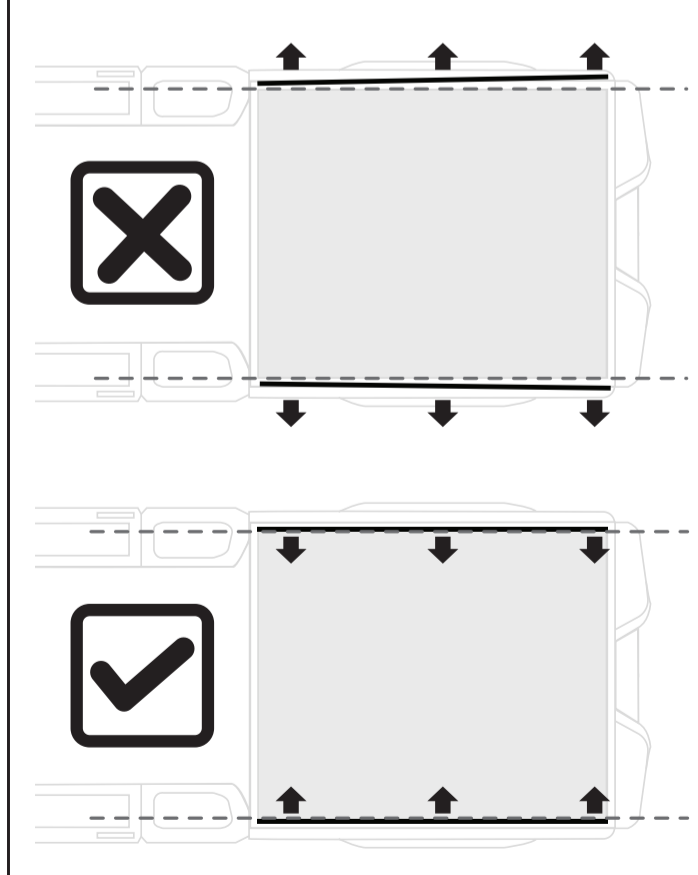
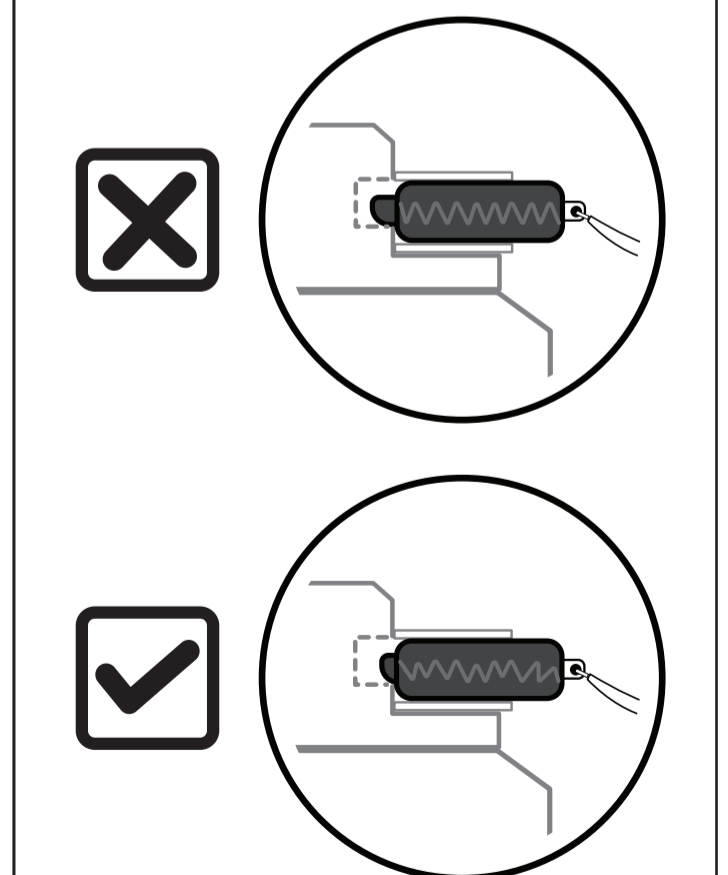


# TYGER T1 BED COVER POP-UP TROUBLESHOOTING

Please follow this troubleshooting guide if you come across any issues with the latching mechanism such as  
**a) latch won't fasten b) loose grip c) latch popping out while vehicle is idle or traveling.**

<p><b>Cause:</b> Gap between latch head and tension plate is too wide.</p>  <p><b>NOTE:</b> DO NOT ADJUST TENSION PLATE BEYOND THE LAST INCREMENT LINE.</p> <p><b>Solution:</b> Adjust tension plate incrementally for tighter grip.</p>	<p><b>Cause:</b> Tailgate is closed before fastening the cover.</p>  <p><b>Solution:</b> Leave tailgate open, close the cover, then close the tailgate.</p>	<p><b>Cause:</b> Loose side clamps cause shifting of cover from wind drag resulting in loosened latch.</p>  <p><b>Solution:</b> Readjust the side clamps for tightest fit.</p>
<p><b>Cause:</b> Latch pops out when it is not properly locked.</p>  <p><b>NOT LOCKED</b>      <b>LOCKED</b></p>  <p><b>Solution:</b> Press down on cover and to fully lock latch. (should be a clicking sound)</p>	<p><b>Cause:</b> Shifting of side rail over time may offset latch positions.</p>  <p><b>Solution:</b> Realign the side rails to improve latch grip.</p>	<p><b>Cause:</b> In rare cases, fatigue in spring may occur over time reducing latch grip.</p>  <p><b>Solution:</b> Please contact our customer support at <b>1-866-340-3038</b> to acquire replacement spring part.</p>