




TYGER®

T3 | SOFT TRI-FOLD TONNEAU COVER

For HONDA RIDGELINE

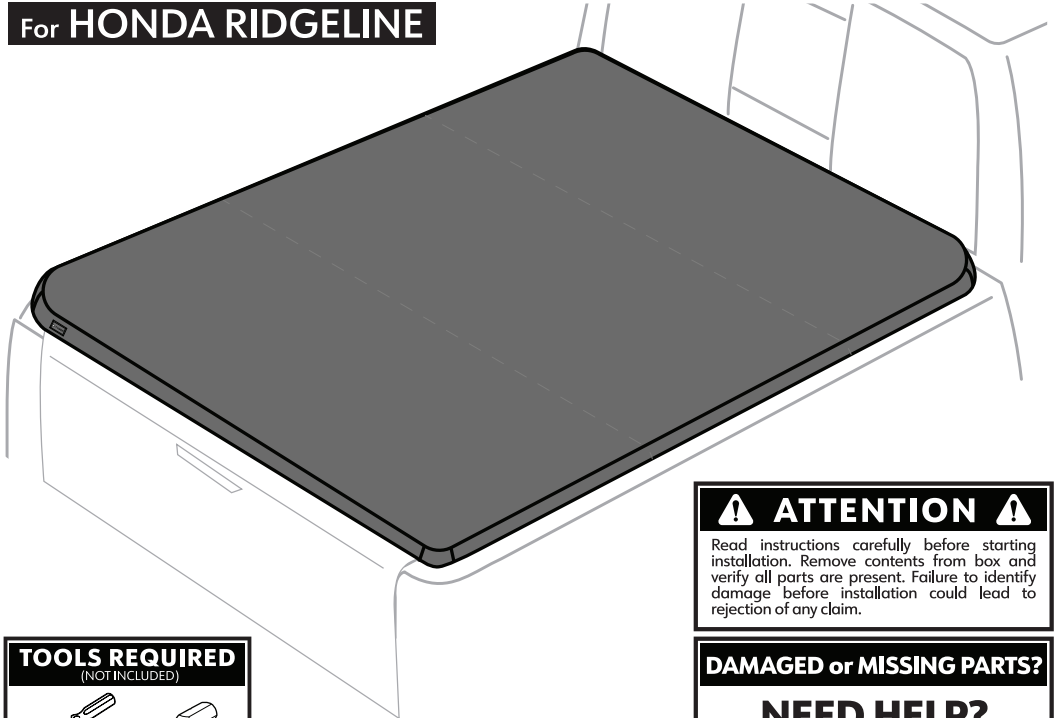

TOOLS REQUIRED (NOT INCLUDED)



Phillips
Screwdriver



T30 Bit

⚠ ATTENTION ⚠

Read instructions carefully before starting installation. Remove contents from box and verify all parts are present. Failure to identify damage before installation could lead to rejection of any claim.

DAMAGED or MISSING PARTS?


NEED HELP?

contact us: **1-866-340-3038**

PARTS LIST

(ONLY MARKED ITEMS ARE INCLUDED)

☒ Bed Cover

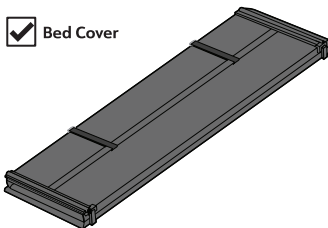

☒ **SP-BC3043**
Driver Side
Front Bracket

☒ **SP-BC3044**
Passenger Side
Front Bracket

☒ **SP-BC3042**
Driver/Passenger Sides
Rear Brackets

☒ **SP-BC3041**
M6 Screw + Washer



☒ **SP-BC0005**
Seal Strip
200x 3.0 X 0.6 cm



☒ **SP-BC0012**
Bulkhead Side Seal Strip
8.0 X 1.0 X 0.6 cm










☒ **SP-BC0013**
Bulkhead Side Seal Foam
5.0 X 4.5 X 0.6 cm






SP-BC0005




1 APPLYING SEAL STRIPS ⓘ

IF THE TRUCK'S FRONT BED RAIL IS LOWER THAN THE SIDES, USE THE PROVIDED WEATHER SEAL STRIPS. GAPS ON THE FRONT BED AND TAILGATE CAN CAUSE NOISE AND FLAPPING ISSUES WHILE DRIVING ALONG WITH WATER LEAKAGE.

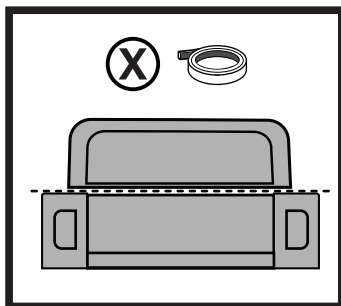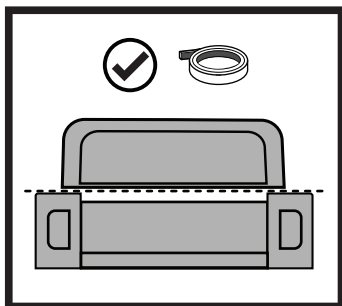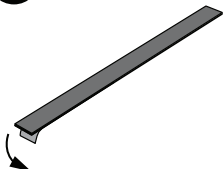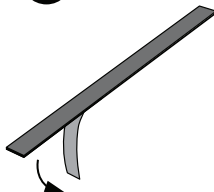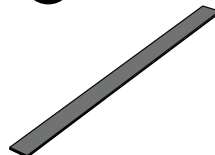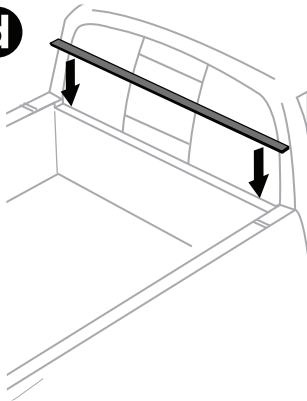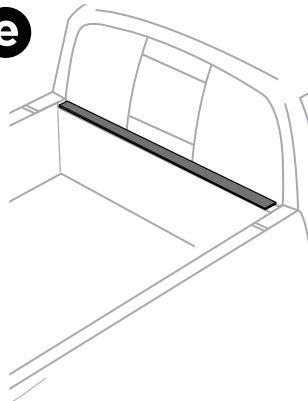
a

b

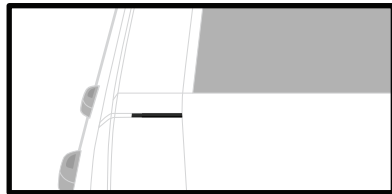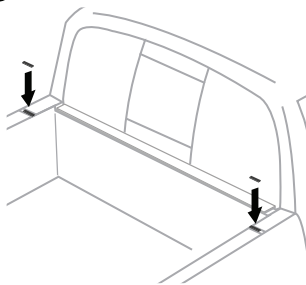c

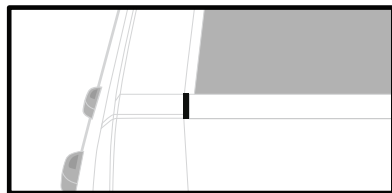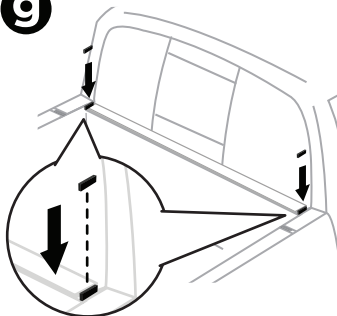d

e


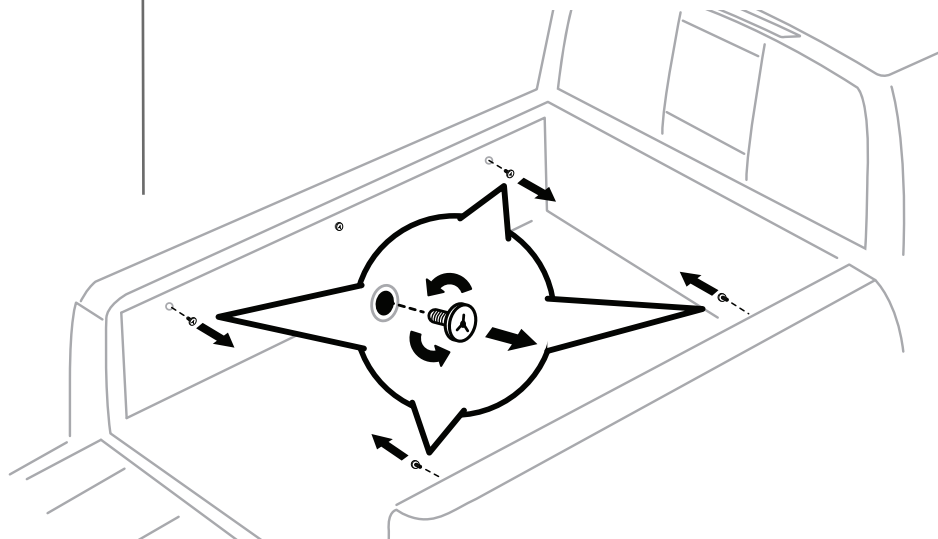
SP-BC0012

f

SP-BC0013

g


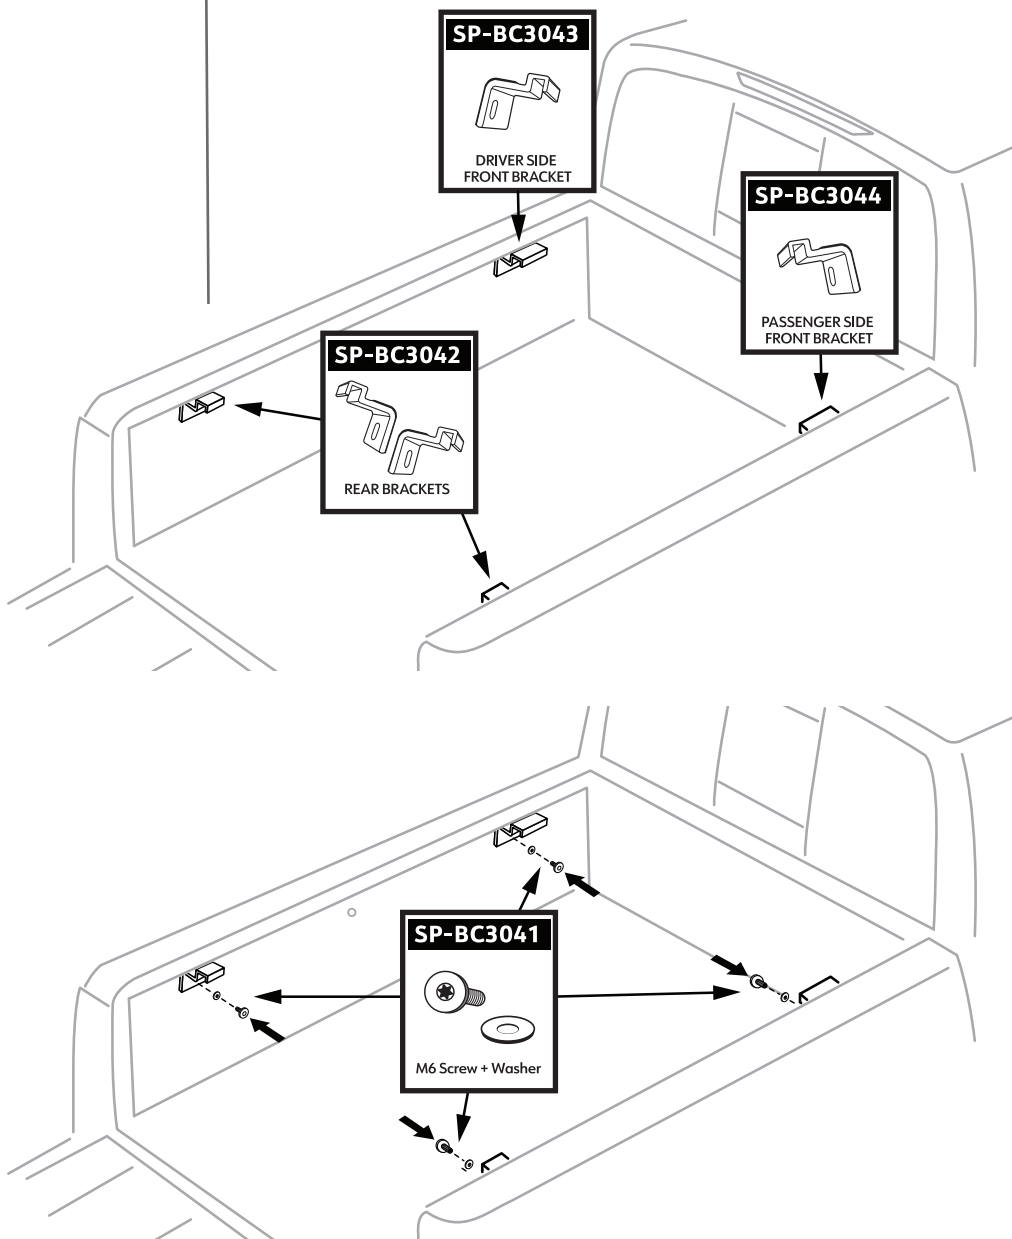
2 REMOVE THE FACTORY SCREWS

• REMOVE 4 FACTORY SCREWS FROM 4 INDICATED LOCATIONS.





③ INSTALL THE BRACKETS

- USE (1) SCREW WITH (1) WASHER EACH TO INSTALL (2) REAR BRACKETS, (1) DRIVER SIDE FRONT BRACKET AND (1) PASSENGER SIDE FRONT BRACKET.




4 LAYING OUT THE COVER

- PLACE THE FOLDED COVER ASSEMBLY ON THE BED RAIL AND ALIGN THE FRONT EDGE ALL THE WAY WITH THE OUTER EDGE OF THE BED RAIL.
- RELEASE THE SAFETY BUCKLES AND FULLY UNFOLD THE COVER TOWARDS THE TAILGATE. BOTH SIDES SHOULD ALIGN EVENLY WITH THE SIDE BED RAILS.

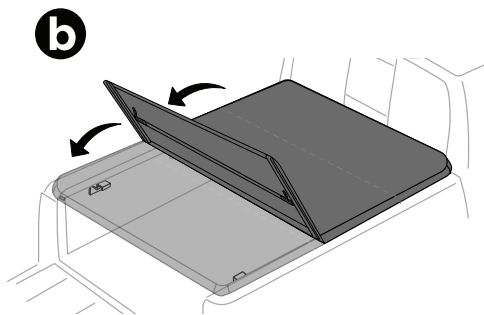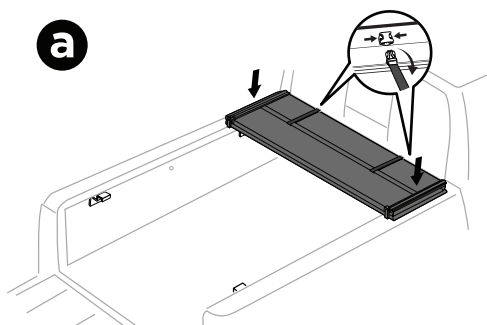


C

- C-1** • ALIGN THE FRONT OF THE COVER AGAINST THE OUTER EDGE AT THE MIDPOINT OF THE FRONT BED RAIL.
- C-2** • ALIGN BOTH SIDES OF THE COVER EVENLY ON THE SIDE BED RAILS. THE WIDTH OF THE COVER DOES NOT COVER ALL THE WAY TO THE OUTER EDGES OF THE SIDE RAILS.

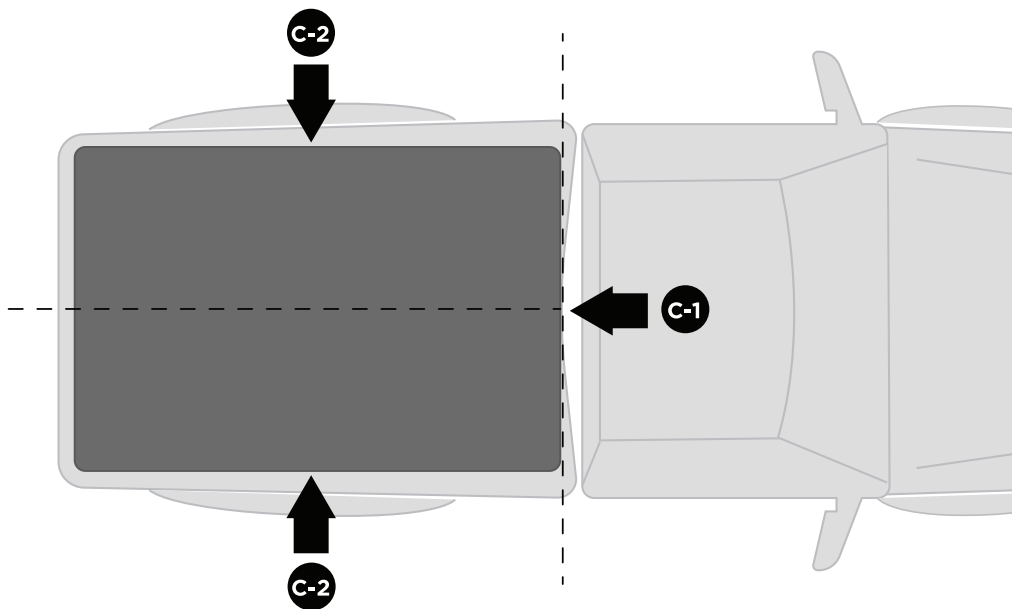

5 FOLDING BACK THE COVER


- CAREFULLY REFOLD THE COVER WITHOUT MOVING ITS POSITION ON THE TRUCK BED.

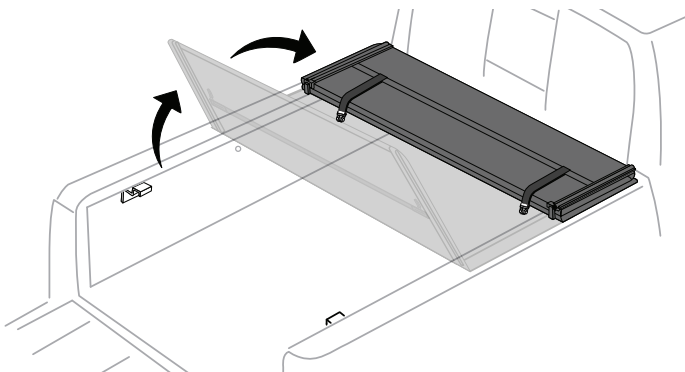

6 CLAMPS & LATCHES OVERVIEW

- THE CLAMPS AND LATCHES ARE ALREADY ATTACHED TO THE ASSEMBLED COVER.


NOTE: FOR MODELS WITH UTILITY TRACK, REFER TO **PAGE 12** FOR INSTRUCTION ON UTILITY TRACK BRACKET INSTALLATION.

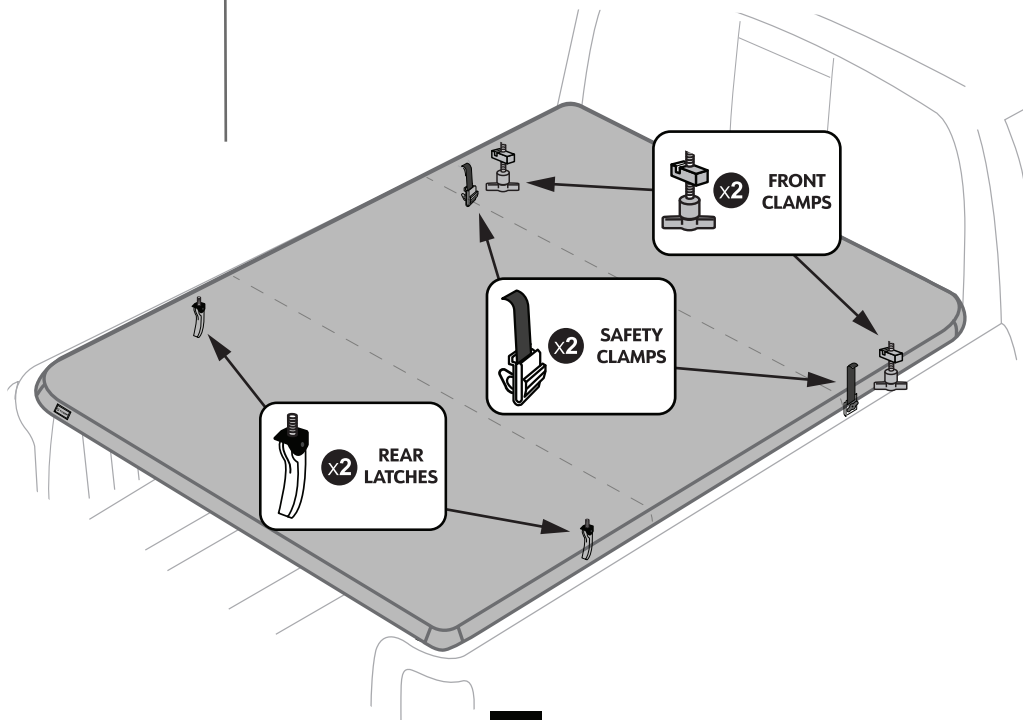

7 APPLYING FRONT CLAMPS ⓘ


YOU NEED

Phillips-Head
Screwdriver



ATTENTION

DO NOT use wrench
or overtighten!

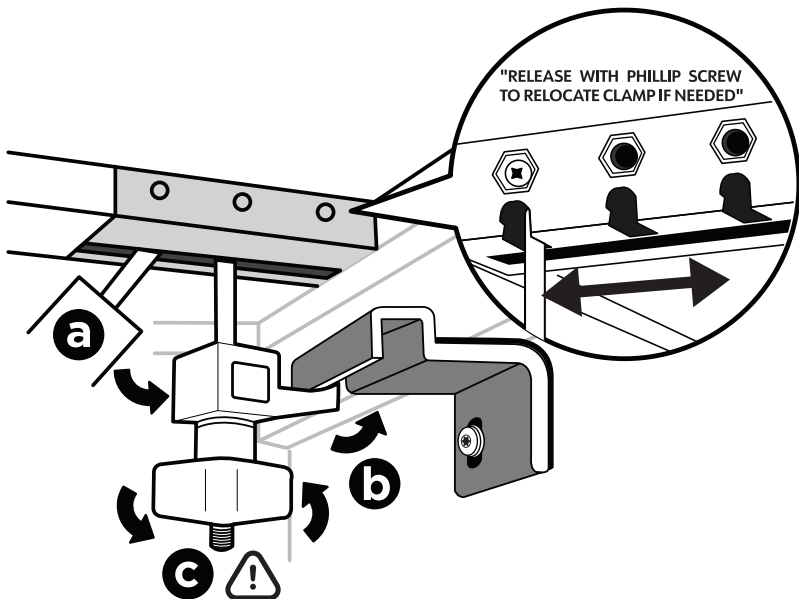

a

• PULL DOWN
FRONT CLAMPS
INTO VERTICAL
POSITION.

b

• HOOK THE JAW OF THE
CLAMP ONTO THE METAL
BED RAIL LIP. CLAMP PAD
CAN BE INSERTED TO
PROTECT THE PAINT.

c

• TURN THE KNOB UNTIL
SIDE Q-SEAL ON THE
COVER IS COMPRESSED
AND THE CLAMP IS
SNUG.



NOTE

Safety clamps must
be secured properly
to the metal part of
the bed rail while
the vehicle is in
motion, otherwise
the warranty will be
voided.




ATTENTION


DO NOT use wrench
or overtighten!

8 APPLYING SAFETY CLAMPS ⓘ

• TURN THE KNOB COUNTERCLOCKWISE TO LOOSEN THE SAFETY CLAMP WITH THE STRAP, ATTACH CLAMP TO THE SAME FRONT BRACKET.

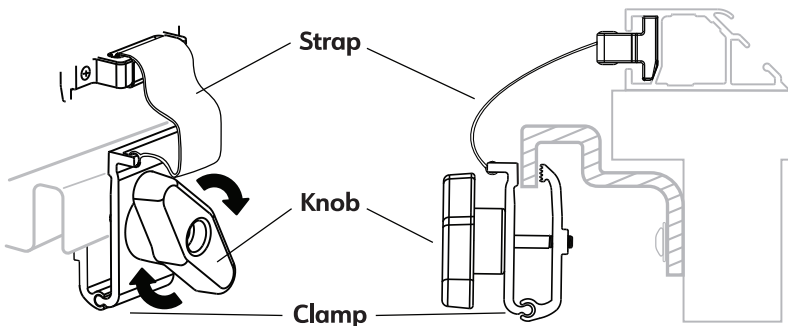


COMPLETE!!!

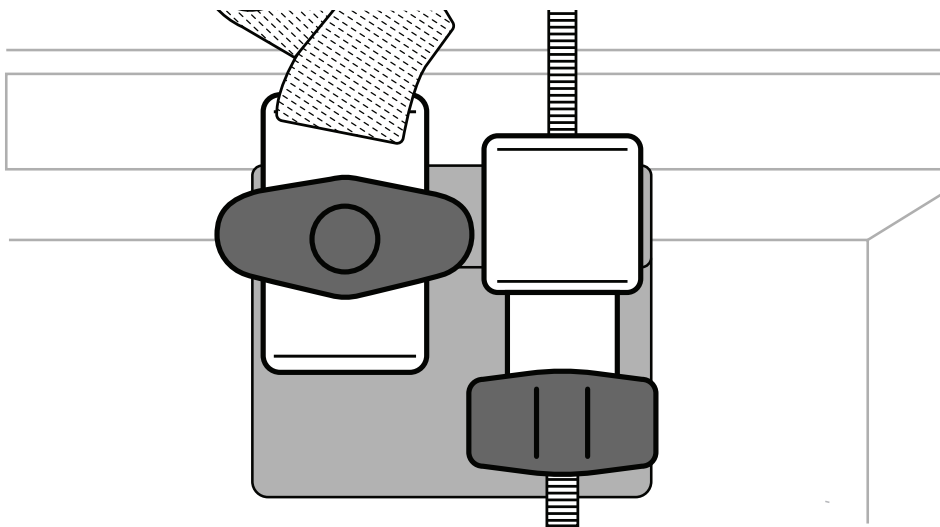

(DRIVER/LEFT SIDE INSTALLATION PICTURED BELOW)

9 UNFOLD THE TONNEAU COVER

- UNFOLD THE COVER COMPLETELY TOWARDS THE TAILGATE.

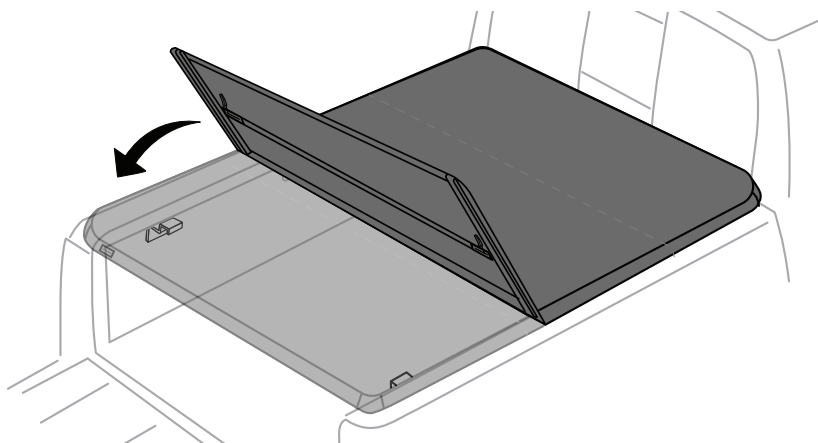

10 FASTENING REAR LATCHES




NOTE



All latches & clamps must make solid contact with the metal bed rail lip for the cover to be secured.

YOU NEED


Phillips-Head
Screwdriver




"RELEASE WITH PHILLIP SCREW
TO RELOCATE LATCH IF NEEDED"

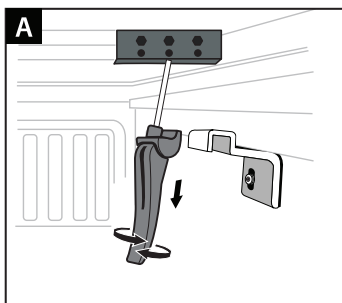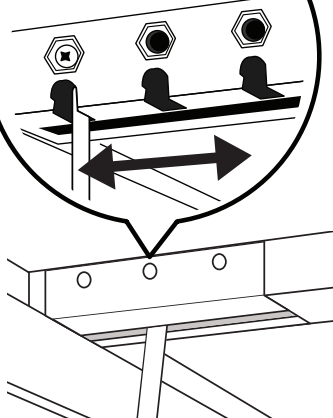


A: START BY PULLING DOWN LATCH HANDLE FROM THE BACK OF COVER. THEN UNSCREW THE HANDLE TO LOWER ITS POSITION.

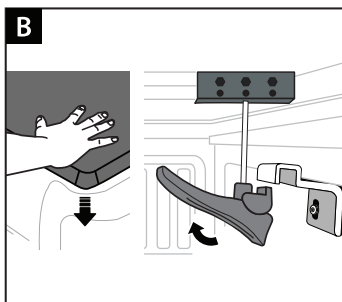

B: WITH ONE HAND, LIFT AND KEEP THE LATCH HANDLE POINTING UP AS MUCH AS POSSIBLE (BEYOND 90°). THEN, WITH THE OTHER HAND FIRMLY PRESSED DOWN ONTO THE COVER CORNER. CONTINUE TO ROTATE HANDLE TO ADJUST THE POSITION.

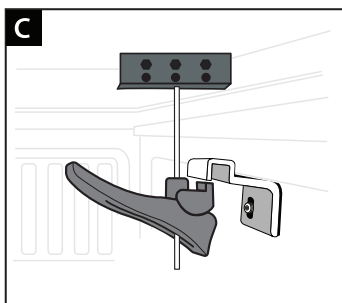

C: FOR THE TIGHTEST FIT, OPENING OF LATCH JAW SHOULD BE LEVEL WITH THE SIDE RAIL LIP WITHOUT LIMITING ACCESS TO THE JAW.

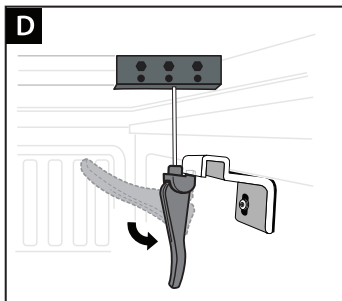

D: LATCH THE JAW GROOVE FULLY INTO THE RAIL LIP, THEN CRANK HANDLE DOWN TO TIGHTEN. GO BACK AND READJUST JAW POSITION FROM STEP B IF THE LATCH DOES NOT FEEL VERY TIGHT.




NOTE

Cover may not completely cover to the outside edge of the bed rails due to slight difference in truck bed shape for different year models

11 FINISHING INSTALLATION ⓘ

- AFTER REAR LATCHES ARE SECURELY FASTENED, SHUT & LOCK THE TAILGATE SO THE COVER CANNOT BE OPENED FROM THE OUTSIDE.

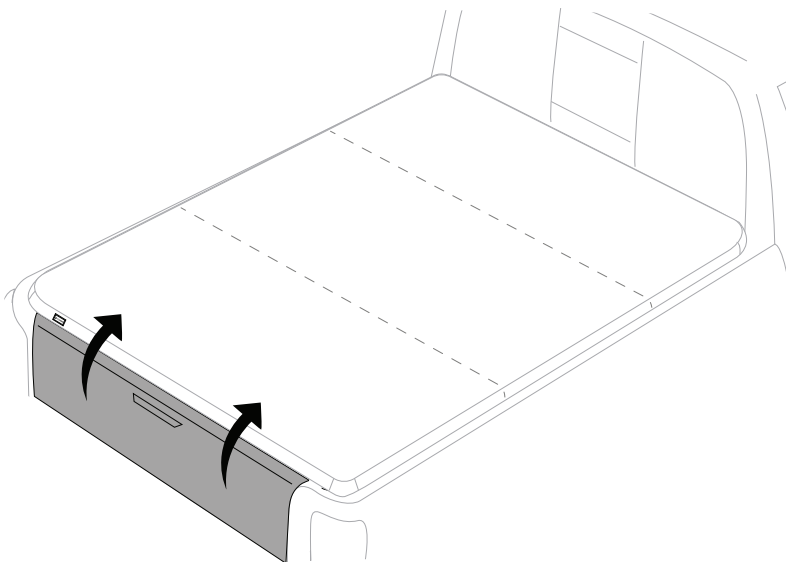


12 CHECKING FOR GAPS ⓘ


- WITH THE TAILGATE OPEN, VISUALLY INSPECT FOR LIGHT LEAKING THROUGH THE GAPS. APPLY ADDITIONAL SEALING STRIPS TO FILL THE GAPS THEN REINSPECT AND REPEAT.



SP-BC0005

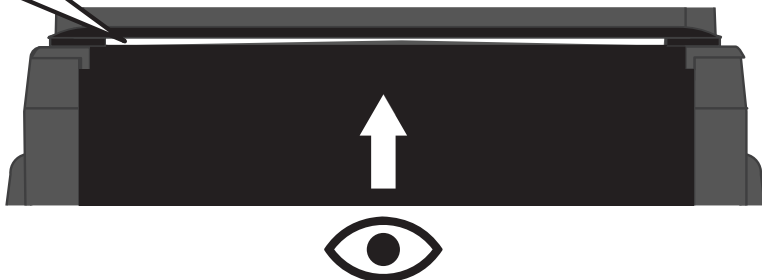

INSTALLATION COMPLETE!!!

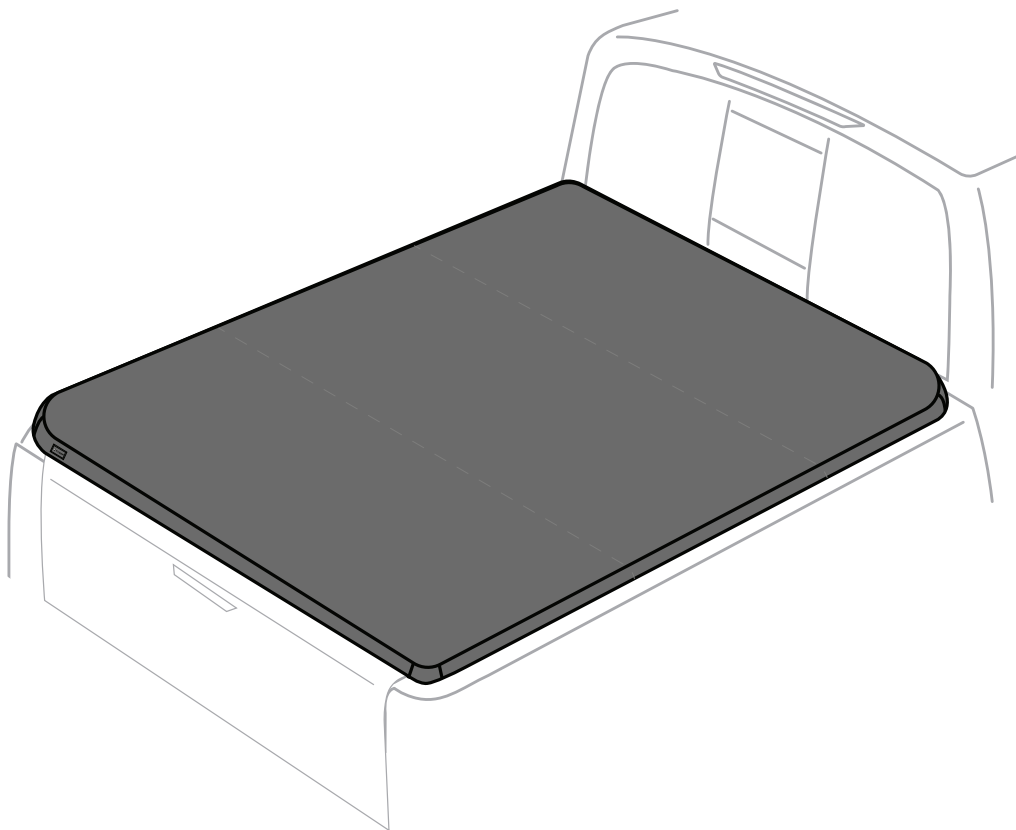

DO NOT
overload cargo



DO NOT place
sharp objects on top



Remove snow before
folding up cover



Secure strap buckles
before driving




Use seal strips for
Exposed gaps to
Avoid leaking




Use water and
soap to clean.
Avoid abrasive
chemical cleaners

AFTER INSTALLATION

13 FOLDING UP THE COVER

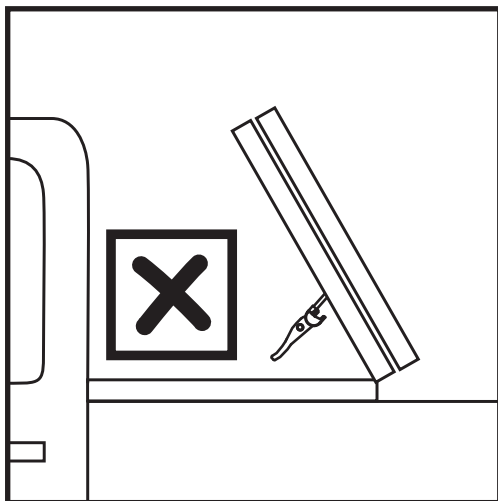


- REAR LATCHES MUST BE TUCKED IN BEFORE YOU FOLD BACK THE COVER.

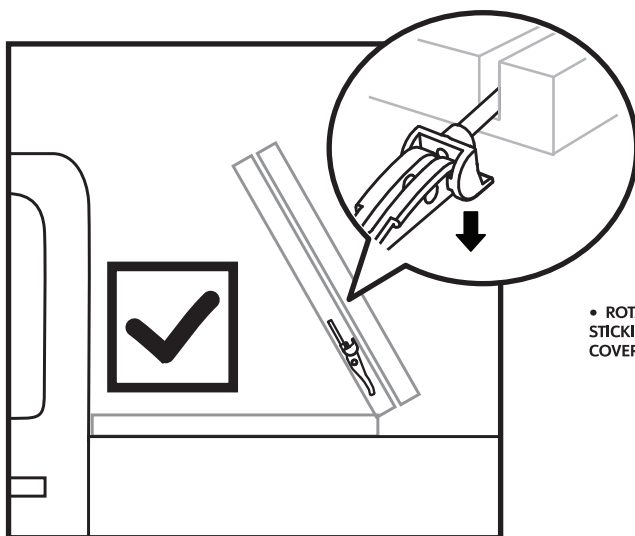

- ROTATE THE LATCH SO THE JAW IS NOT STICKING OUT FROM THE UNDER-SIDE OF THE COVER.


NOTE


DO NOT release the front clamps and safety clamps when you unfold the cover, and make sure they are all secured!

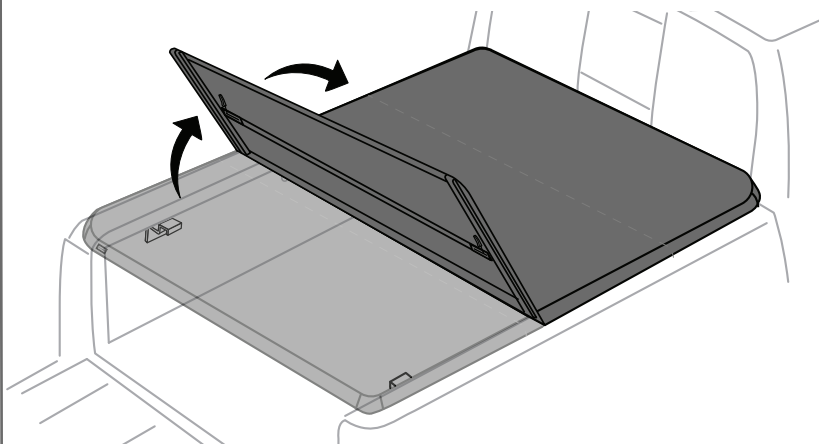a 


CLICK!!!

b

- ENSURE THE SAFETY BUCKLES ARE PROPERLY SECURED ON BOTH SIDES.

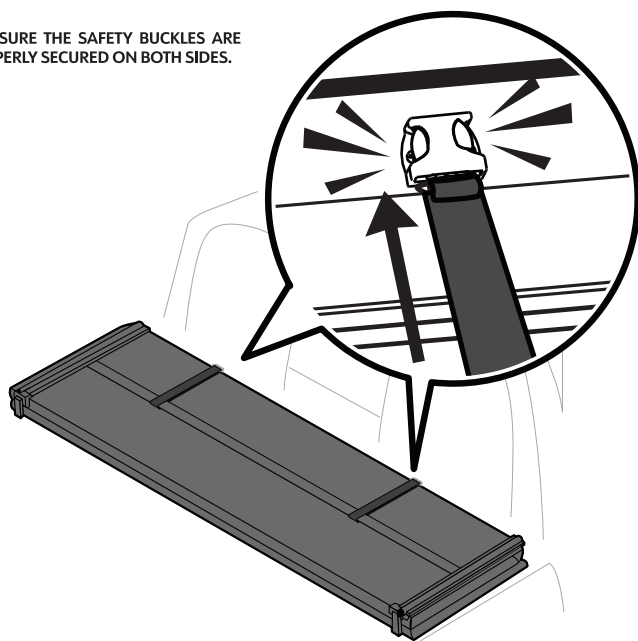

SECURED!!!

