



TYGER

T1

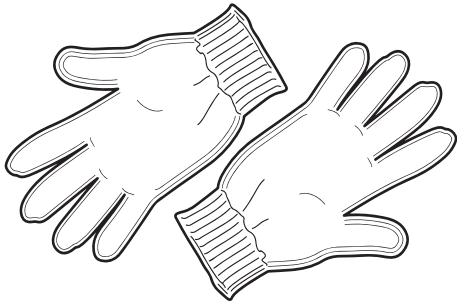
BED COVER SIDE RAILS VELCRO REPLACEMENT

A

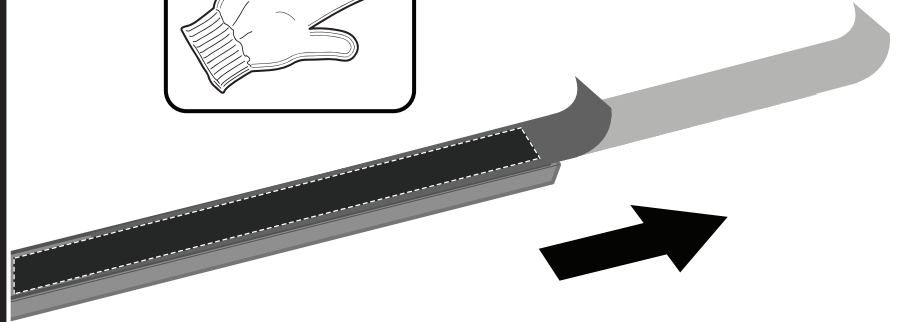
New Replacement Velcro Strip (hook side)



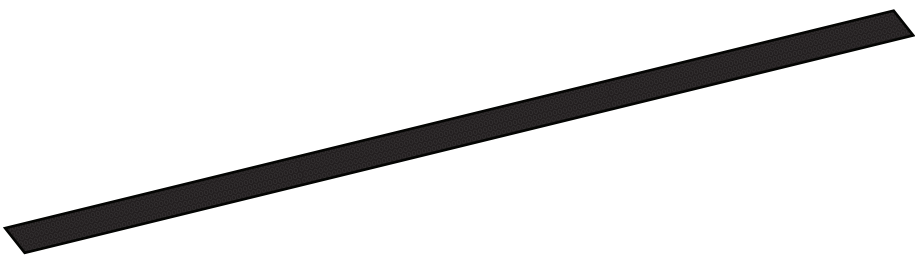
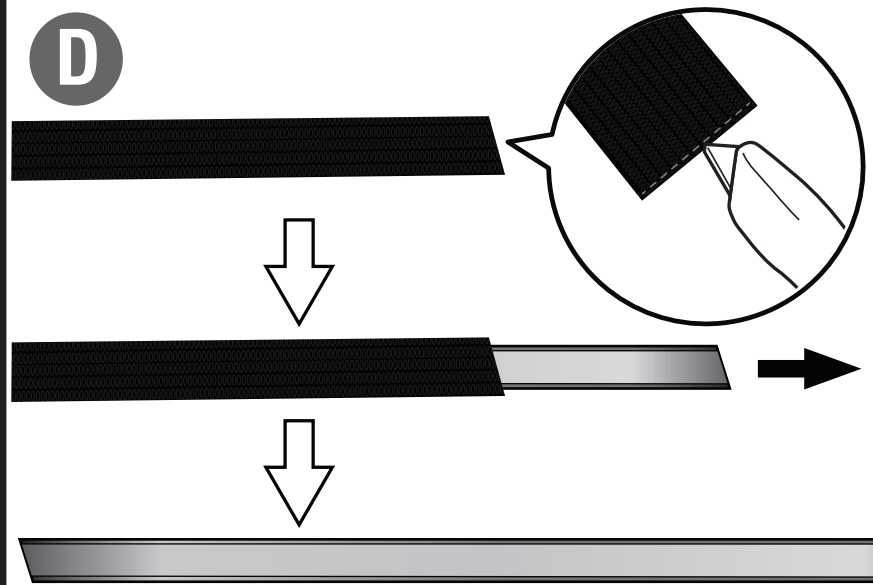
Adhesive Adjustment Strip (hoop side)

**B**

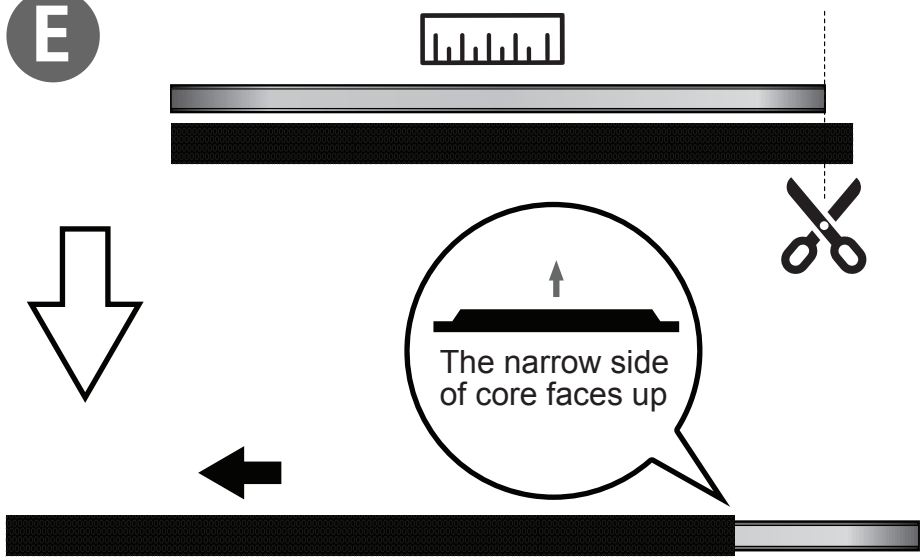
You will need:



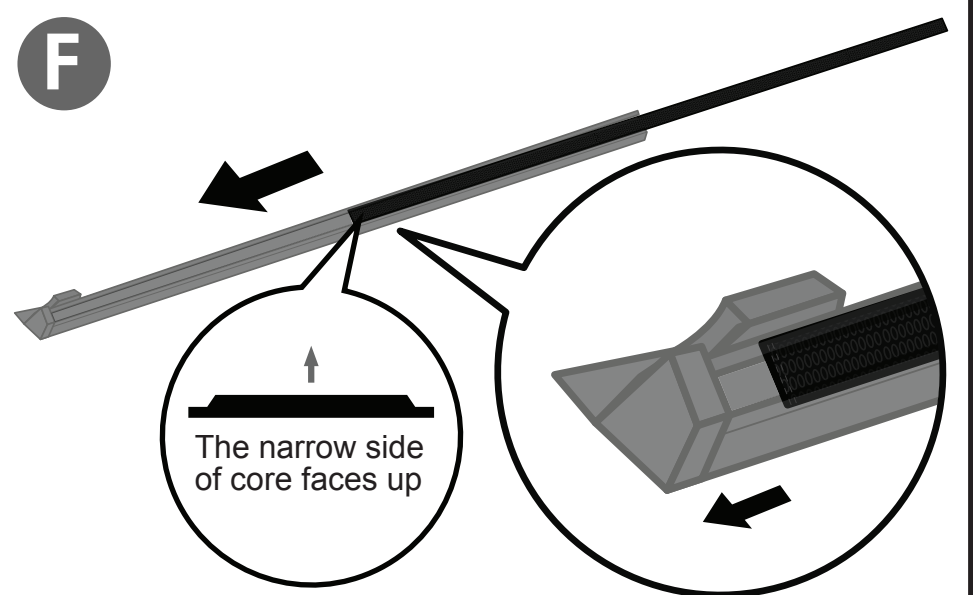
With gloves on, use Adhesive Adjustment Strip to pull to-be replaced (old) velcro strip out of the aluminum channel.

C**D**

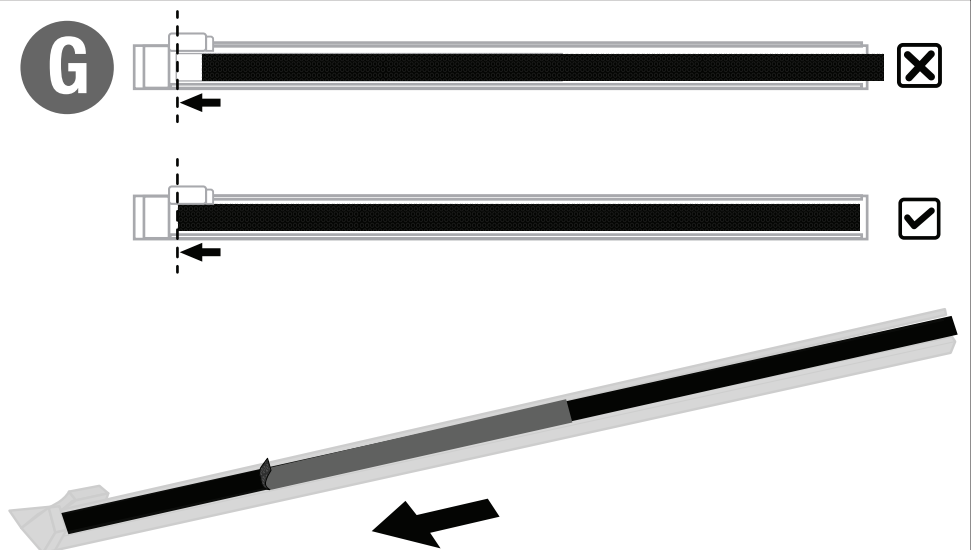
Cut along the end of old velcro strip and pull out plastic core.

E

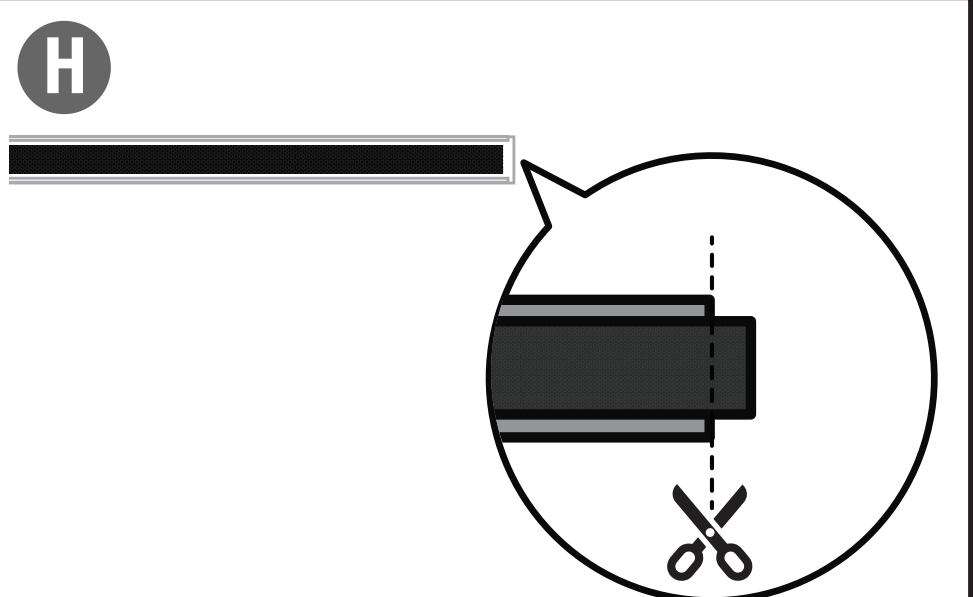
Take replacement velcro strip and use plastic core as a measurement guide. Trim replacement velcro so length.

F

Insert sealed/stitched end of new velcro into the aluminum rail channel.

G

Use Adhesive Adjustment Strip to pull velcro strip all the way to the end of channel.

H

Trim down any remaining velcro strip sticking out of the channel.