



TYGER®

STAR ARMOR®

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. PLEASE ALSO SEND THE PICTURES, ORDER NUMBER, AND DETAILS OF THE ISSUE TO SUPPORT@TYGERAUTO.COM.


Torque Value

Fastener Size	Class 8.8 Tightening Torque (ft-lbs)	Class 10.9 Tightening Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

TG-AM2C20438

Parts List

- x1** Driver/left Side Armor Assembly
- x1** Passenger/right Side Armor Assembly
- x12** 8-1.25mm x 25mm Hex Bolts
- x12** 8mm x 24mm OD x 2mm Flat Washers
- x12** 8mm Lock Washers

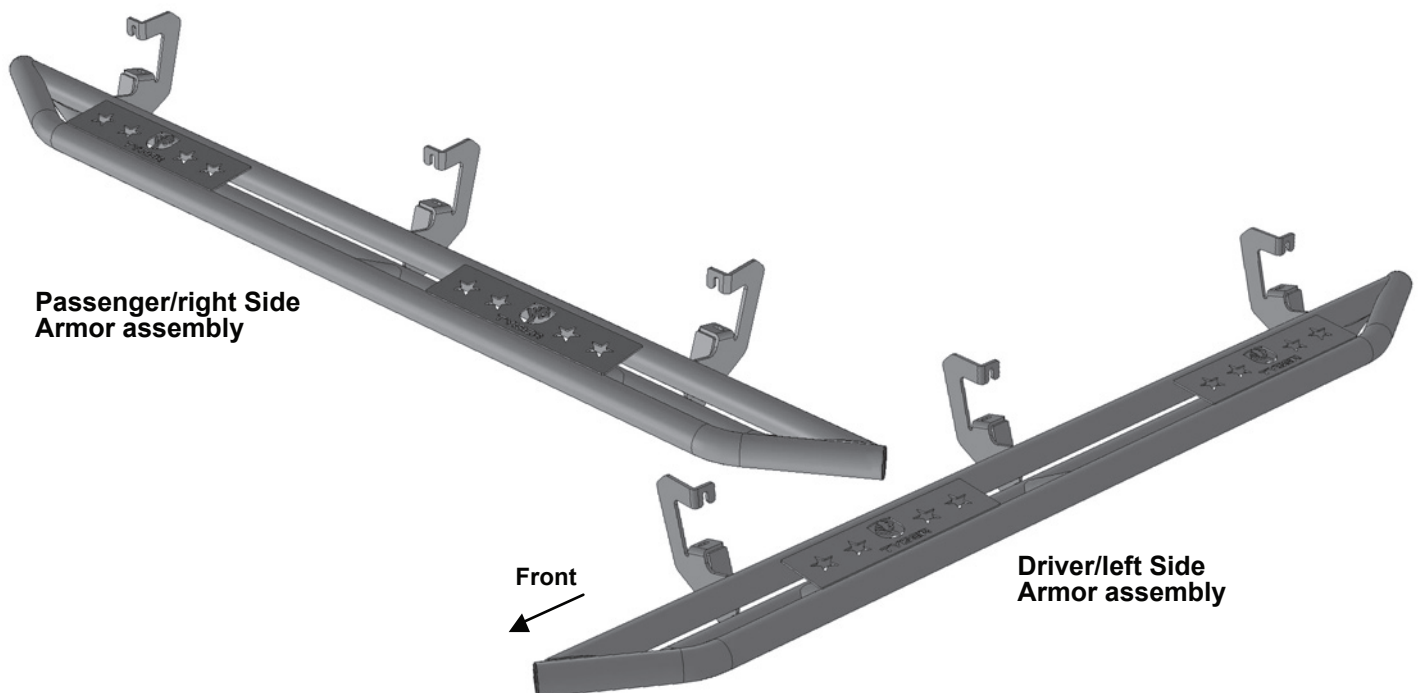






TYGER[®]

STEP 1

Start under the driver side of the vehicle. Remove the factory running board if equipped.


STEP 2

Select the driver/left Tyger Side Armor. With assistance, hold the Side Armor up to the side of the inner body panel, (Fig 1-3).

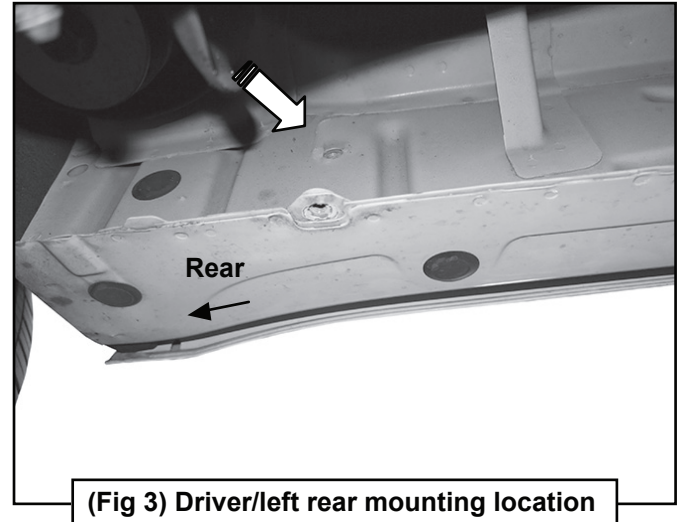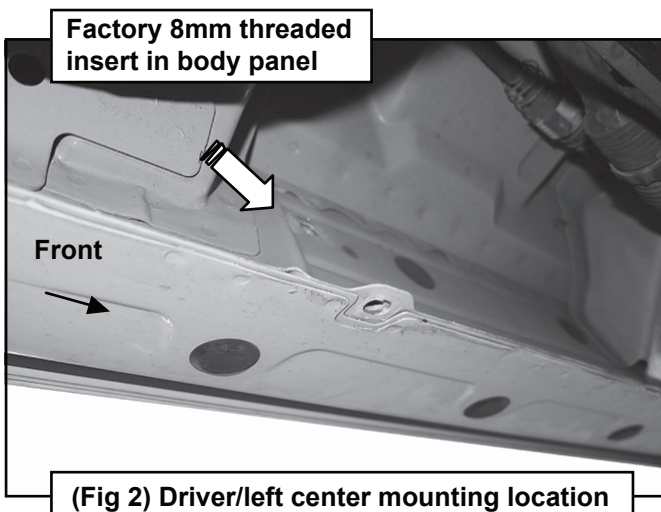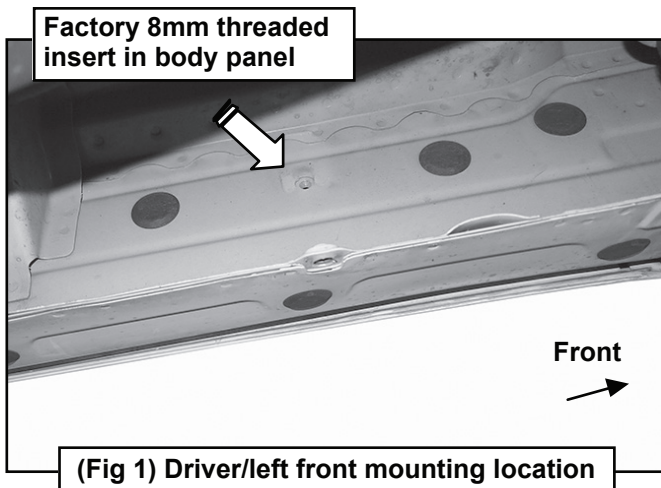


STEP 3

Attach the Side Armor to the (3) factory running board mounting locations with the included (6) 8mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Flat Washers, (Fig 4-7).

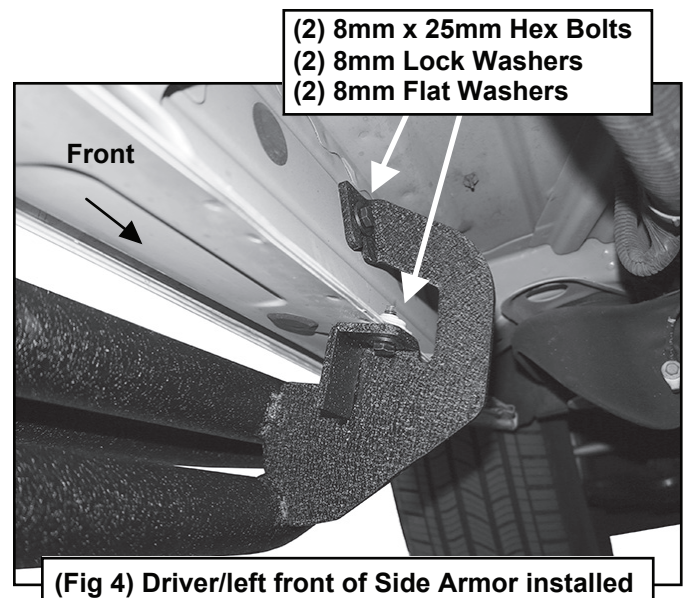



TYGER®

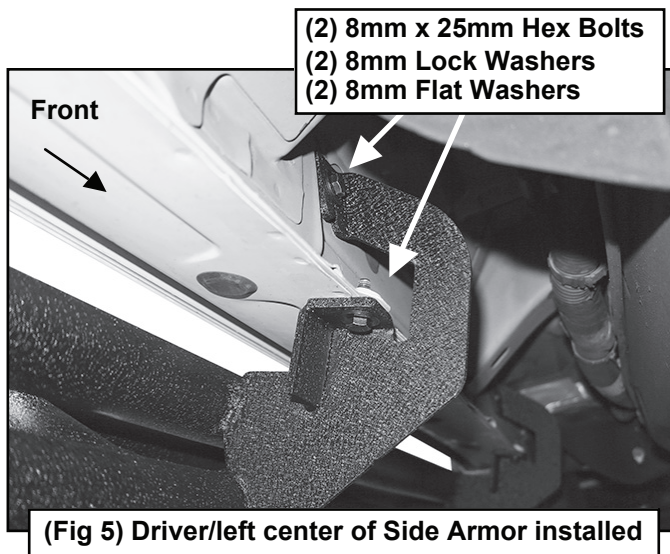

STEP 4

Level and adjust the Side Armor as necessary and fully tighten all hardware.

STEP 5

Repeat Steps 1-4 to install the passenger/right Side Armor.

STEP 6

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

