



TYGER®

STAR ARMOR®

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. PLEASE ALSO SEND THE PICTURES, ORDER NUMBER, AND DETAILS OF THE ISSUE TO SUPPORT@TYGERAUTO.COM.

Torque Value


Fastener Size	Class 8.8 Tightening Torque (ft-lbs)	Class 10.9 Tightening Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

TG-AM2N20338

NOTE: Assistance is recommended for installation.

Parts List

- x1** Driver Side Armor Assembly
- x1** Passenger Side Armor Assembly
- x12** 8mm Nylon Lock Nuts
- x12** 8mm x 24mm OD x 2mm Flat Washers

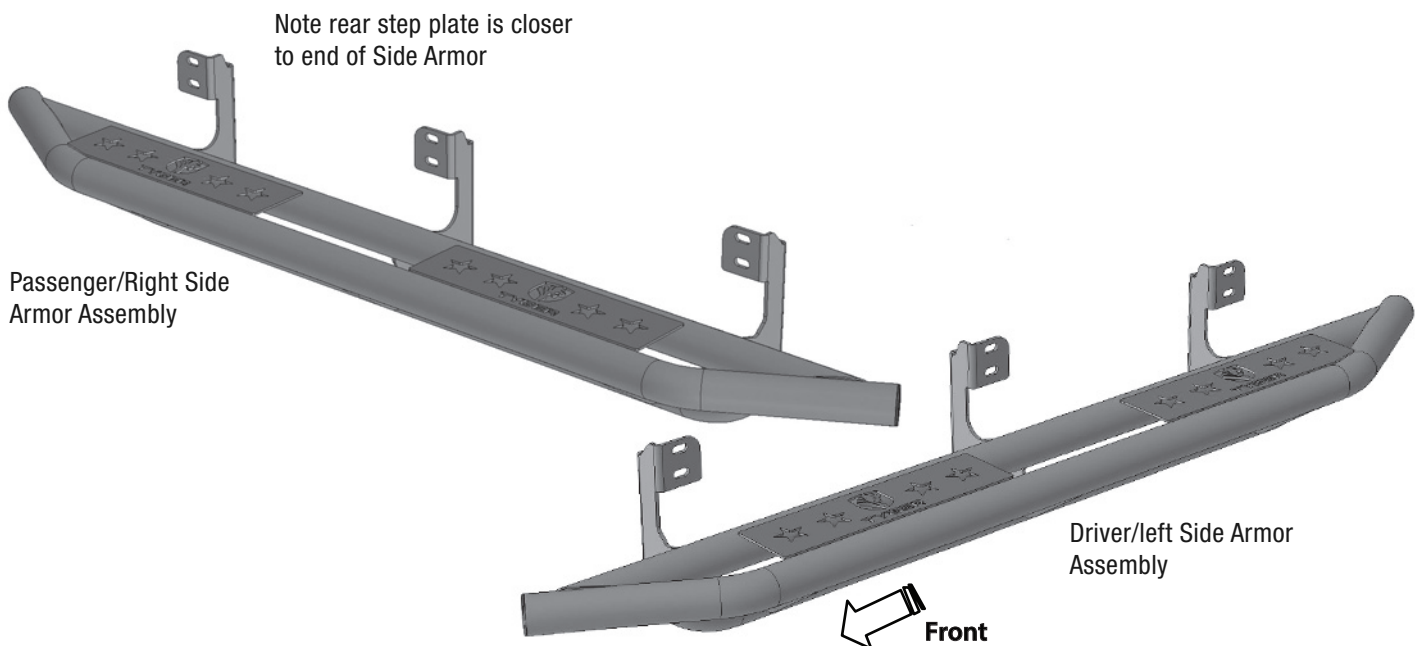





TYGER[®]

STEP 1



Starting on the passenger/right side of the vehicle, locate the factory running board mounting studs along the inner body panel, (Figs 1-2). Remove any paint or undercoating from the studs before starting installation.

NOTE: If necessary, hold the passenger/right Side Armor up in position to help locate correct mounting locations.

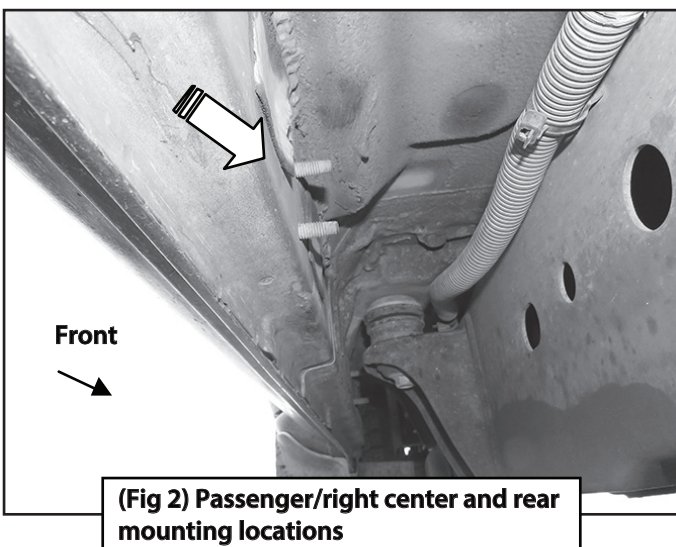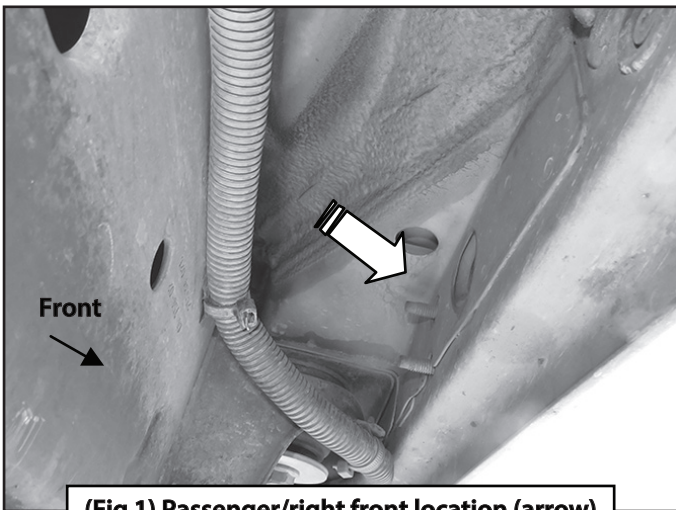

STEP 2

With assistance, line up the (3) mounting brackets on the Side Armor with the factory threaded studs in the inner body panel. Attach the Side Armor to the studs with the included (6) 8mm Flat Washers and (6) 8mm Nylon Lock Nuts, (Figs 3-4). Leave hardware loose.

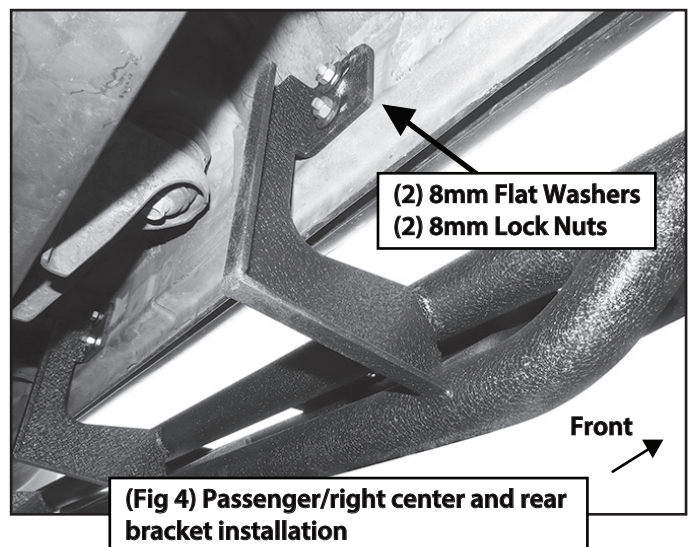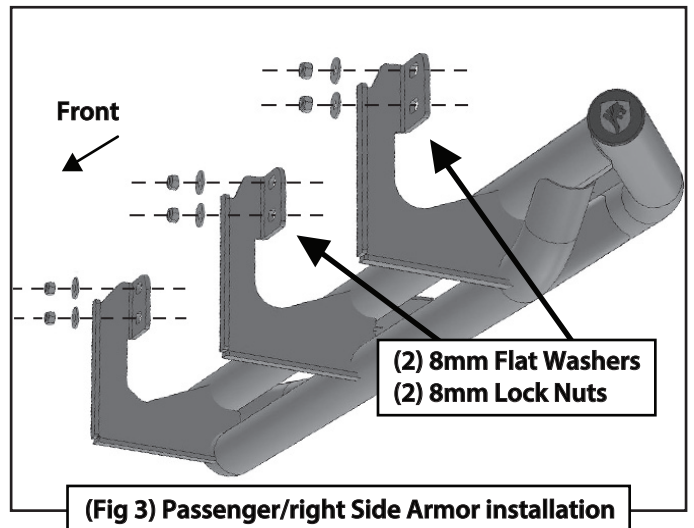



TYGER[®]

STEP 3

Adjust the position as necessary and fully tighten all hardware.

STEP 4

Repeat Steps 1-3 for driver/left Side Armor installation.

STEP 5

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Complete Installation

