



TYGER®

STAR ARMOR®

TG-AM2T20018

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/Left Side Armor
- x1 Passenger/Right Side Armor
- x12 8-1.25mm x 30mm Hex Bolts
- x12 8mm Lock Washers
- x12 8mm Plate Washers

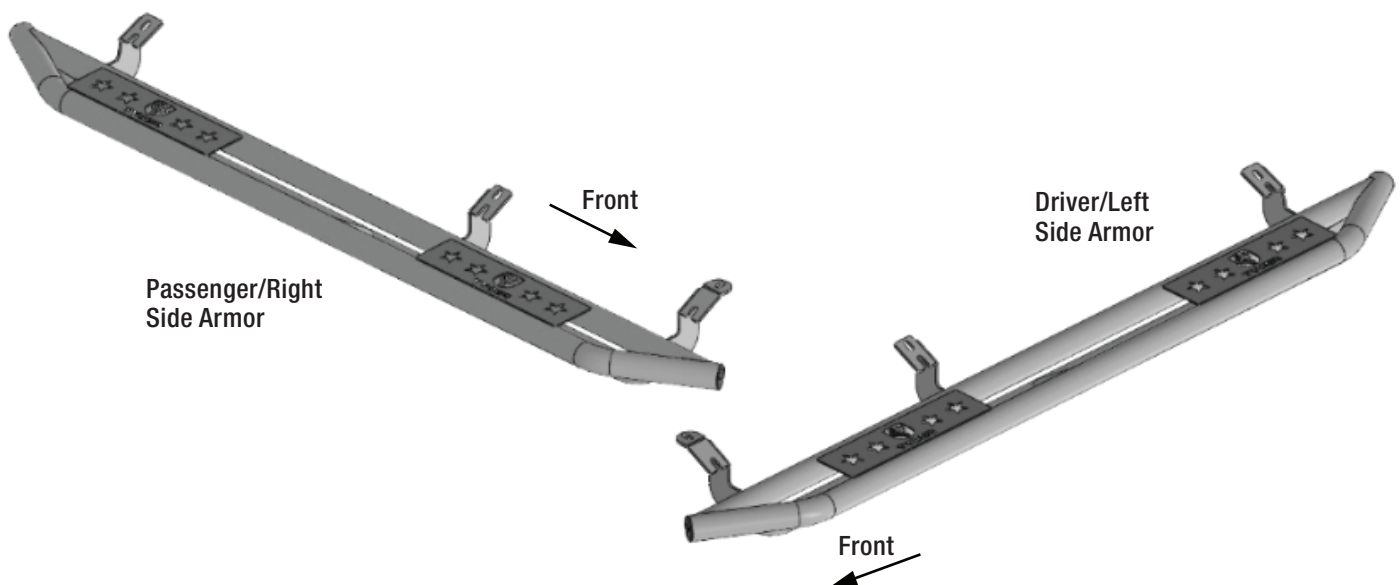



TYGER®

STEP 1


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

STEP 2

Starting on the Passenger/Right side of the vehicle and remove the plastic plugs or hex bolts from the factory mounting location along the bottom of the body, (Figs 1 & 2). **IMPORTANT: There are (4) mounting locations** along the body, installation will use the **1st, 2nd and 4th** locations.


Passenger/Right Side Installation Pictured

Remove plastic plugs (if equipped) or hex bolts from threaded holes

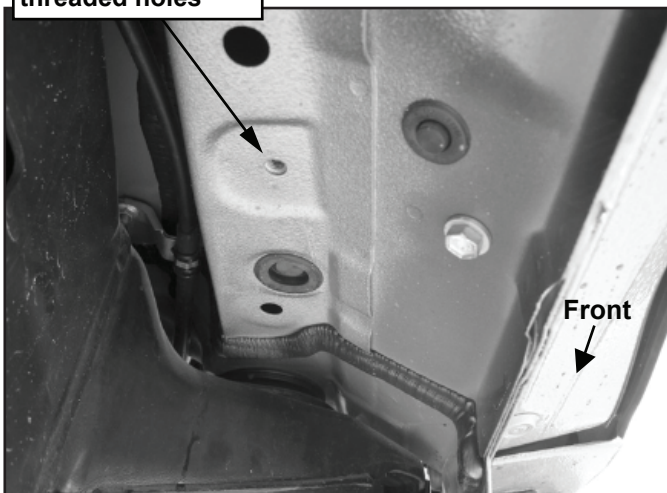

(Fig 1) Passenger/Right front mounting location

ATTENTION: There are four sets of threaded holes in the side panel. Starting from the front of the vehicle, use the first, second, and fourth sets of holes.

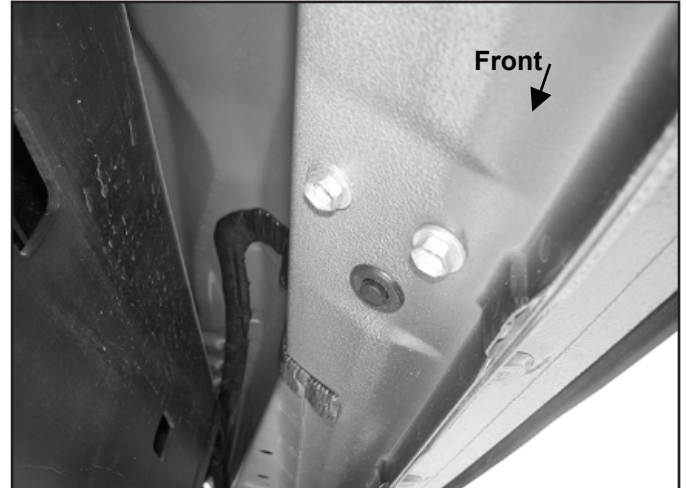


(Fig 2) Passenger/Right center (2nd) location

STEP 3

Select the Passenger/Right Armor. With assistance, line up the (3) mounting tabs on the Armor with the factory holes in the body. Attach the Armor to the factory locations with (6) 8mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Plate Washers, (Figs 3—7). DO NOT tighten hardware at this time.

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Plate Washers

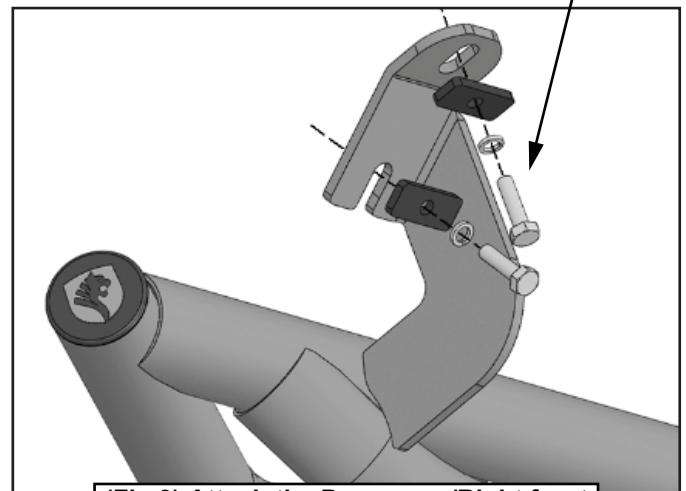


(Fig 3) Attach the Passenger/Right front mounting tab to the front location




TYGER®

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Plate Washers

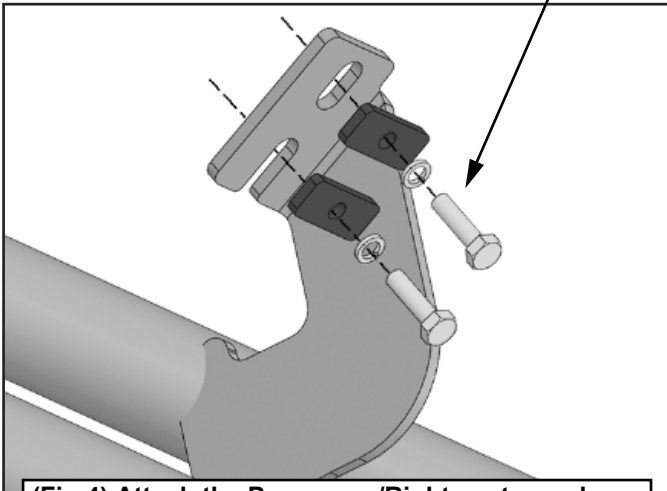


(Fig 4) Attach the Passenger/Right center and rear mounting tabs to the center and rear locations

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Plate Washers

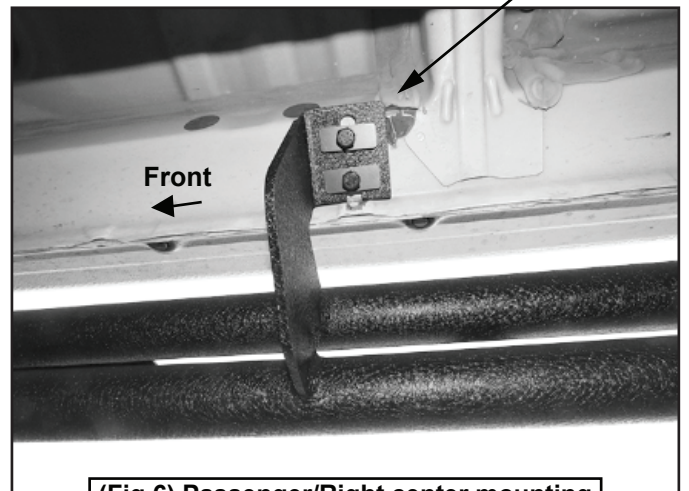


(Fig 6) Passenger/Right center mounting tab attached to the center location

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Plate Washers

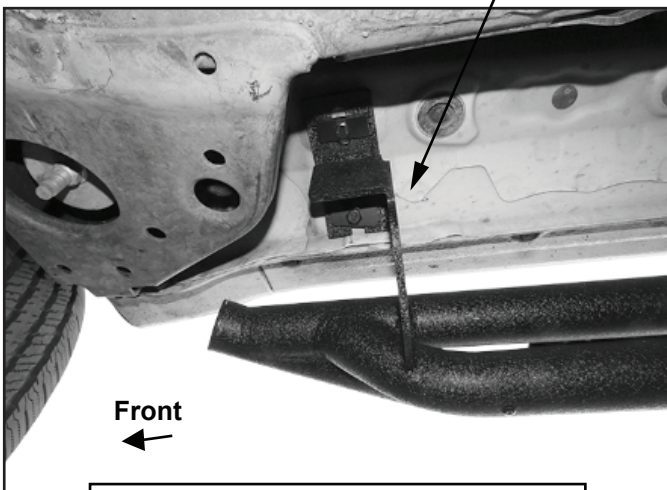

(Fig 5) Passenger/Right front mounting tab attached to the front location

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Plate Washers

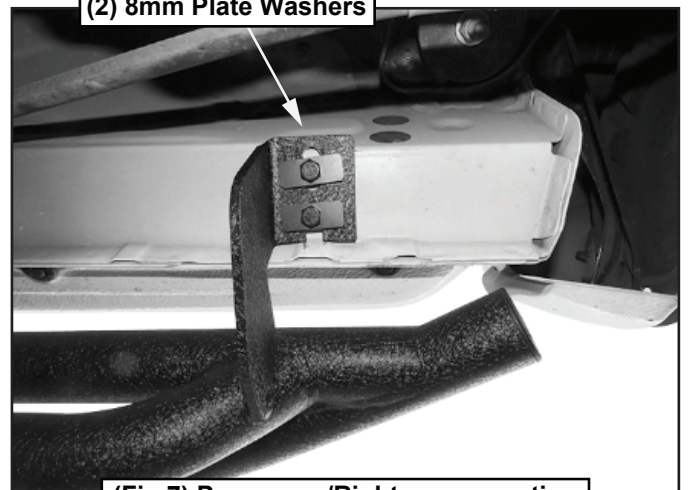


(Fig 7) Passenger/Right rear mounting tab attached to the rear location



TYGER®

STEP 4

Level and adjust as necessary and tighten all hardware.

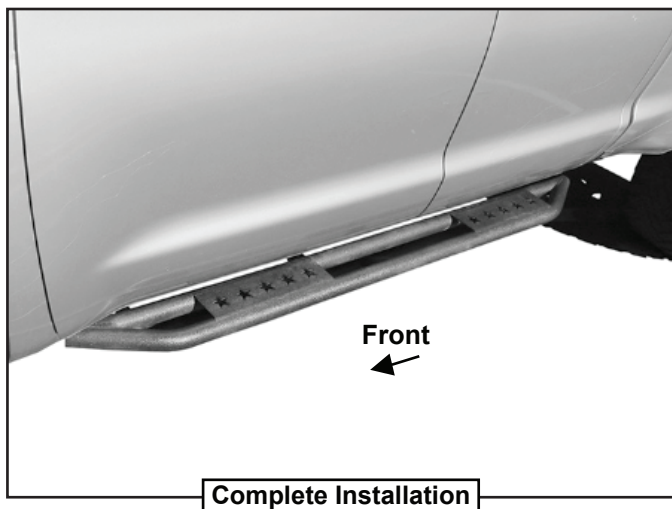

STEP 5

Repeat **STEPS 2—4** for Driver/Left Armor installation.

STEP 6

Care Instructions: DO NOT use any type of polish or wax that may contain abrasives that could damage the finish. Use only mild soap to clean the Tyger Armor.