

## STAR ARMOR

TG-AM2T20188

#### **BEFORE INSTALLATION**

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLAESE VISIT: WWW.TYGERAUTO.COM/CONTACT

#### **TORQUE VALUES**


Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

# Parts Listx1Driver/Left Tyger Armorx1Passenger/Right Tyger Armor

x12 8-1.25mm x 30mm Hex Bolts

x12 8mm Lock Washers

x12 8mm Plate Washers

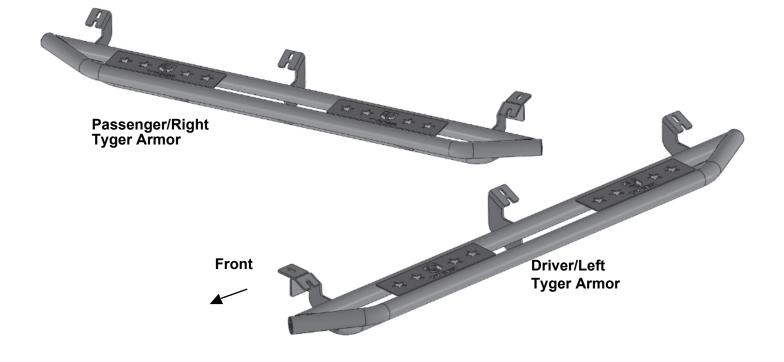

Customer Support: www.TygerAuto.com/Contact







### STEP I


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRE-SENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

### STEP 2

Starting on the Passenger/Right side of the vehicle, remove any plastic plugs or hex bolts from the factory mounting locations along the bottom of the floor, (Figs 1-3). **NOTE:** If necessary, hold the Passenger/Right Tyger Armor up in position to help locate correct mounting holes.

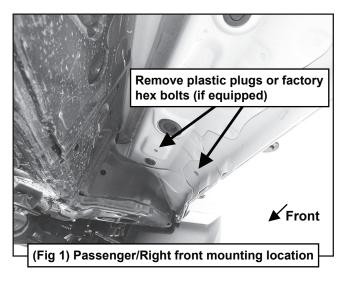


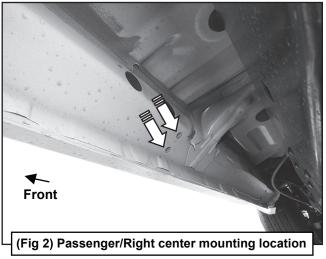

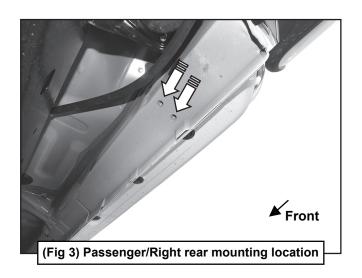


#### STEP 3

With assistance, line up the (3) mounting brackets on the Tyger Armor with the factory threaded holes in the bottom of the floor panel. Attach the Tyger Armor to the floor panel with the included (6) 8mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Plate Washers, (Figs 4-6). Leave hardware loose.

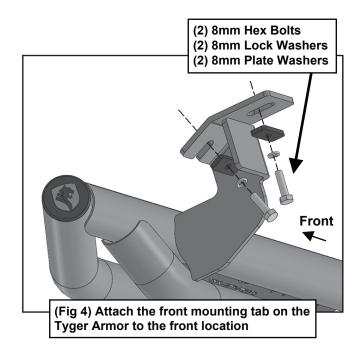

Customer Support: www.TygerAuto.com/Contact



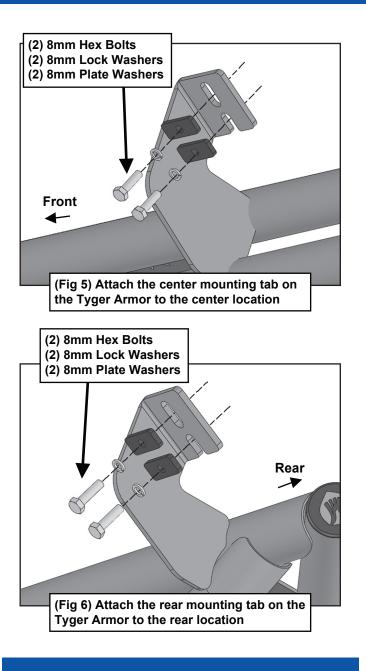



Level and adjust the Tyger Armor as necessary and fully tighten all hardware.

#### STEP 5

Repeat Steps 2-4 to attach the Driver/Left Tyger Armor.

## STEP 6

Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Customer Support: www.TygerAuto.com/Contact