



STAR ARMOR®

TG-AM2T20748

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

x1 Driver/Left Side Tyger Armor


x1 Passenger/Right Side Tyger Armor

x16 8mm x 30mm Hex Bolts

x16 8mm Lock Washers

x16 Washer Plates

Parts List

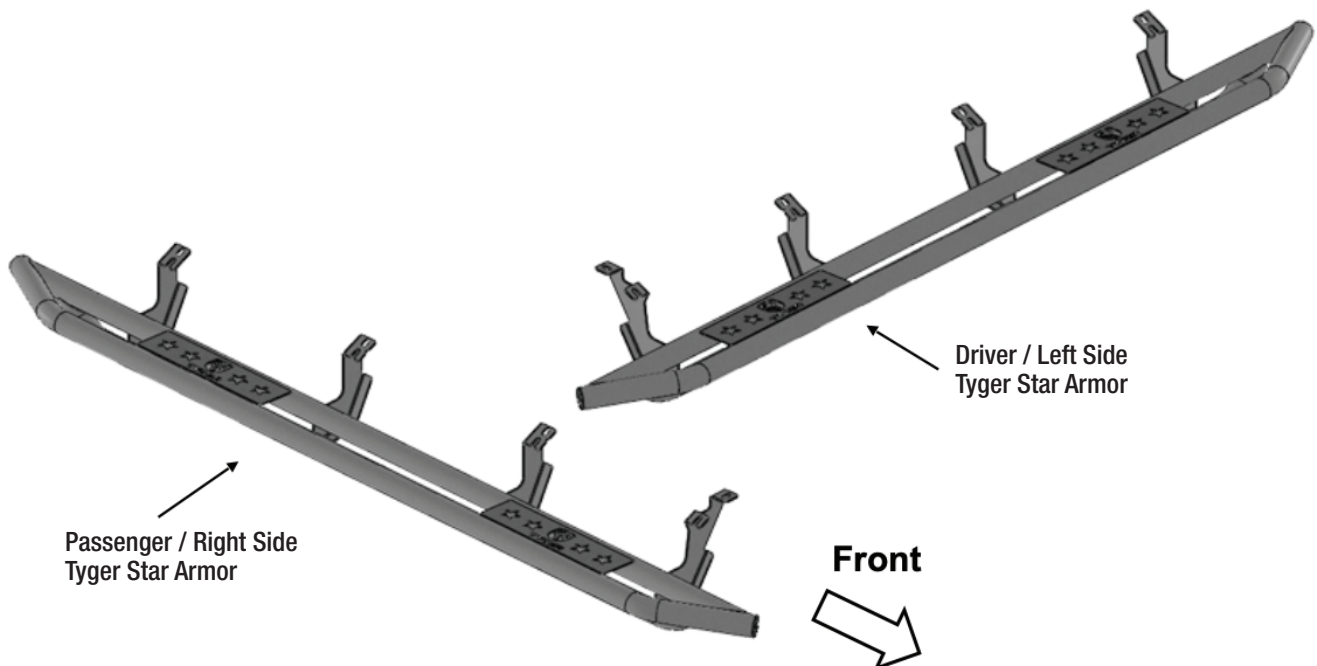



PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

STEP 1

Starting on the Passenger/right side of the vehicle and remove the plastic plugs or hex bolts from the factory mounting location along the bottom of the body (Figs 1 & 2).



Passenger/Right Side Installation Pictured

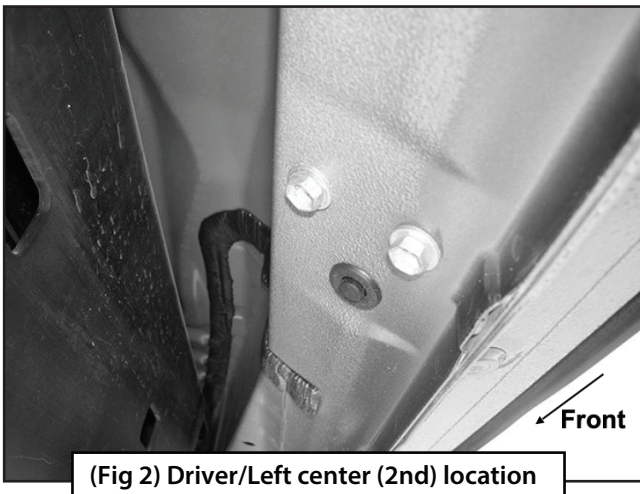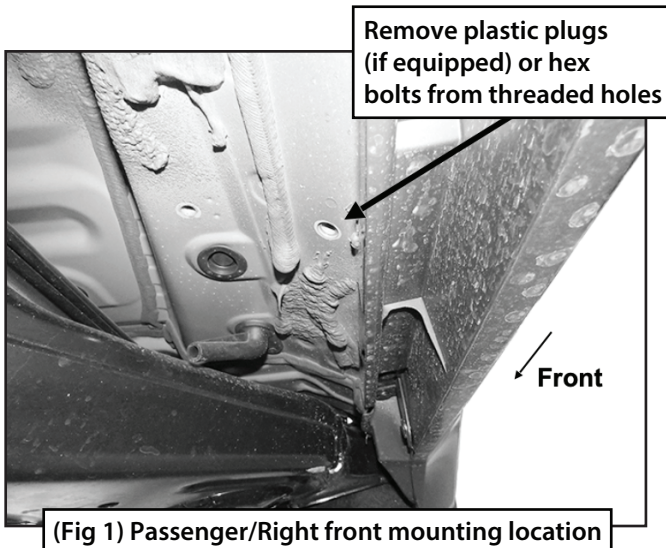

STEP 2


Select the Passenger/Right Tiger Star Armor. With assistance, attach the front mounting tab to the front location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) Washer Plates (Figs 3 & 4). DO NOT tighten hardware.

Passenger/Right Side Installation Pictured

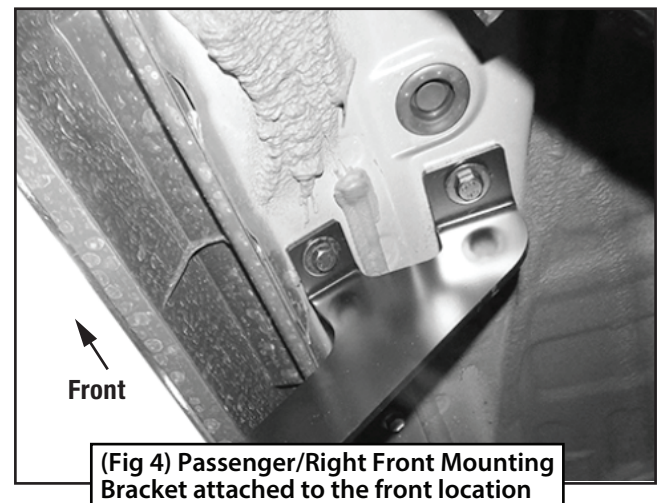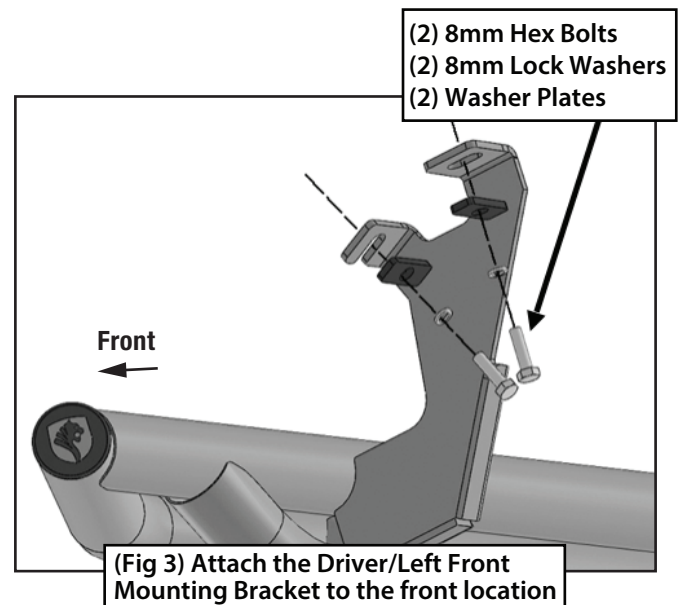

STEP 3

Repeat **STEPS 1 & 2** to attach the (3) other mounting tabs on the Tiger Star Armor to the **2nd**, **3rd** and **rear** mounting locations (Figs 2 & 5).

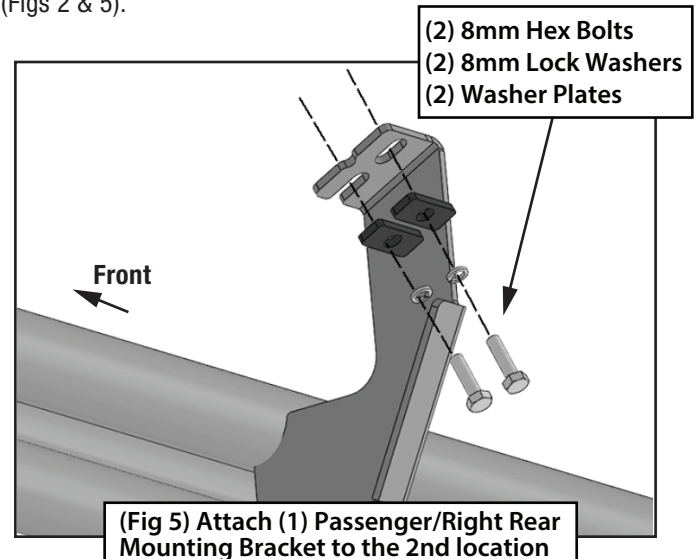

STEP 4

Level and adjust the Tyger Armor and tighten all hardware.

STEP 5

Repeat **STEPS 1-4** to attach the Driver/Left Tyger Armor.

STEP 6

Do periodic inspections to the installation to make sure that all hardware is secure and tight.