

# TYGER ACCESS

TG-AS2C24036

Scan to Download the Latest Digital Version



#### **BEFORE INSTALLATION**

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

#### **TORQUE VALUES**

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- Driver/Left Tyger Access
- Passenger/Right Tyger Access
- Driver/Left Mounting Brackets [A]
- x4 Passenger/Right Front Mounting Bracket [B]
- 8mm Lock Washers
- 8mm x 24mm OD x 2mm Flat Washers
- x16 8-1.25mm x 30mm Hex Bolts
- 8-1.25mm x 25mm Hex Combo Bolts

Parts List


#### **Top View**

**ATTENTION:** Refer to **1** and **2** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

Passenger Side TYGER Access

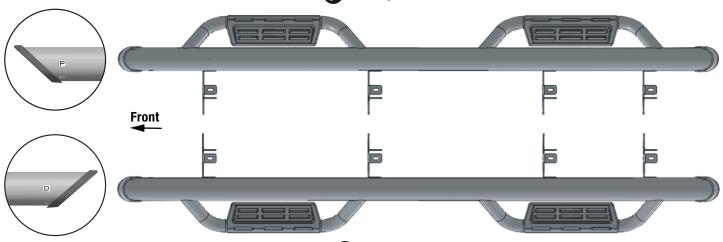



Driver Side TYGER Access

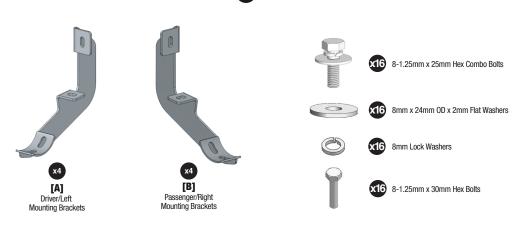



### Reference the letters printed on the brackets to determine mounting locations

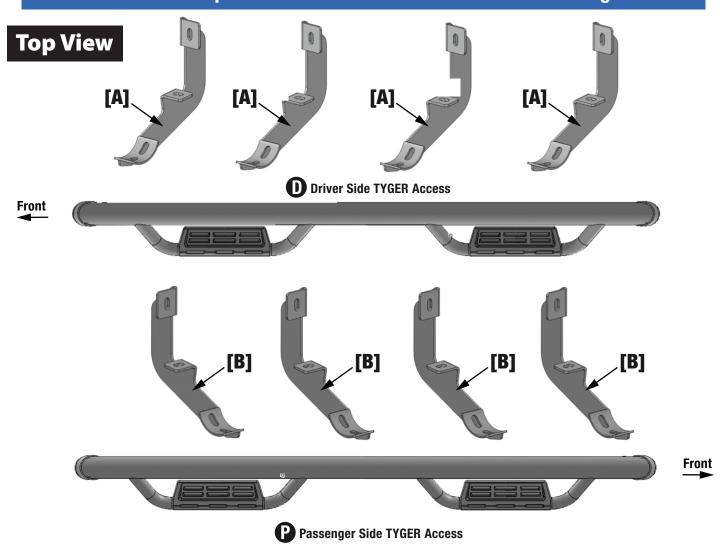


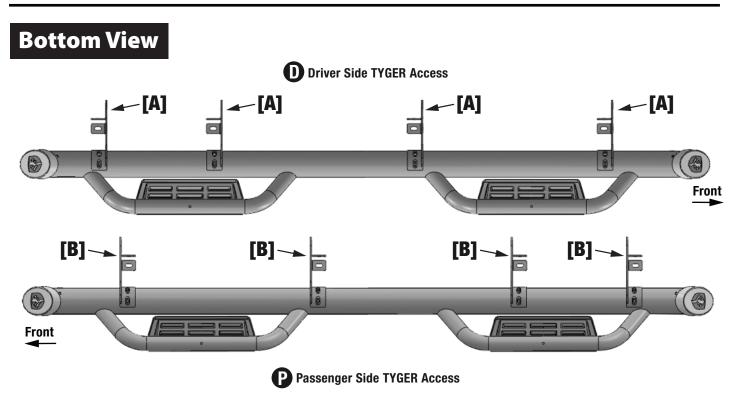




#### **TOOLS REQUIRED**



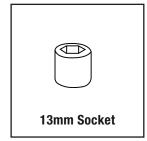

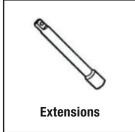





# STEP1

#### **MOUNTING BRACKETS**

Follow (Fig 1-7) to attach the brackets to the Passenger/Right Side. Ensure all hardware is hand tightened for this step.




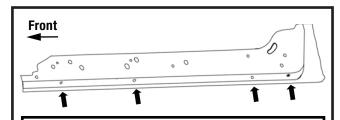


(Fig 1) Passenger/Right "Early" rocker panel mounting locations (arrows). NOTE: Hold brackets up to body panel to help determine the correct mounting locations.




Passenger-side Front Mounting Areas

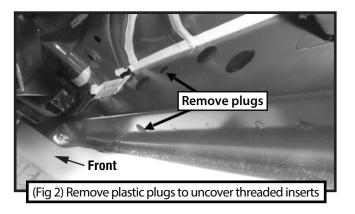


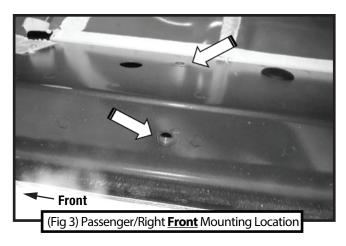



### Passenger-side 2nd & 3rd Mounting Areas

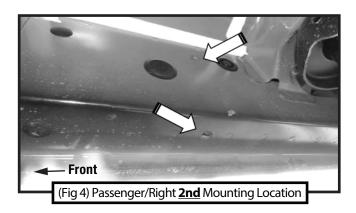


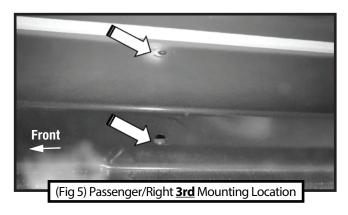




### 9


#### Passenger-side Rear Mounting Areas

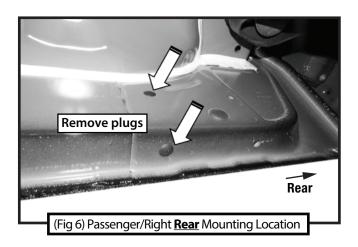

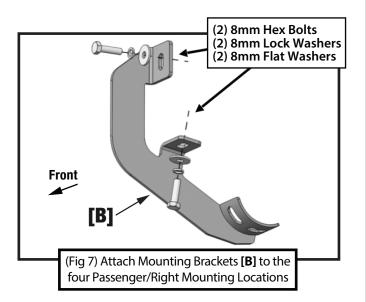

# MOUNTING RUNNING BOARD


Follow (Fig 8) to install the Access Drop Step on the Passenger/Right. **Ensure all hardware is <u>hand tightened</u> at this point**.

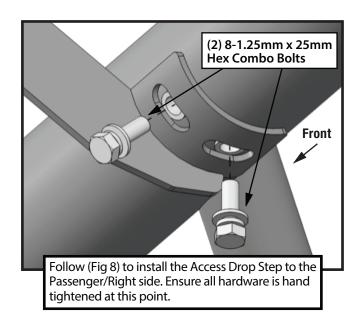

### STEP 3 DR

#### **DRIVER SIDE**

Repeat **STEPS 1-2** for driver side installation. Use Mounting Brackets [A] instead of [B].



## STEP 4

### **COMPLETION**

Ensure Access Drop Step is level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

