

TYGER ACCESS

TG-AS2D24038

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


Parts List

- | | | |
|--|--|---|
| x1 Driver/Left Tyger Access | x1 Driver/Left Rear Support Bracket [G] | x18 8mm x 24mm OD x 2mm Flat Washers |
| x1 Passenger/Right Tyger Access | x1 Passenger/Right Rear Support Bracket [H] | x12 6mm Nylon Lock Nuts |
| x2 Driver/Left Front/Center Mounting Brackets [A] | x6 Plastic Retainers | x6 8mm Nylon Lock Nuts |
| x1 Driver/Left Rear Mounting Bracket [B] | x6 8-1.25mm x 30mm Bolt Plates | x6 8mm Hex Nuts |
| x2 Passenger/Right Front/Center Mounting Brackets [C] | x12 8-1.25mm x 25mm Hex Combo Bolts | x6 8mm Lock Washers |
| x1 Passenger/Right Rear Mounting Bracket [D] | x12 6-1.0mm x 25mm Hex Bolts | |
| x2 Passenger/Right Front/Center Support Brackets [E] | x12 8-1.25mm x 30mm Hex Bolts | |
| x2 Driver/Left Front/Center Support Brackets [F] | x24 6mm x 22mm OD x 2mm Flat Washers | |


Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

P Passenger Side TYGER Access

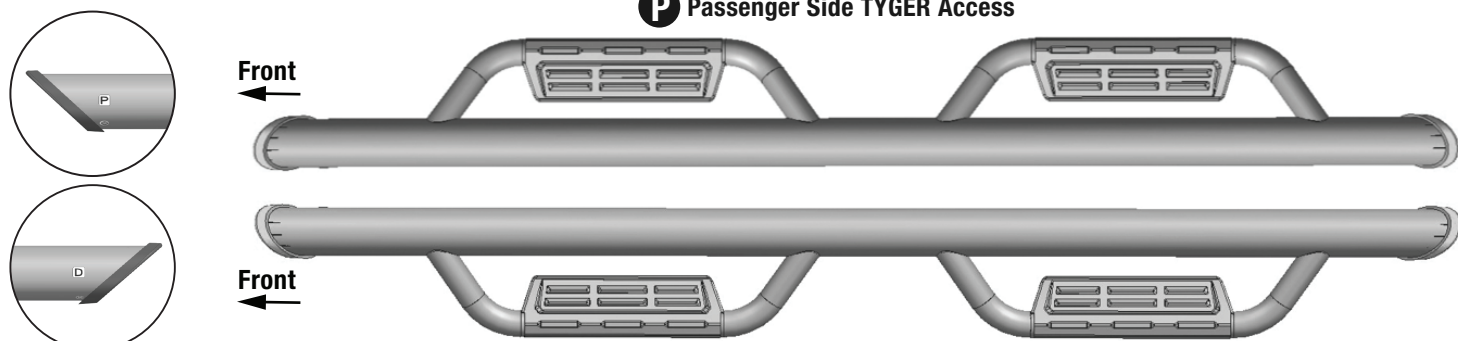


D Driver Side TYGER Access

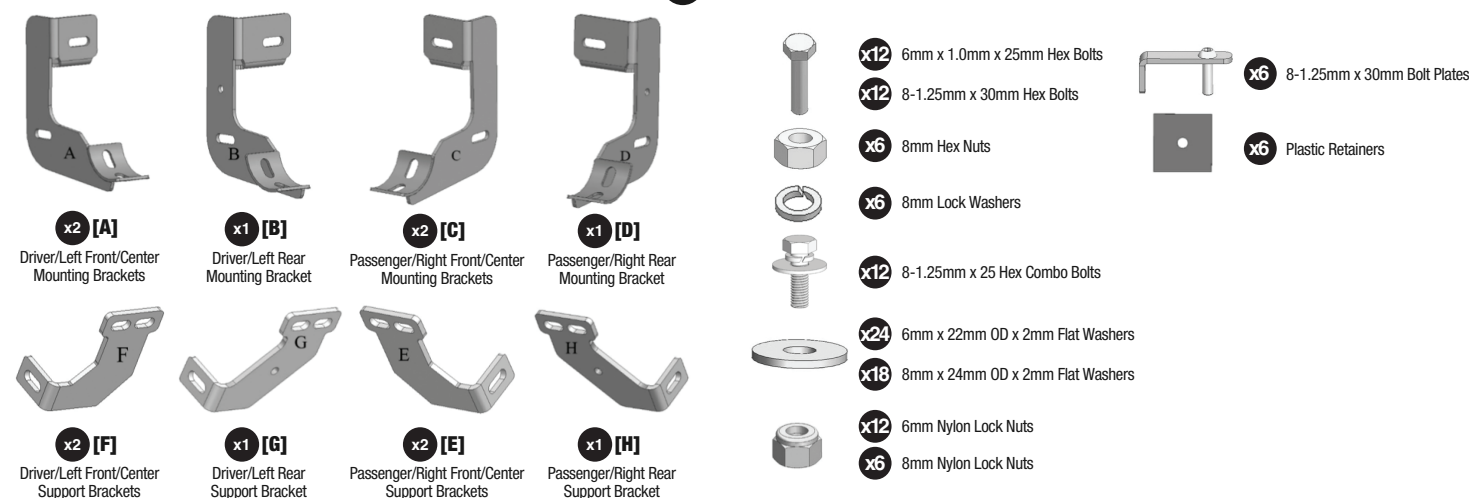

Reference the letters printed on the brackets to determine mounting locations

Top View


D Driver Side TYGER Access

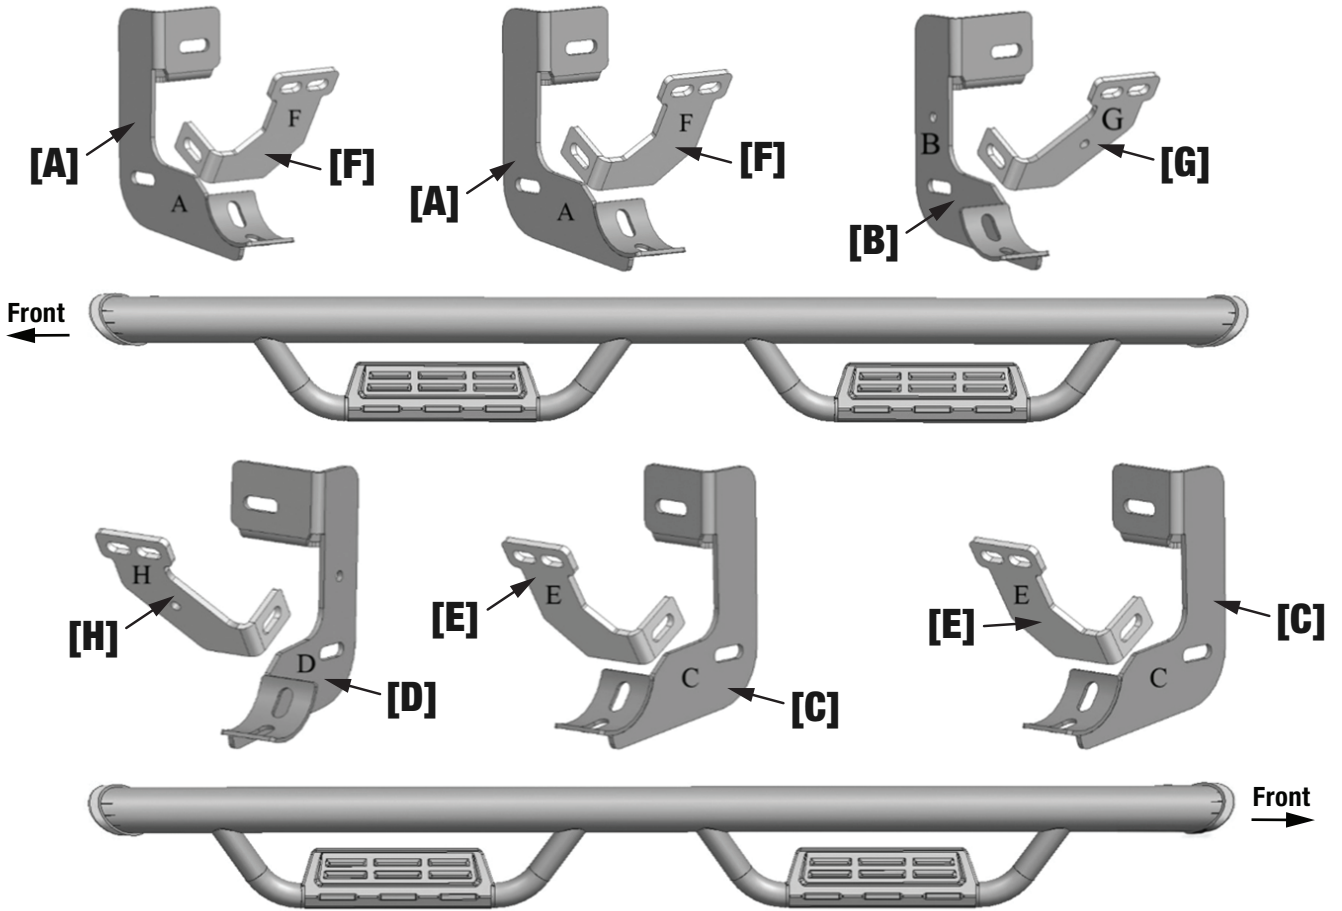

P Passenger Side TYGER Access






Bottom View

D Driver Side TYGER Access

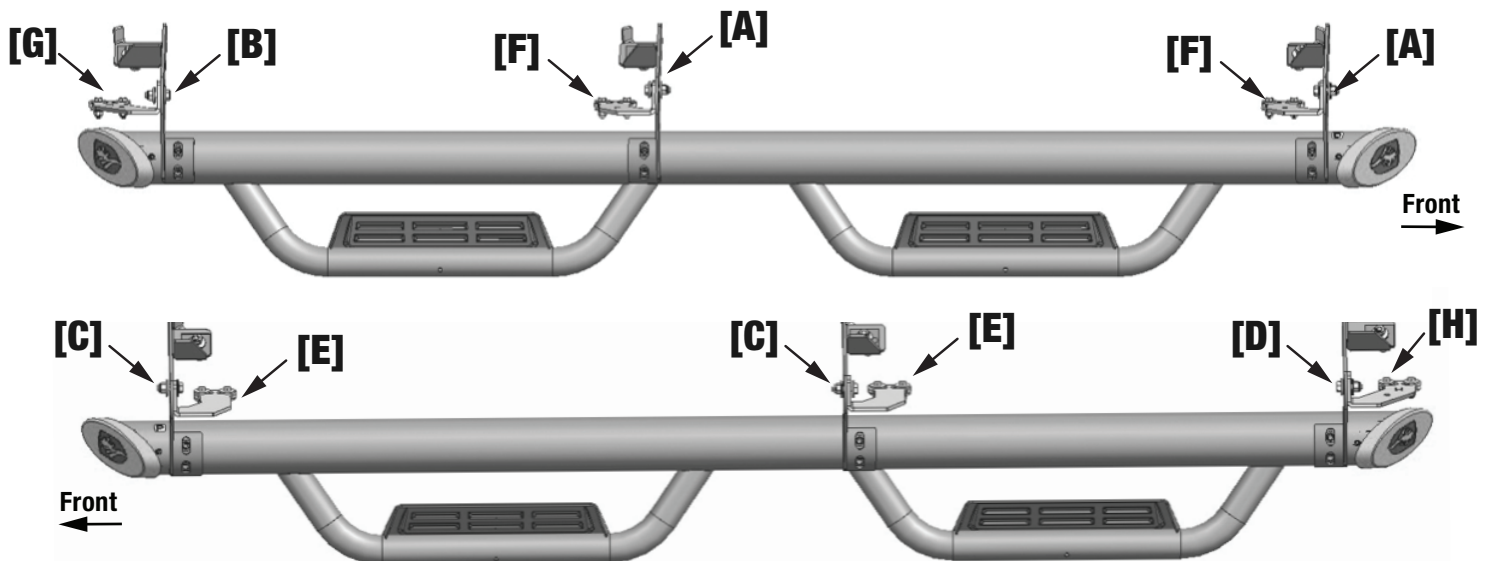


P Passenger Side TYGER Access

TOOLS REQUIRED

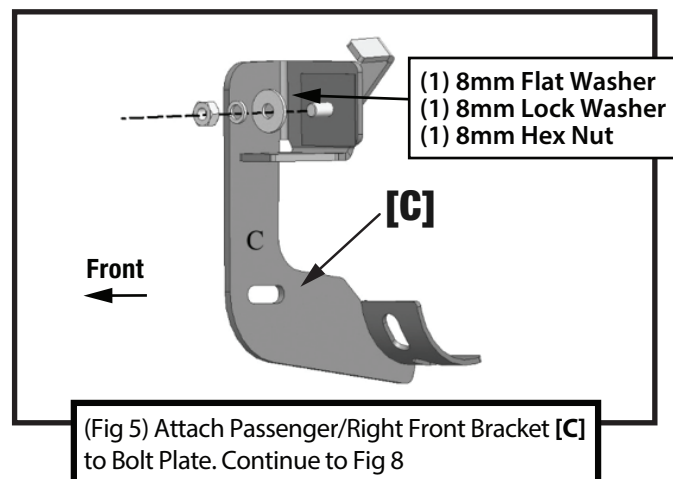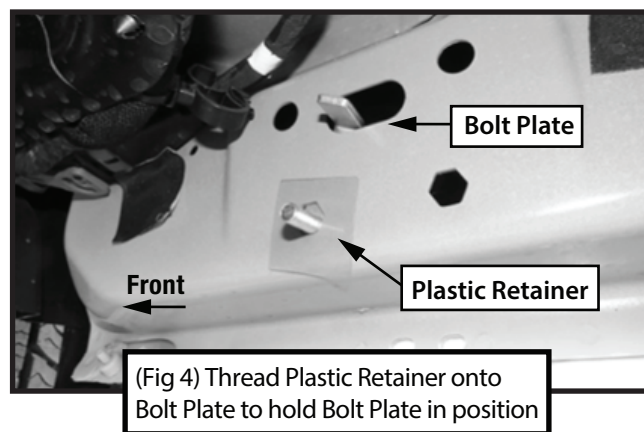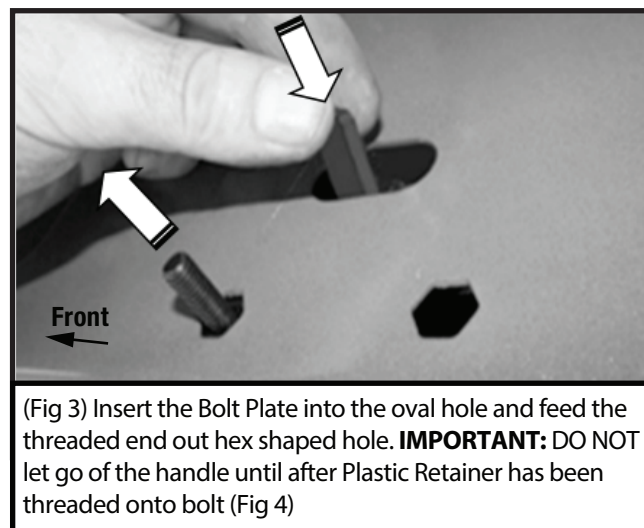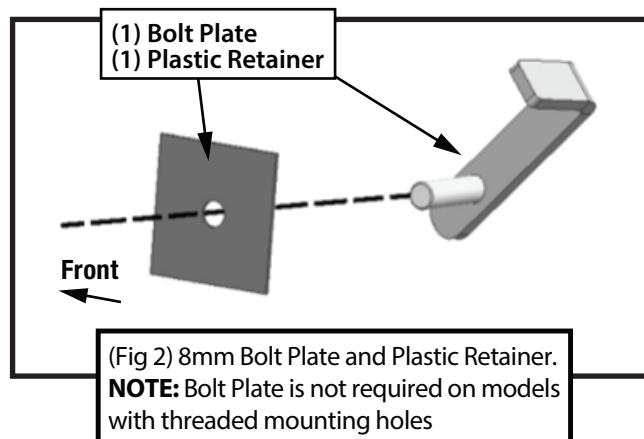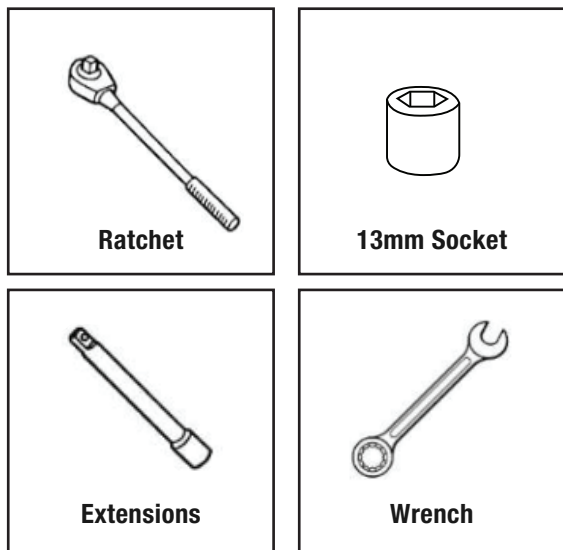


STEP 1 PASSENGER SIDE MOUNTING BRACKETS

Follow (Fig 1 – 17) to attach Mounting Brackets to the Passenger/Right Side starting at Front. Then add Support Brackets to Mounting Brackets. **Ensure all hardware is hand tightened at this point.**

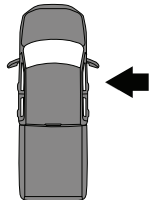


Passenger side Front Mounting Area


2009-Mid 2015 Models

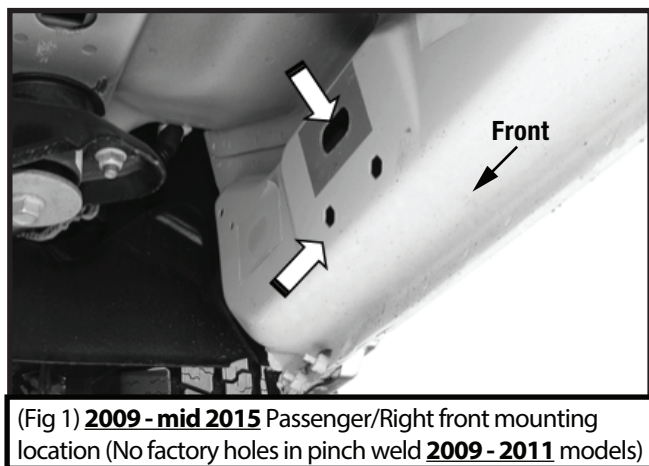

Mid 2015+ Models

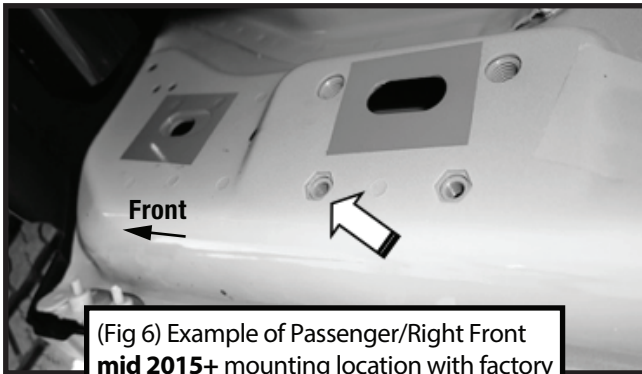


(Fig 6) Example of Passenger/Right Front mid 2015+ mounting location with factory installed threaded mounting

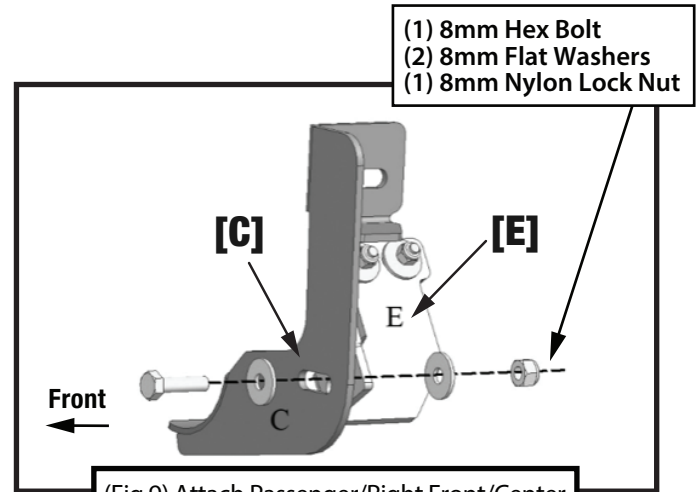


(Fig 9) Attach Passenger/Right Front/Center Support Bracket [E] to rear facing side of Mounting Bracket [C]


IMPORTANT: 2009-2011 models without holes in pinch weld will require drilling 1/4" holes through pinch weld to attach Support Brackets. Do complete installation of Access Drop Steps first, level Drop Steps before drilling holes for Support Brackets.

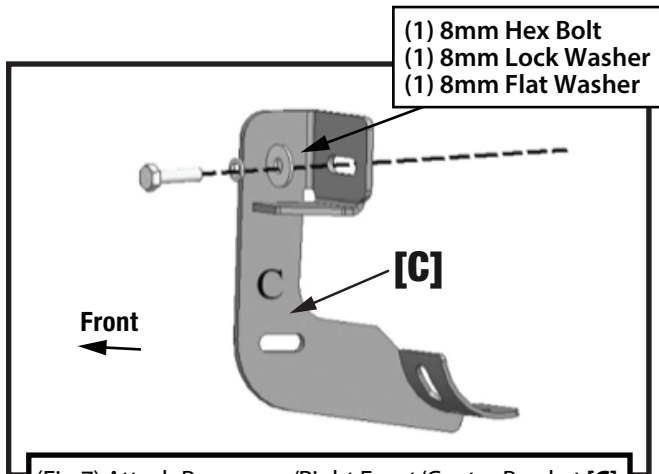

(Fig 7) Attach Passenger/Right Front/Center Bracket [C] directly to threaded holes in mounting location (Fig 6)

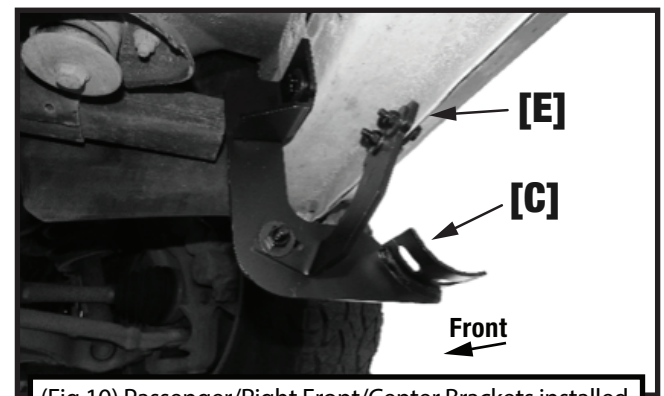


(Fig 10) Passenger/Right Front/Center Brackets installed

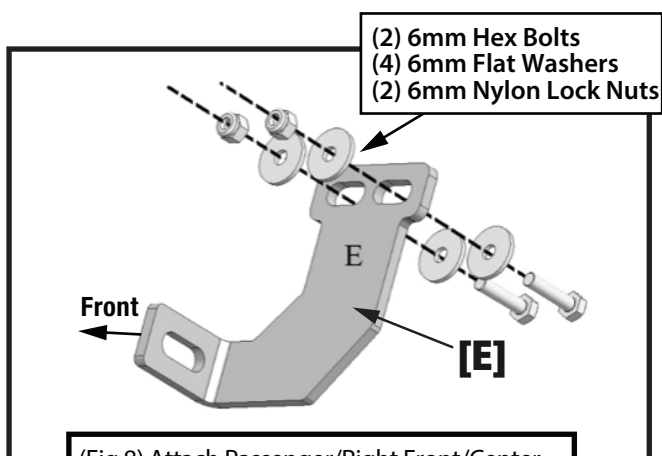

(Fig 8) Attach Passenger/Right Front/Center Support Bracket [E] to back of pinch weld (models with factory holes in pinch weld only)



Passenger side Center Mounting Area

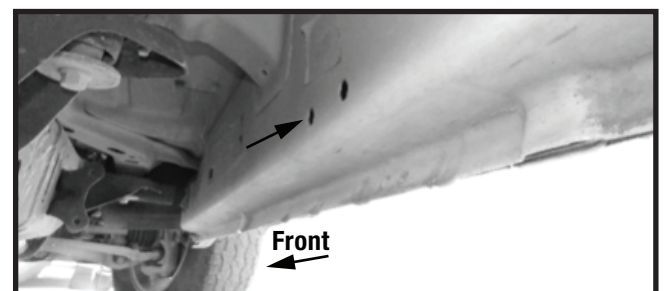


(Fig 11) Repeat Fig 1-10 to install Passenger/Right Front/Center Mounting Bracket [C] and Support Bracket [E] to the center mounting location.

Image is the example of Passenger/Right Center Mounting Location without threaded holes. Insert Bolt Plate into oval hole and out forward hex hole (arrow). Refer to (Fig 3 & 4)




Passenger side Rear Mounting Area

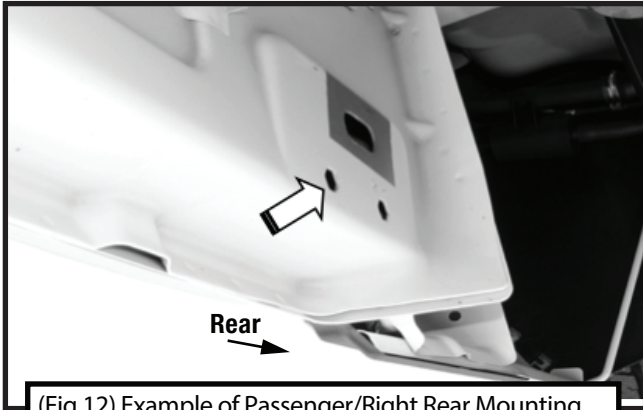


(Fig 12) Example of Passenger/Right Rear Mounting Location without threaded holes. Insert Bolt Plate into oval hole and out forward hex hole (arrow). Refer to (Fig 3 & 4)

- (1) 8mm Flat Washer
- (1) 8mm Lock Washer
- (1) 8mm Hex Nut

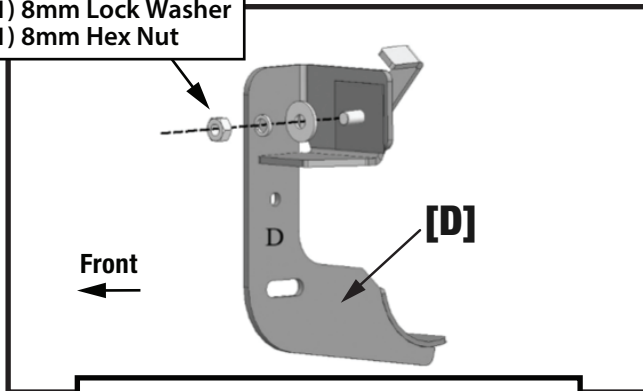


(Fig 13) For **2009-mid 2015** models, attach Passenger/Right Rear Bracket [D] to Bolt Plate

- (1) 8mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm Flat Washer

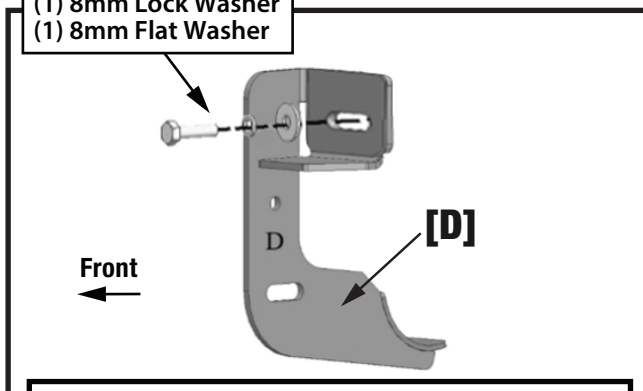


(Fig 14) For **Mid 2015+** models, attach Passenger/Right Front/Center Bracket [D] directly to threaded holes in mounting location (Fig 6)

- (2) 6mm Hex Bolts
- (4) 6mm Flat Washers
- (2) 6mm Nylon Lock Nuts

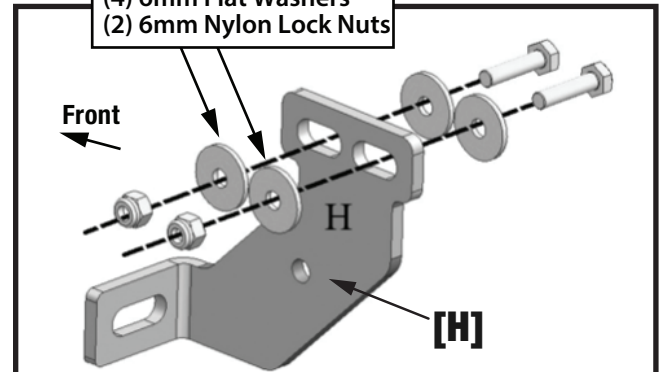


(Fig 15) Attach Passenger/Right Rear Support Bracket [H] to back of pinch weld (models with factory holes in pinch weld only)

- (1) 8mm Hex Bolt
- (2) 8mm Flat Washers
- (1) 8mm Nylon Lock Nut

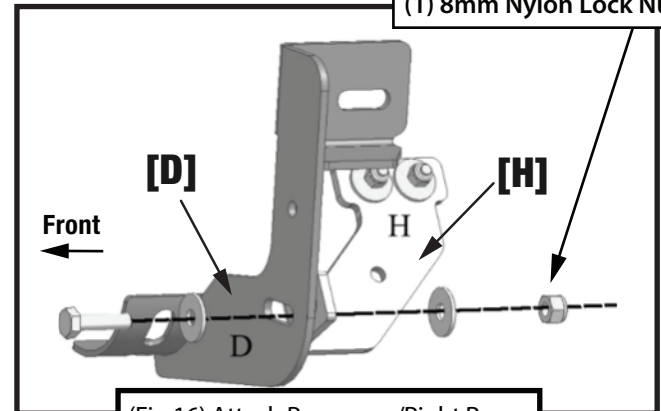


(Fig 16) Attach Passenger/Right Rear Support Bracket [H] to rear facing side of Mounting Bracket [D]

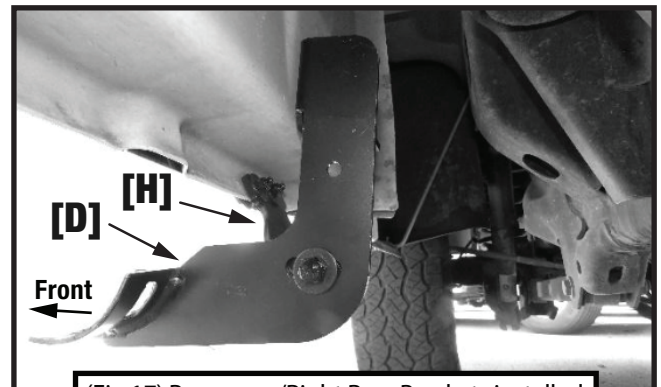


(Fig 17) Passenger/Right Rear Brackets installed

STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 18 – 19) to install the Access Drop Step on the Passenger/Right. **Ensure all hardware is hand tightened at this point.**

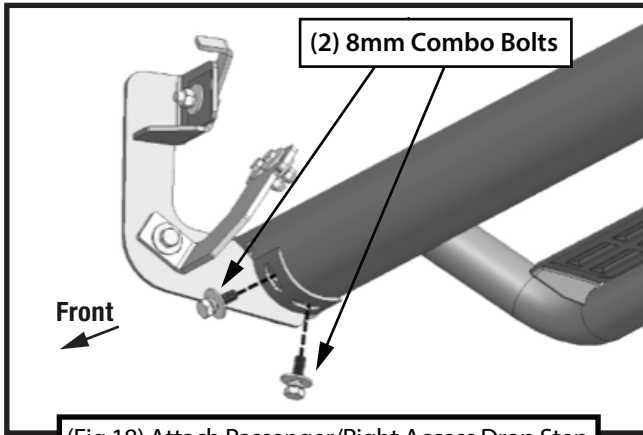

(Fig 18) Attach Passenger/Right Access Drop Step to Passenger/Right Mounting Brackets

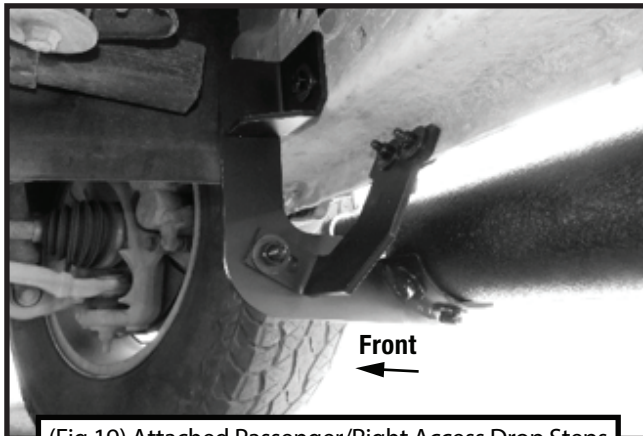


(Fig 19) Attached Passenger/Right Access Drop Steps

STEP 3 DRIVER SIDE MOUNTING BRACKETS

Repeat **STEPS 1 & 2** for driver side brackets installation.

Use Front & Center Mounting Brackets **[A]** instead of **[C]**;
Use Rear Mounting Bracket **[B]** instead of **[D]**.

Use Front & Center Support Bracket **[F]** instead of **[E]**;
Use Rear Support Bracket **[G]** instead of **[H]**.

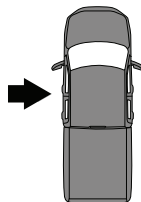

STEP 4

Ensure TYGER Access Steps are level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation