

TYGER ACCESS

TG-AS2F24032

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1 Driver/Left Tyger Access
- x1 Passenger/Right Tyger Access
- Driver/Left Front Mounting Bracket [A]
- x2 Driver/Left Center/Rear Mounting Brackets [B]
- Passenger/Right Front Mounting Bracket [C]
- Passenger/Right Center/Rear Mounting Brackets [D]
- 10mm Lock Washers
- 10 1.5mm x 25mm Hex Bolts


10mm x 27mm 0D x 3mm Flat Washers


x12 8 – 1.25mm x 25mm Hex Combo Bolts

Parts List

Top View

ATTENTION: Refer to and labelling on the side of the tubes to determine Driver and Passenger TYGER Access

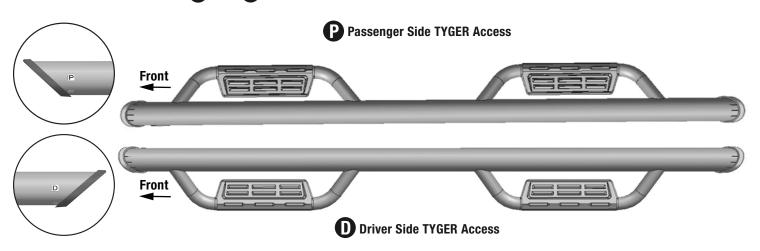

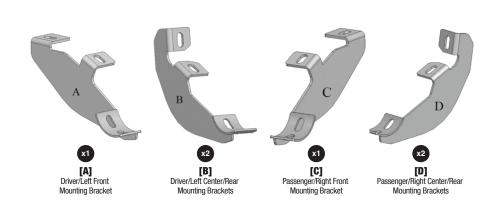



8-1.25mm x 25mm Hex Combo Bolts



10mm x 27mm 0D x 3mm Flat Washers




10mm Lock Washers




10 – 1.5mm x 25mm Hex Bolts



Reference the letters printed on the brackets to determine mounting locations

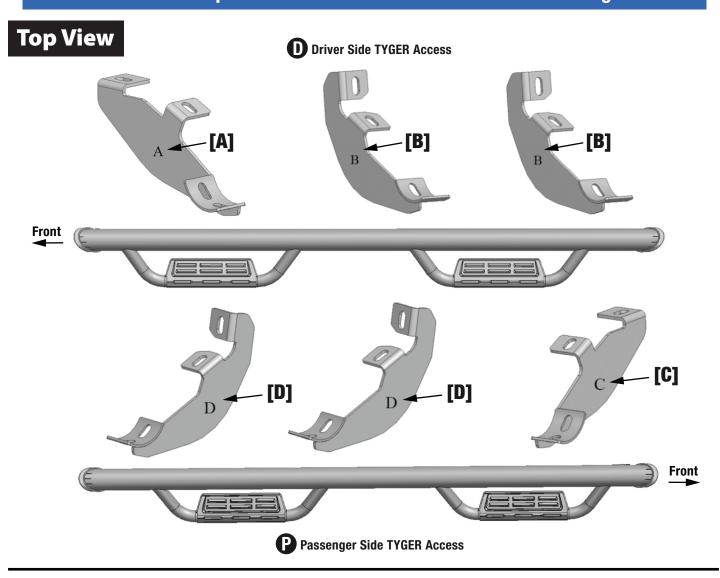


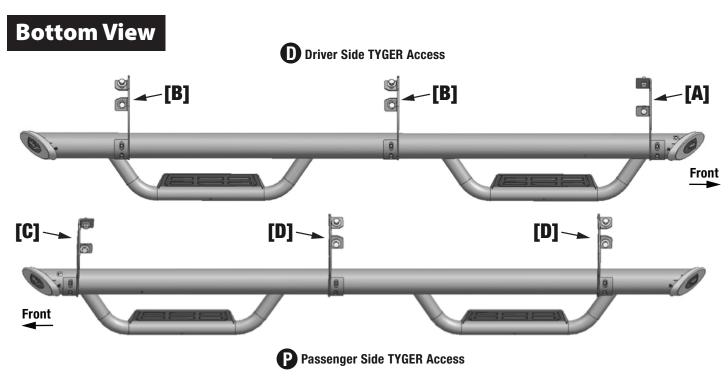





TOOLS REQUIRED



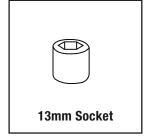

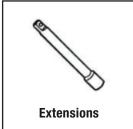



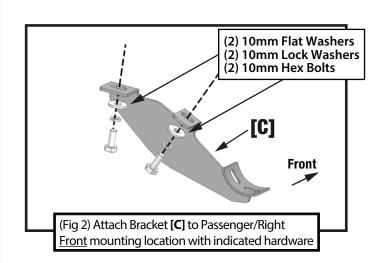


STEP1

MOUNTING BRACKETS


Follow (Fig 1-9) to attach the brackets to the Passenger/Right Side. Ensure all hardware is hand tightened for this step.



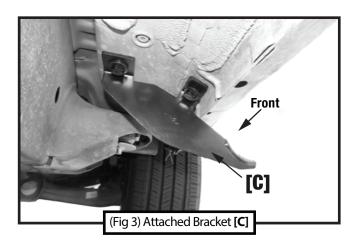




Passenger-side Front Mounting Areas

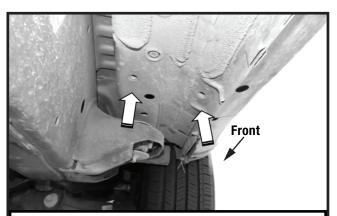



(Fig 1) Locate Passenger/Right side front mounting location. Remove any plastic plugs in the threaded inserts.



Passenger-side **Center** Mounting Areas

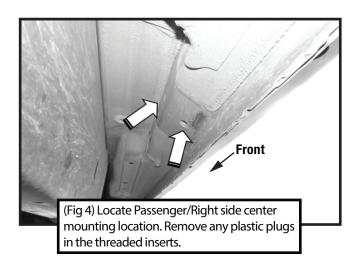


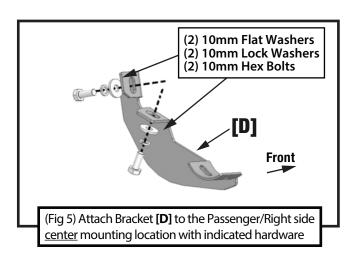


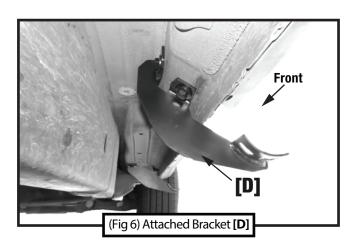


9

Passenger-side Rear Mounting Areas

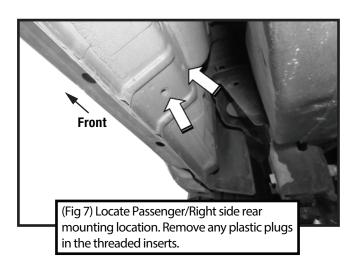


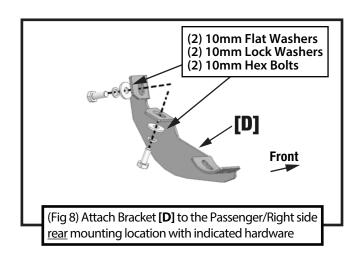

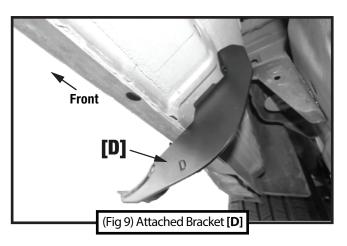

MOUNTING RUNNING BOARD

Follow (Fig 10) to install the Access Drop Step on the Passenger/Right. **Ensure all hardware is <u>hand tightened</u> at this point**.

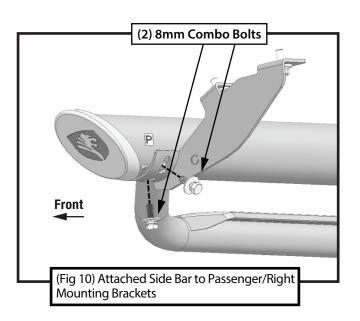





DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation.
Use <u>Front</u> Mounting Bracket **[A]** instead of **[C]**;
Use <u>Center/Rear</u> Mounting Brackets **[B]** instead of **[D]**.



STEP 4

COMPLETION

Ensure Access Drop Step is level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

