

# TYGER ACCESS

TG-AS2F24039

Scan to Download the **Latest Digital Version** 



#### **BEFORE INSTALLATION**

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

#### **TORQUE VALUES**

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- Driver/Left Tyger Access
- 21 Passenger/Right Tyger Access
- Driver/Left Front Mounting Bracket [A]
- Passenger/Right Front Mounting Bracket [D]
- x1 Driver/Left Center Mounting Bracket [B]
- x1 Passenger/Right Center Mounting Bracket [E]
- Driver/Left Rear Mounting Bracket [C]
- x1 Passenger/Right Rear Mounting Bracket [F]
- x12 8-1.25mm x 25mm Hex Combo Bolts
- x12 10mm x 27mm OD x 3mm Flat Washers


x12 10-1.5mm x 30mm Hex Bolts

10mm Lock Washers

Parts List

#### **Top View**


**ATTENTION:** Refer to **(1)** and **(2)** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

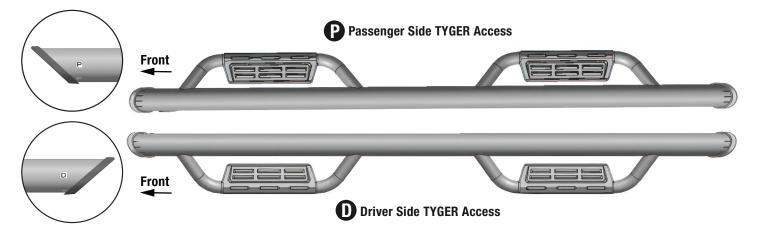






[B] Driver/Left Center Mounting Bracket

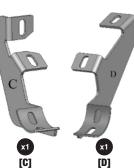

Driver/Left Rear Mounting Bracket













- 8-1.25mm x 25mm Hex Combo Bolts
- 10mm x 27mm 0D x 3mm Flat Washers
- 10mm Lock Washers
- 10-1.5mm x 30mm Hex Bolts



## Reference the letters printed on the brackets to determine mounting locations

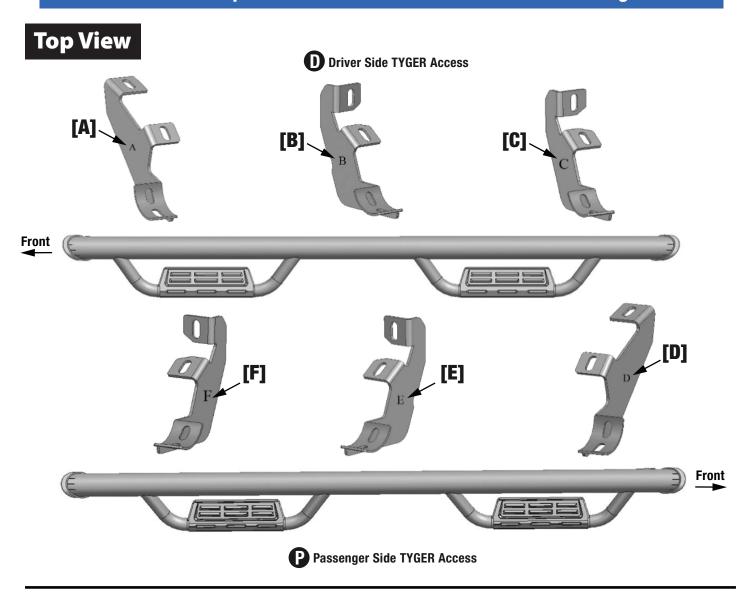


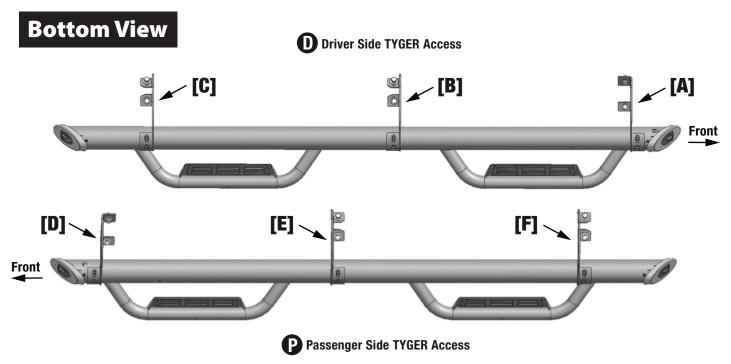






### **TOOLS REQUIRED**



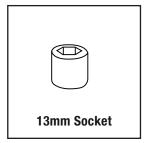

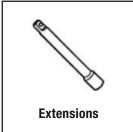

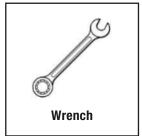


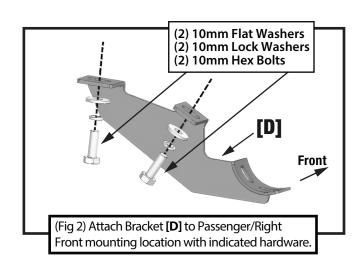


# STEP1

#### **MOUNTING BRACKETS**


Follow (Fig 1-9) to attach the brackets to the Passenger/Right Side. **Ensure all hardware is <u>hand tightened</u> for this step.** 



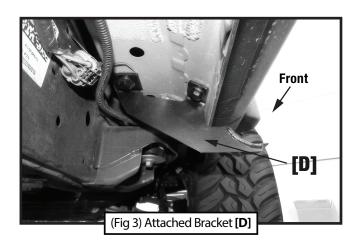




### Passenger-side <u>Front</u> Mounting Areas

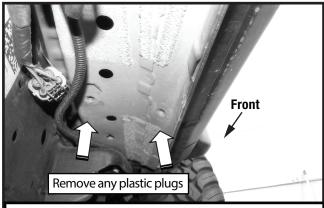


(Fig 1) Locate Passenger/Right side <u>front</u> mounting location. Remove any plastic plugs in the threaded inserts.




#### Passenger-side <u>Center</u> Mounting Areas

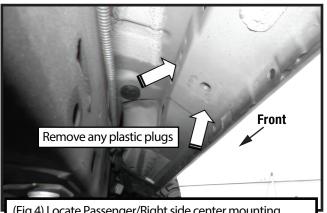


(Fig 4) Locate Passenger/Right side <u>center</u> mounting location. Remove any plastic plugs in the threaded inserts.

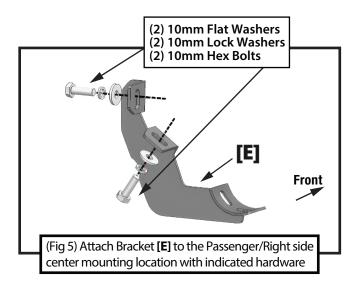


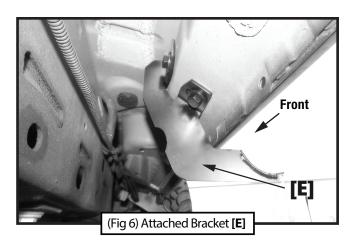




#### Passenger-side Rear Mounting Areas

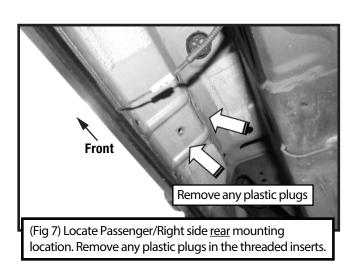


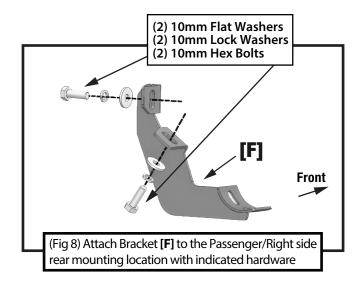

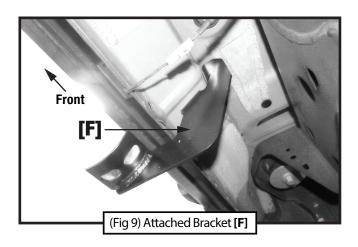

# MOUNTING RUNNING BOARD

Follow (Fig 10) to install the Access Side Step on the Passenger/Right. **Ensure all hardware is <u>hand tightened</u> at this point**.

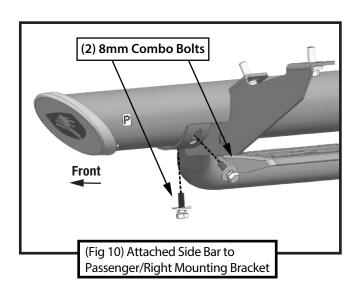






#### **PASSENGER SIDE**

Repeat **STEP 1-2** to install mounting brackets to the 3 mounting locations at Driver/Left side.

Use Front Mounting Bracket [A] instead of [D];

Use **Center** Mounting Bracket [B] instead of [E];

Use Rear Mounting Bracket [C] instead of [F].



# STEP 4

### **COMPLETION**

Ensure Access Drop Step is level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

