



TYGER®

TYGER ACCESS

TG-AS2F24041

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

x1 Driver/Left Tyger Access **D**

x1 Passenger/Right Tyger Access **P**

x3 Driver/Left Mounting Brackets **[A]**

x3 Passenger/Right Mounting Brackets **[B]**

x12 8-1.25 x 25mm Hex Combo Bolts

x18 10mm x 27mm OD x 3mm Flat Washers

x12 10-1.5 x 30mm Hex Bolts

x6 10mm Hex Nuts

x12 10mm Lock Washers


x6 10mm Clip Nuts

Parts List


Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

P Passenger Side TYGER Access

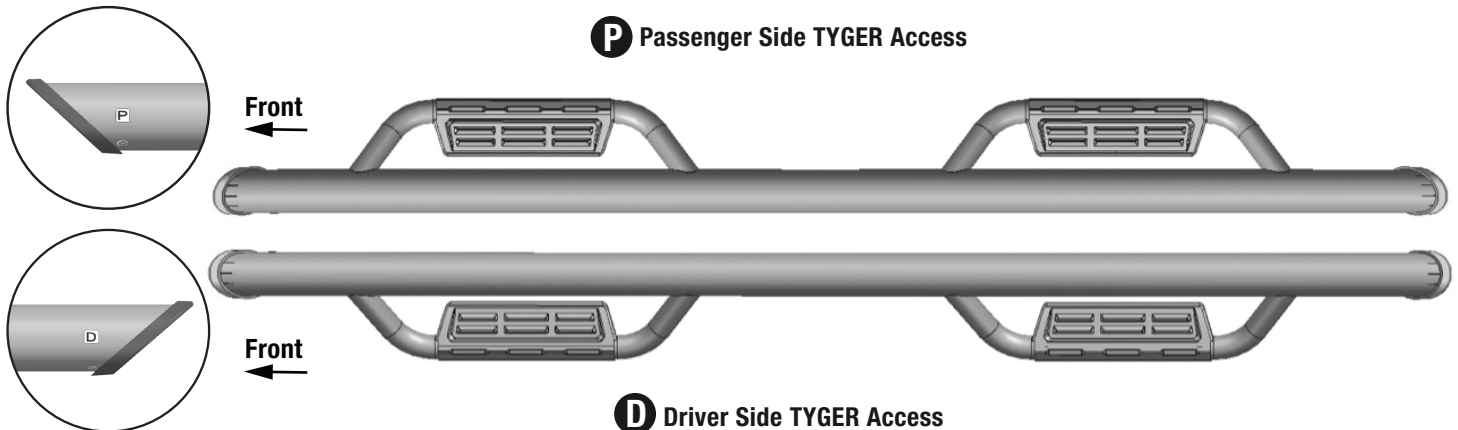


D Driver Side TYGER Access

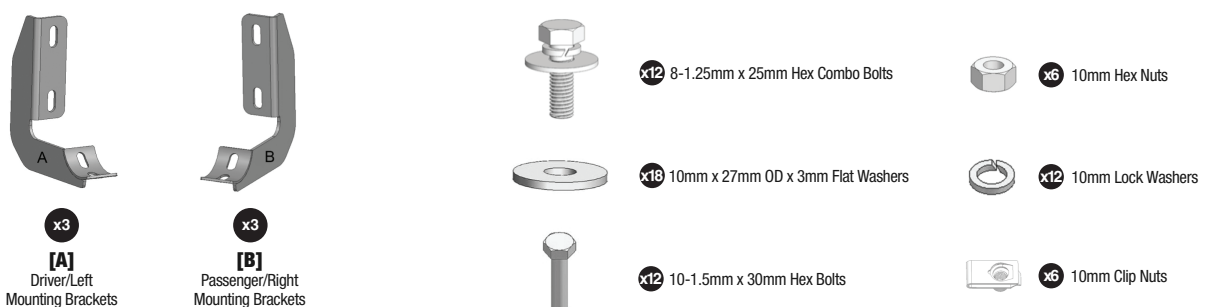


Reference the letters printed on the brackets to determine mounting locations


Top View

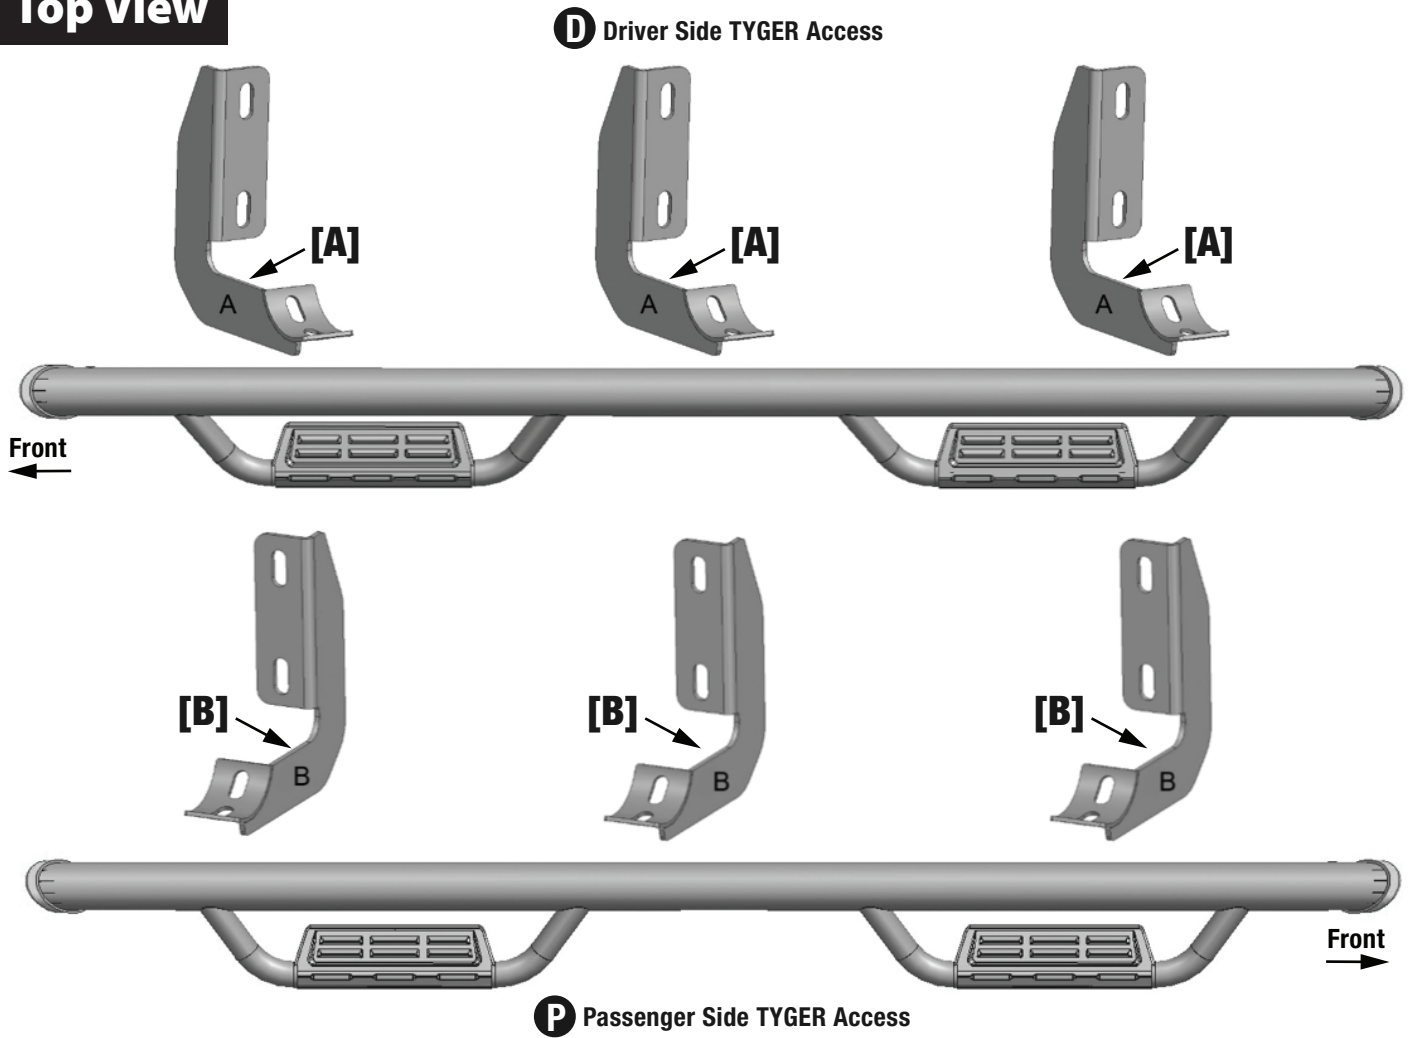

Bottom View

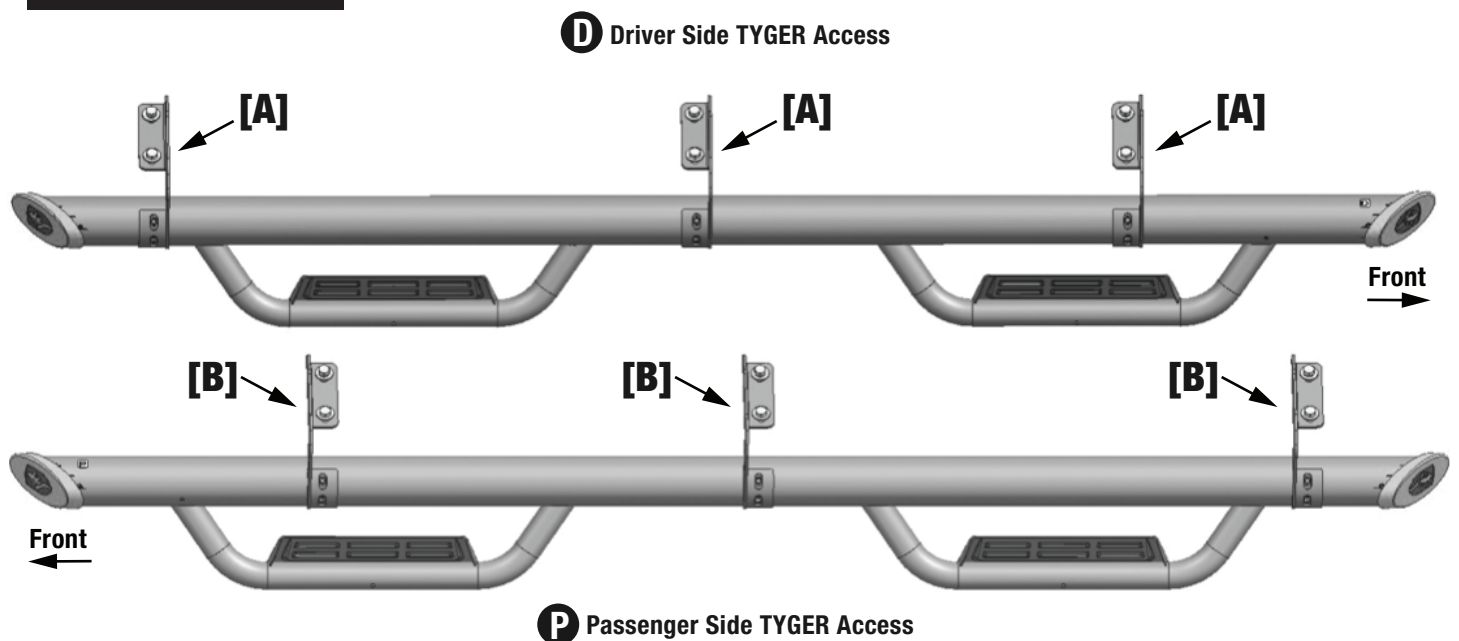


TOOLS REQUIRED

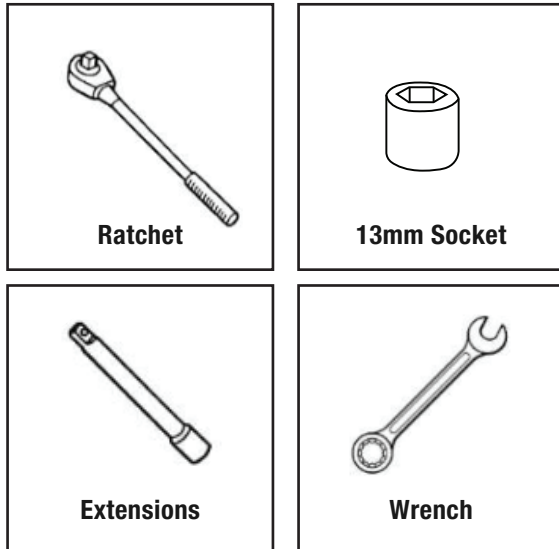


- (1) 10mm Hex Nuts
- (1) 10mm Lock Washer
- (2) 10mm x 27mm OD x 3mm Flat Washers
- (1) 10-1.5 x 30mm Hex Bolts

- (1) 10mm Clip Nut
- (1) 10mm x 27mm OD x 3mm Flat Washer
- (1) 10mm Lock Washer
- (1) 10-1.5 x 30mm Hex Bolts

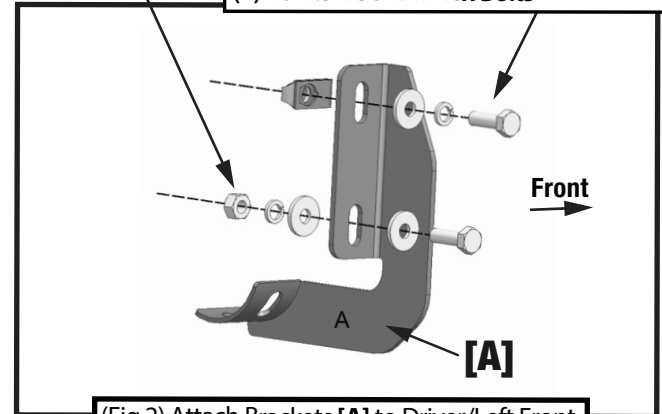


(Fig 2) Attach Brackets [A] to Driver/Left Front mounting location with indicated hardware

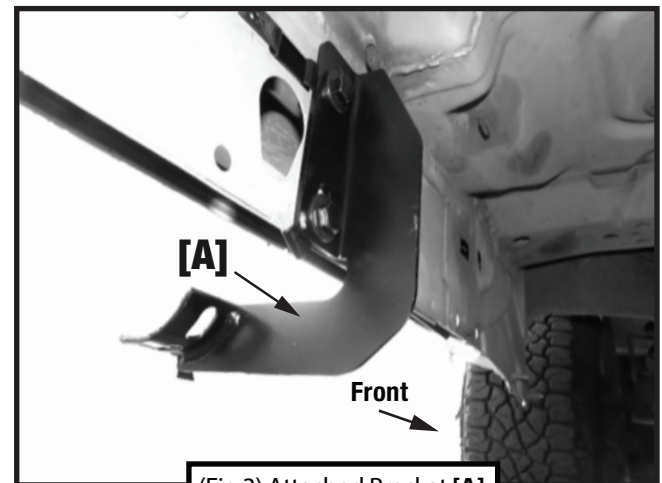


(Fig 3) Attached Bracket [A]

STEP 1 MOUNTING BRACKETS

Follow (Fig 1 – 7) to attach Driver/Left Mounting Brackets to the Driver/Left side. **Ensure all hardware is hand tightened for this step.**

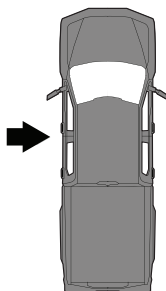


Driver Front Mounting Areas

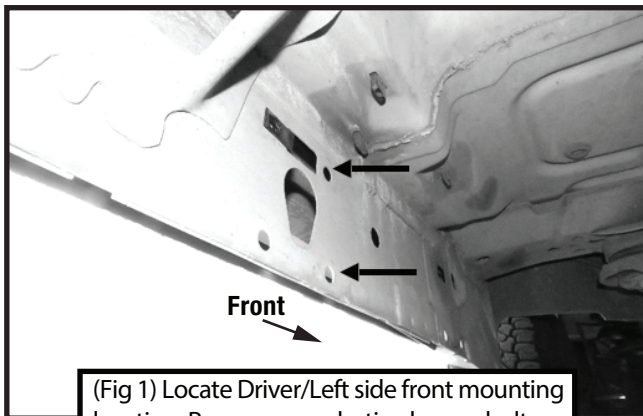


(Fig 1) Locate Driver/Left side front mounting location. Remove any plastic plugs or bolts. Add clip nut to the top mounting point




Driver Center Mounting Areas

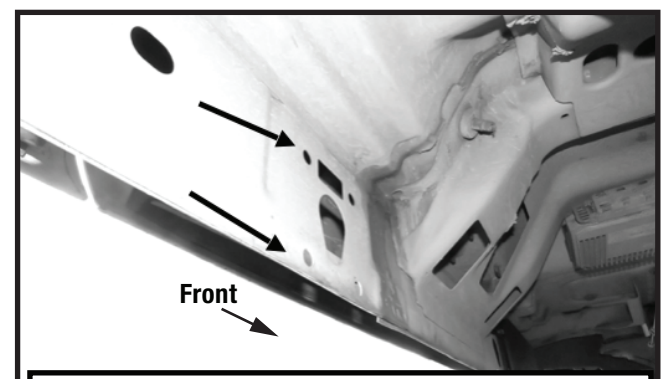


(Fig 4) Locate Driver/Left side center mounting location. Remove any plastic plugs or bolts, and add clip nut to the top mounting point. Attach Bracket [A] to mounting location using same hardware as Fig 2

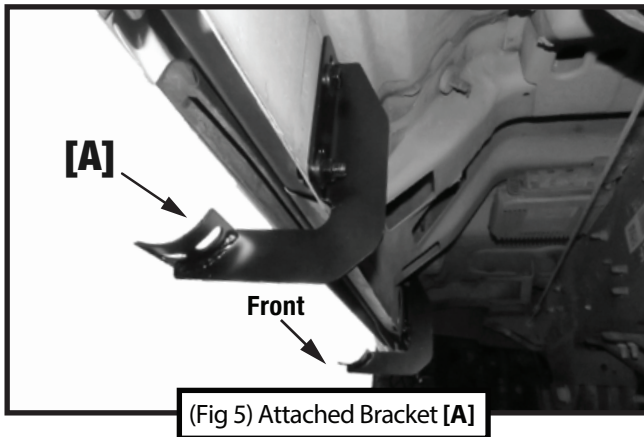

Driver Rear Mounting Areas


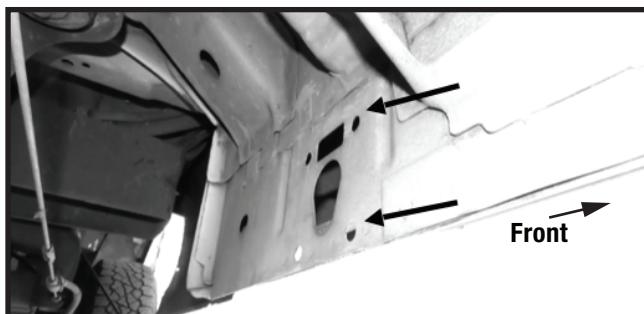


(Fig 6) Locate Driver/Left side rear mounting location. Remove any plastic plugs or bolts, and add clip nut to the top mounting point. Attach Bracket [A] to mounting location using same hardware as Fig 2

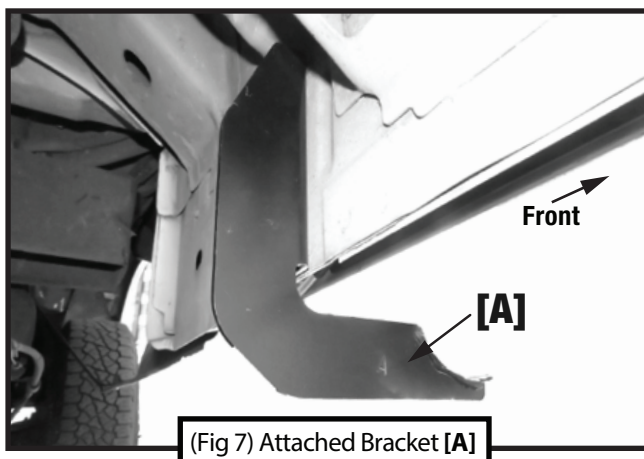

STEP 3 MOUNTING RUNNING BOARD


Follow (Fig 8 – 9) to install the TYGER Access Side Step on the Driver/Left side. **Ensure all hardware is hand tightened at this point.**

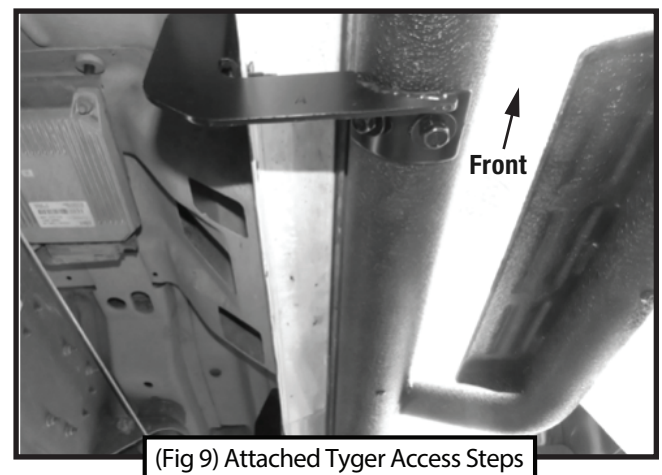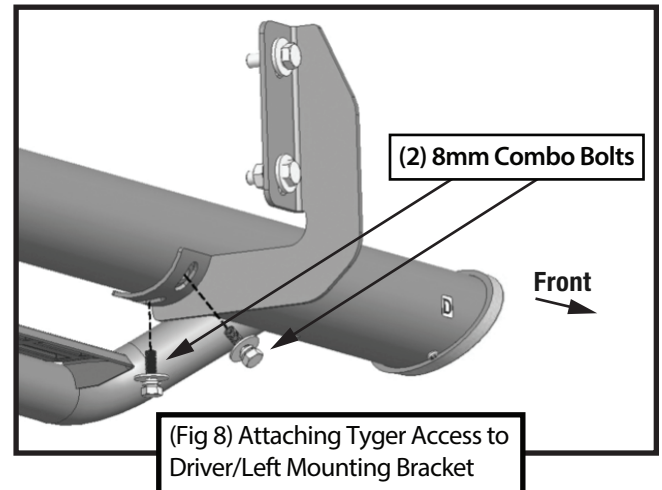

STEP 3 PASSENGER SIDE

Repeat **STEP 1-3** to install mounting brackets to the 3 mounting locations at Passenger/Right side.

Use Mounting Brackets [B] instead of [A].

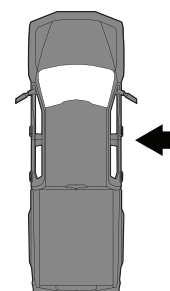

STEP 4 COMPLETION

Ensure TYGER Access is level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation