



TYGER®

TYGER ACCESS

TG-AS2J24012

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT:

WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- | | | |
|---|---|---|
| <ul style="list-style-type: none"> x1 Driver/Left Tyger Access x1 Passenger/Right Tyger Access x1 Driver/Left Front Mounting Bracket [A] x1 Passenger/Right Front Mounting Bracket [D] x1 Driver/Left Center Mounting Bracket [B] x1 Passenger/Right Center Support Bracket [E] x1 Driver/Left Rear Mounting Bracket [C] | <ul style="list-style-type: none"> x1 Passenger/Right Rear Mounting Bracket [F] x3 Driver/Left Support Bracket [G] x3 Passenger/Right Support Bracket [H] x6 T Shaped Nuts x12 8-1.25mm x 25mm Hex Combo Bolts x6 8mm x 28mm OD x 3mm Flat Washers x24 6mm x 22mm OD x 2mm Flat Washers x6 10mm x 34mm OD x 3mm Flat Washers x12 10mm x 20mm OD x 2mm Flat Washers | <ul style="list-style-type: none"> x6 8mm Lock Washers x6 10mm Lock Washers x6 8-1.25mm x 35mm Hex Bolts x12 6-1.0mm x 25mm Hex Bolts x6 10-1.5mm x 35mm Hex Bolts x6 10-1.5mm x 30mm Hex Bolts x12 6mm Nylon Lock Nuts x6 10mm Nylon Lock Nuts |
|---|---|---|

Parts List


Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

P Passenger Side TYGER Access

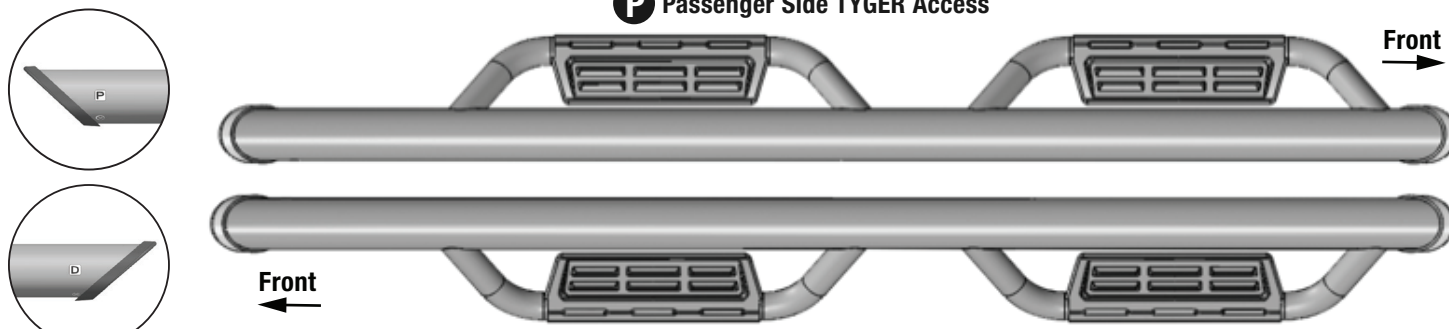


D Driver Side TYGER Access

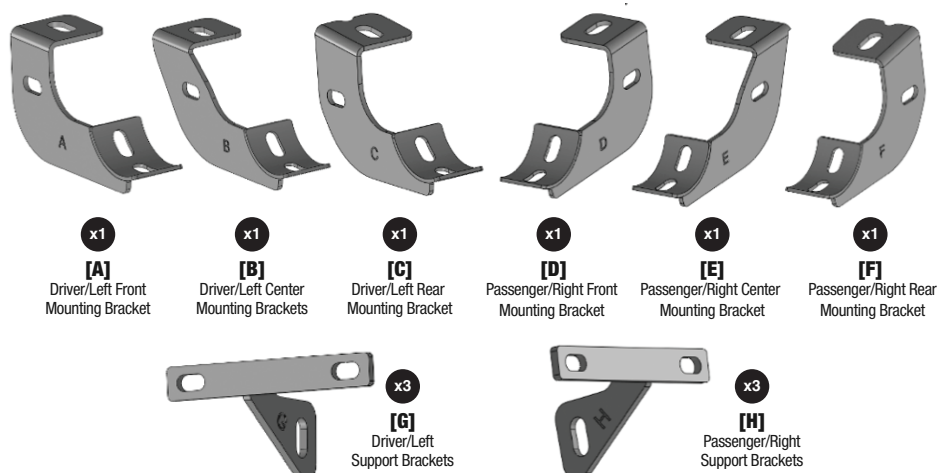


- x12 8-1.25mm x 25mm Hex Combo Bolts
- x6 8mm x 28mm OD x 3mm Flat Washers
- x24 6mm x 22mm OD x 2mm Flat Washers
- x6 10mm x 34mm OD x 3mm Flat Washers
- x12 10mm x 20mm OD x 2mm Flat Washers
- x6 8mm Lock Washers
- x6 10mm Lock Washers
- x6 8-1.25mm x 35mm Hex Bolts
- x12 6-1.0mm x 25mm Hex Bolts
- x6 10-1.5mm x 35mm Hex Bolts
- x6 10-1.5mm x 30mm Hex Bolts
- x6 T-shaped Bolt Plate
- x12 6mm Nylon Lock Nuts
- x6 10mm Nylon Lock Nuts

Reference the letters printed on the brackets to determine mounting locations


Top View

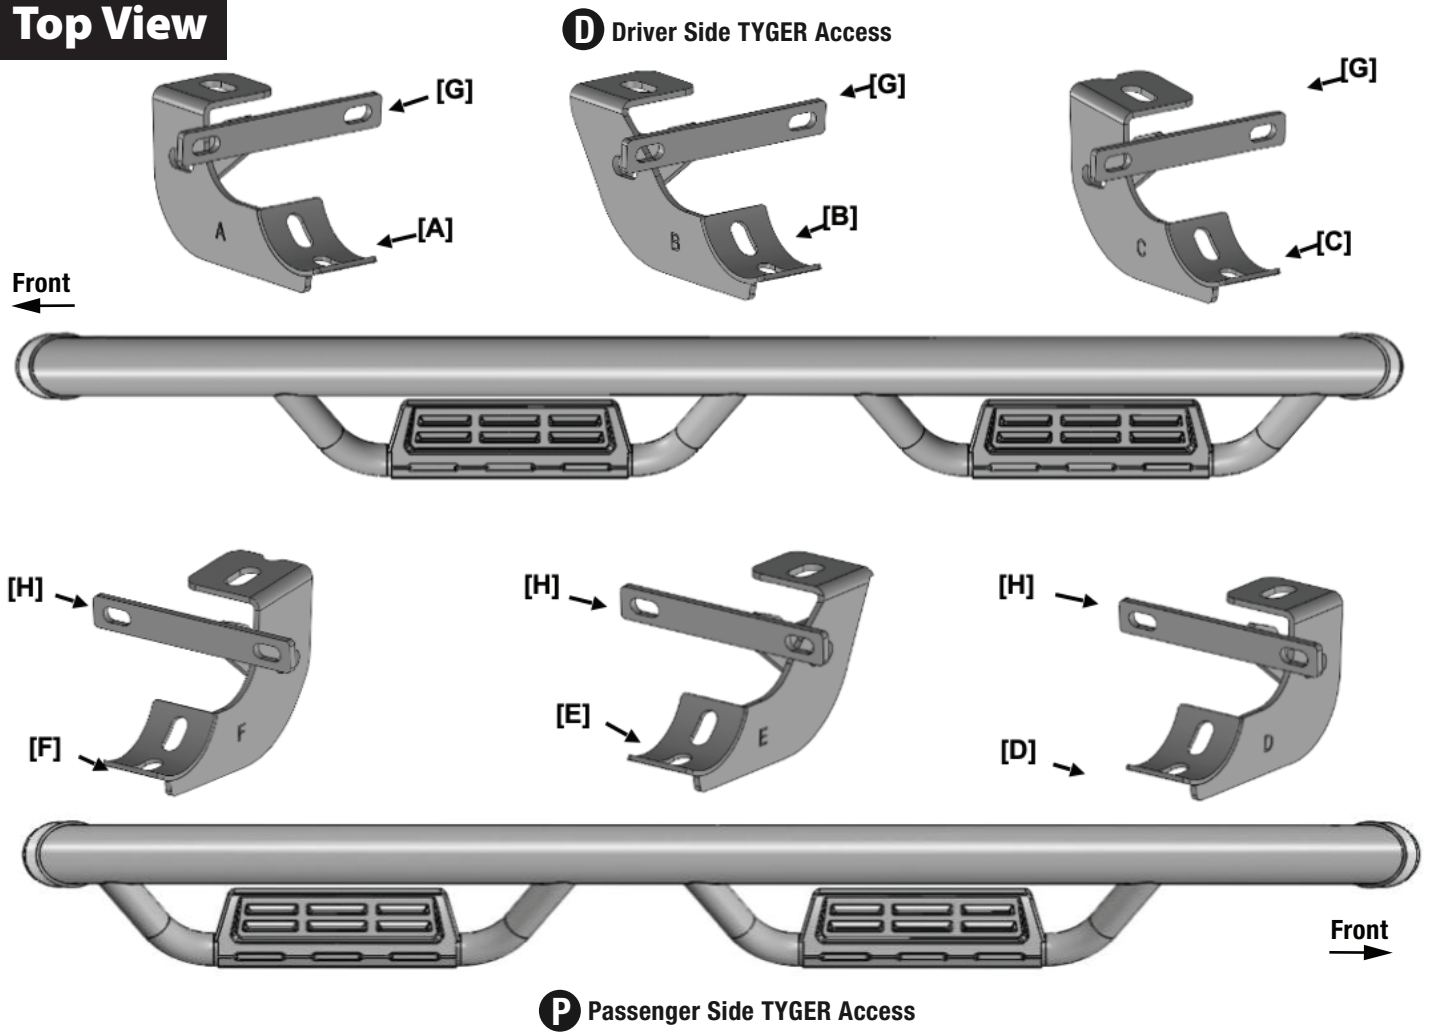

Bottom View

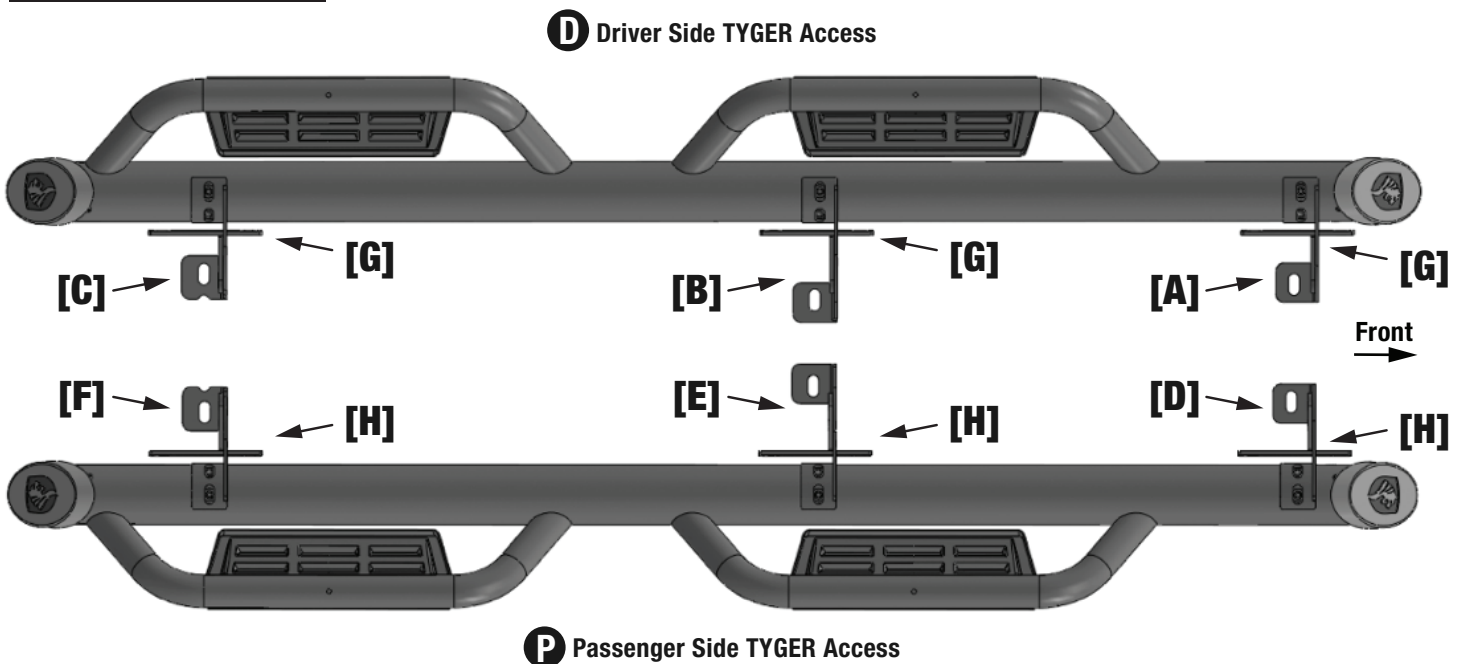


TOOLS REQUIRED

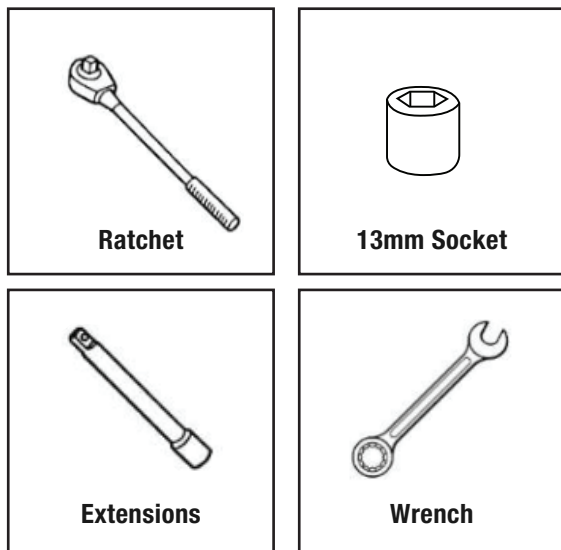

For 2011-2018 model years

Threaded Insert:


- (1) 8-1.25mm x 35mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm x 28mm x 3mm Flat Washer

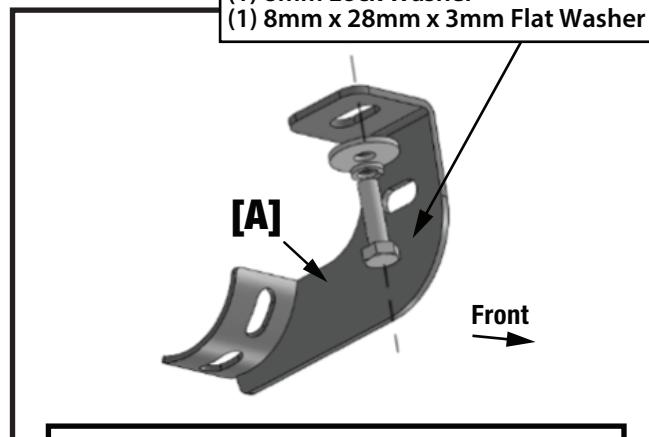


(Fig 2) Attach Driver/Left Front Mounting Bracket [A] to threaded insert at Front Mounting Location

STEP 1 MOUNTING BRACKETS

Follow (Fig 1 – 12) to attach the brackets to the Driver/Left Side.
Ensure all hardware is hand tightened for this step.

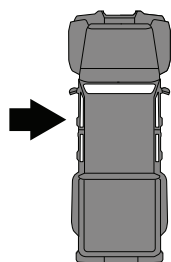


Driver-side Front Mounting Area

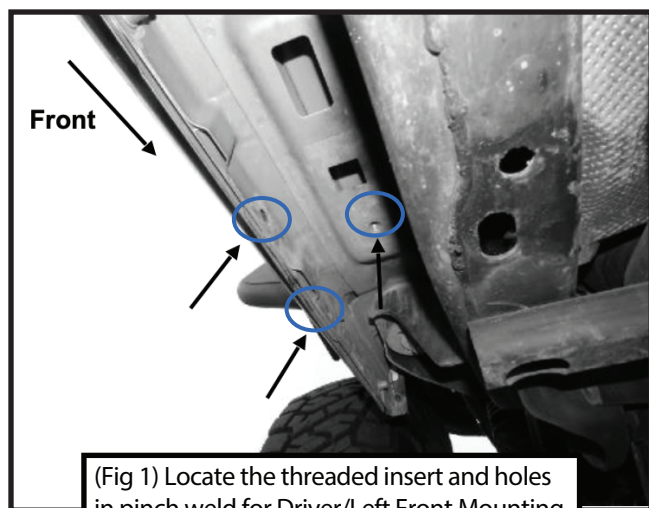


(Fig 1) Locate the threaded insert and holes in pinch weld for Driver/Left Front Mounting Location

- (1) 10-1.5mm x 30mm Hex Bolt
- (2) 10mm x 20mm x 2mm Flat Washers
- (1) 10mm Nylon Lock Nut

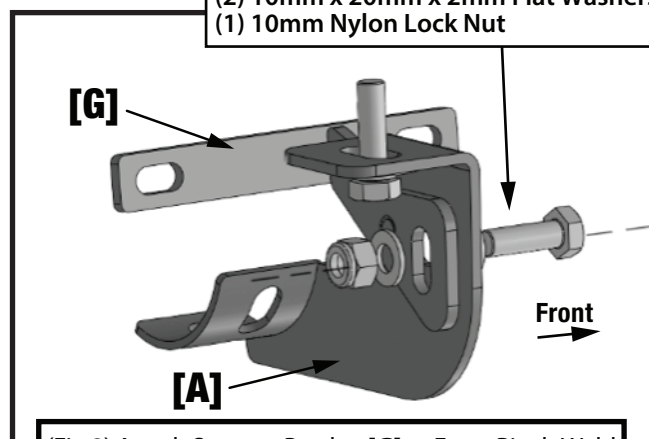

(Fig 3) Attach Support Bracket [G] to Front Pinch Weld and to Driver/Left Front Mounting Bracket [A]

- (2) 6-1.00mm x 25mm Hex Bolts
- (4) 6mm x 22mm x 2mm Flat Washers
- (2) 6mm Nylon Lock Nuts

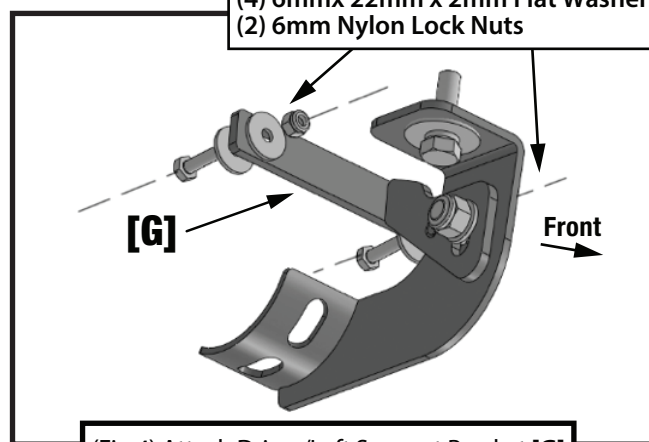


(Fig 4) Attach Driver/Left Support Bracket [G] to Driver/Left Front Mounting Location




(Fig 5) Installed Driver/Left Front Mounting Bracket [A] and Support Bracket [G]

For 2007-2010 model years

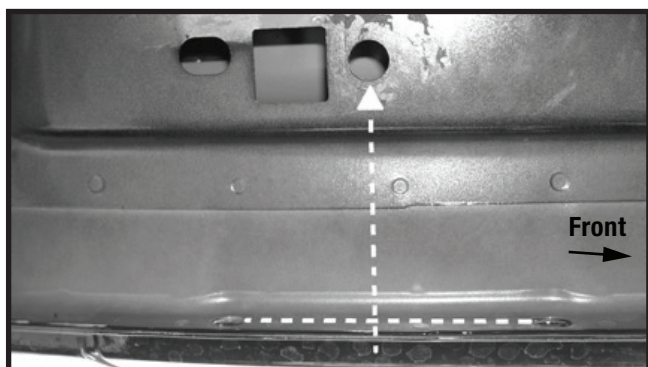


(Fig 6) **For 2007-2010 model years**, if no factory insert, locate the holes in the pinch weld to determine correct mounting hole for 10mm Nut Plate

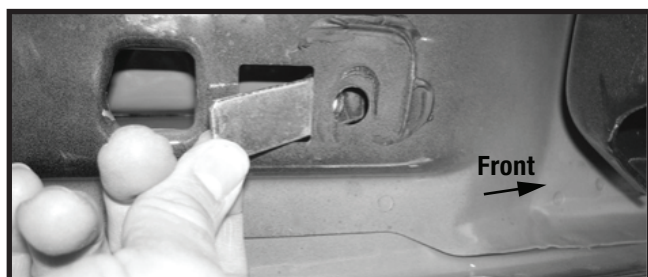

(Fig 7) **For 2007-2010 model years**, insert 10mm Nut Plate into opening and line up nut with mounting hole


No Threaded Insert:
 (1) 10mm Nut Plate
 (1) 10-1.5mm x 35mm Hex Bolt
 (1) 10mm Lock Washers
 (1) 10mm x 34mm x 3mm Flat Washer

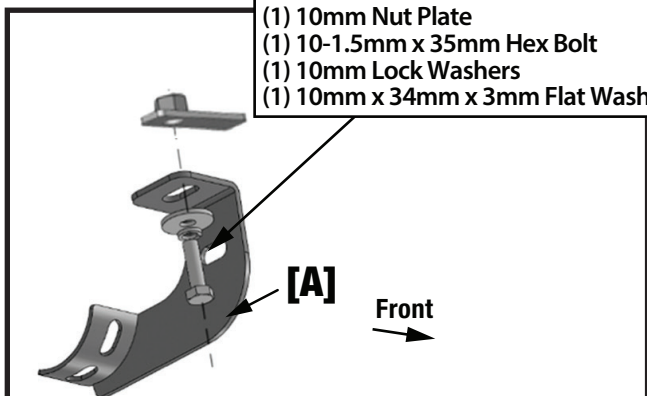


(Fig 8) Attach Bracket [A] to pre-inserted 10mm Nut Plate at Front Mounting Location



Driver-side Center Mounting Area

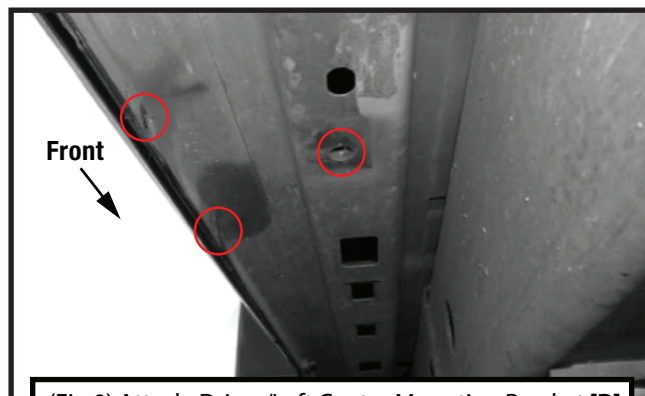

(Fig 9) Attach Driver/Left Center Mounting Bracket [B] and Support Bracket [G] to the Driver Side Center mounting location with threaded insert or Nut Plate. Please refer to Figs 2 to 8 for hardware used

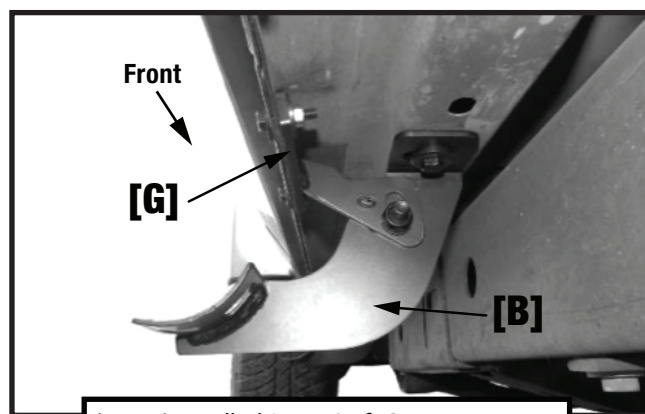


(Fig 10) Installed Driver/Left Center Mounting Bracket [B] and Support Bracket [G]



Driver-side Rear Mounting Area




(Fig 11) Attach Driver/Left Rear Mounting Bracket [C] and Support Bracket [G] to the Driver Side Rear mounting location with threaded insert or Nut Plate. Please refer to Figs 2 to 8 for hardware used.

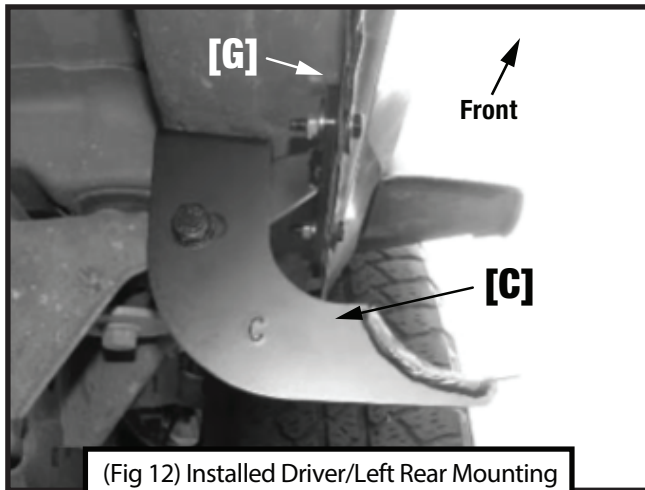

(Fig 12) Installed Driver/Left Rear Mounting Bracket [C] and Support Bracket [G]

STEP 2 MOUNTING RUNNING BOARD


Follow (Fig 13) to install the Kobra Drop Step on the Driver/Left Mounting Brackets. Ensure all hardware is hand tightened at this point.

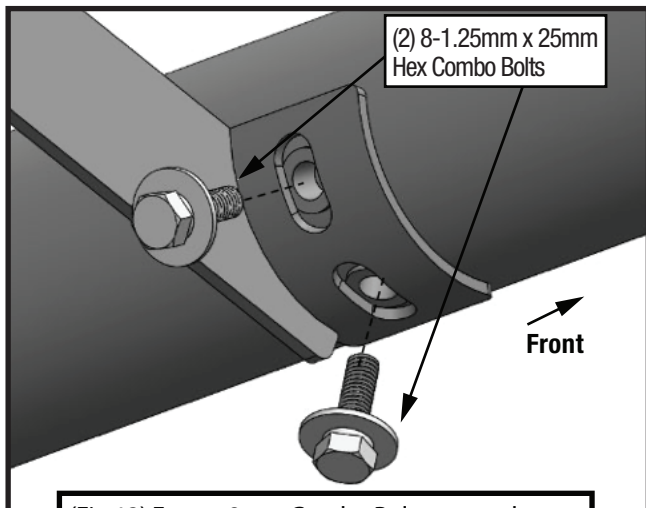

(Fig 13) Fasten 8mm Combo Bolts to attach bracket to running board. Repeat for all brackets

STEP 3 PASSENGER SIDE

Repeat **STEPS 1-2** for passenger side installation.
 Use Front Mounting Bracket [D] instead of [A];
 Use Center Mounting Bracket [E] instead of [B];
 Use Rear Mounting Bracket [F] instead of [C];
 Use Support Brackets [H] instead of [G] for all locations.

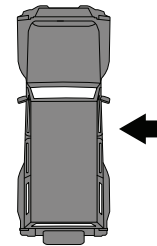

STEP 4

Ensure Tyger Kobra Drop Step is level and straightened, then tighten all fasteners. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation