



TYGER®

TYGER ACCESS

TG-AS2N24031

Scan to Download the
Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES



Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1 Driver/Left Tyger Access
- x1 Passenger/Right Tyger Access
- x3 Driver/Left Mounting Brackets [A]
- x3 Passenger/Right Front Mounting Bracket [B]
- x12 8mm x 24mm OD x 2mm Flat Washers
- x12 8mm Hex Flange Nuts
- x12 8-1.25mm x 25mm Combo Bolts

Parts List

Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

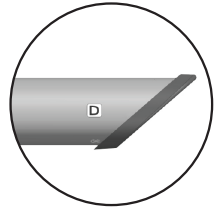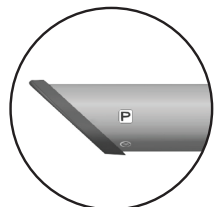


P Passenger Side TYGER Access



Front
←

D Driver Side TYGER Access

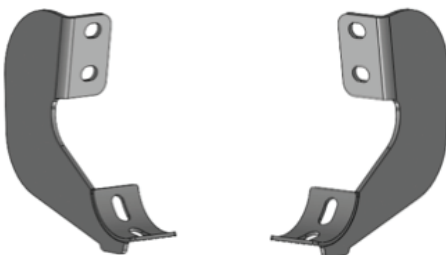

x3

[A]

Driver/Left
Mounting Brackets

x3

[B]

Passenger/Right
Mounting Brackets



x12

8-1.25mm x 25mm Combo Bolts



x12

8mm x 24mm OD x 2mm Flat Washers




x12


8mm Hex Flange Nuts

Reference the letters printed on the brackets to determine mounting locations



Top View

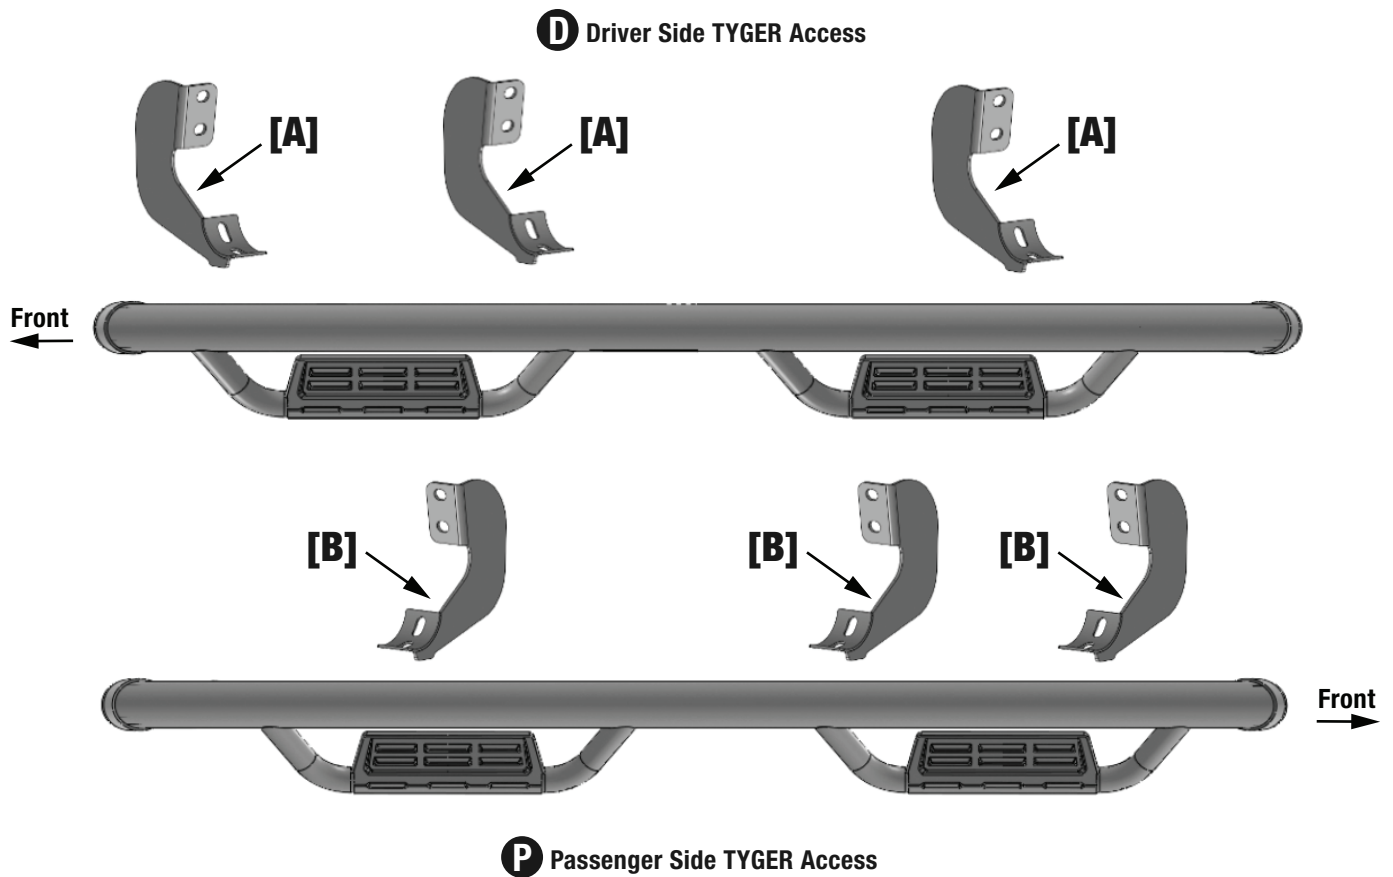

Bottom View

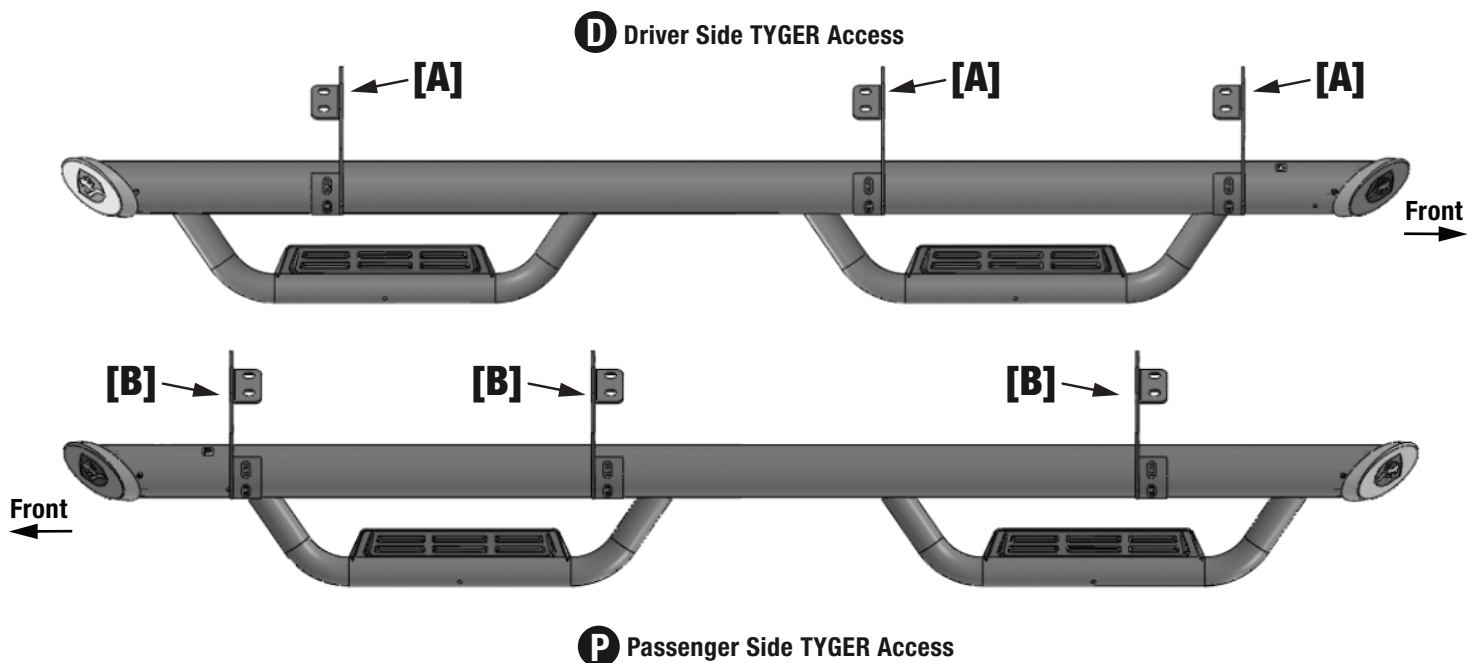


TOOLS REQUIRED

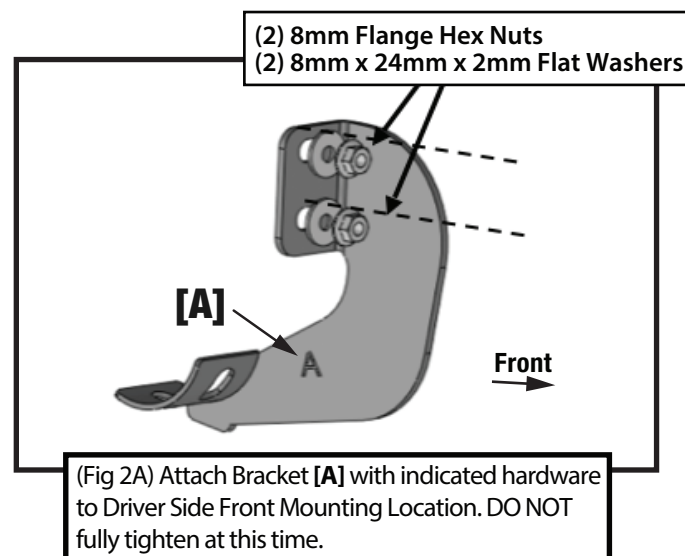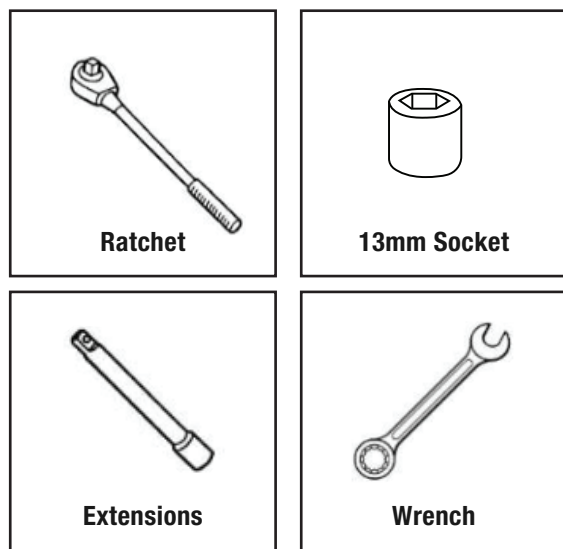



STEP 1 MOUNTING BRACKETS

Follow (Fig 1 – 9) to attach the brackets to the Driver Side. Ensure all hardware is hand tightened for this step.

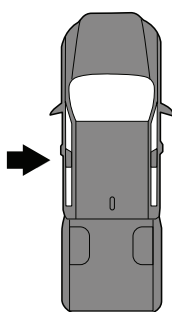


Driver-side Front Mounting Areas

ATTENTION:
Some Frontier models have front factory studs that are too short to fit both Flat Washers and Flange Nuts. In this case, **omit the Flat Washers and only install the Flange Nuts.** (Fig 2B)

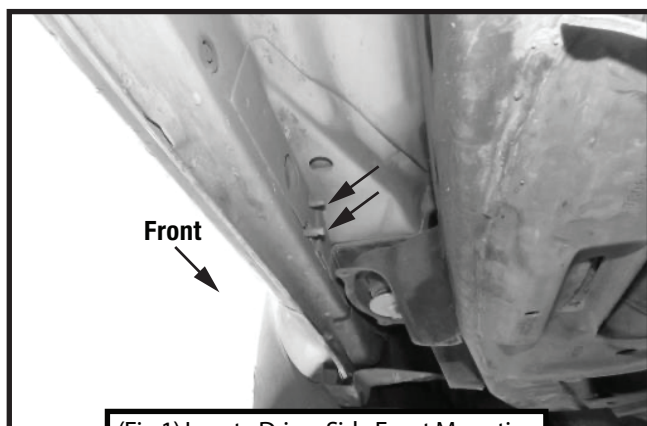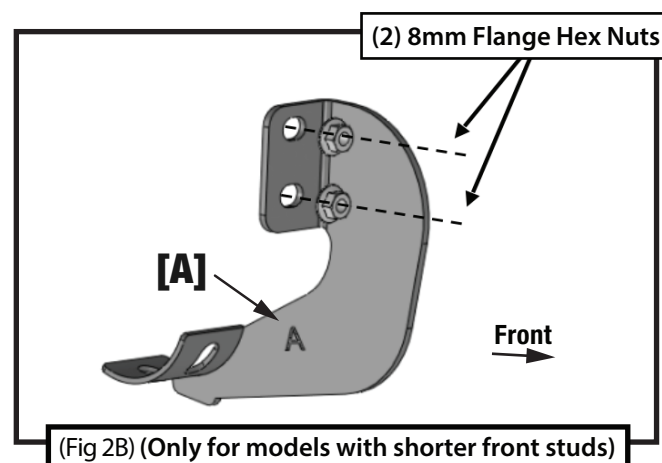


(Fig 1) Locate Driver Side Front Mounting Location. Tap studs if necessary.

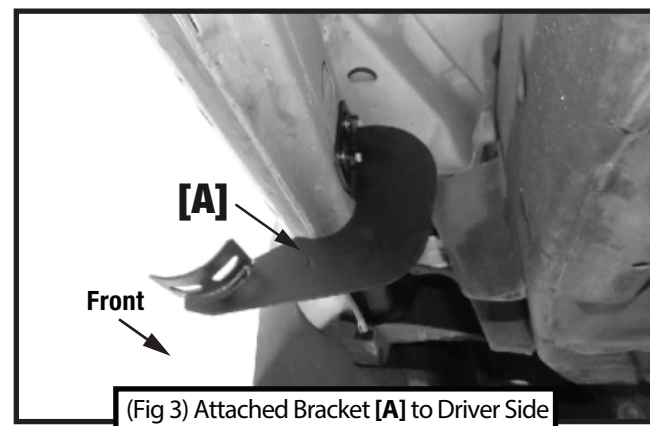


(Fig 3) Attached Bracket [A] to Driver Side Front Mounting Location.




Driver-side Center Mounting Areas

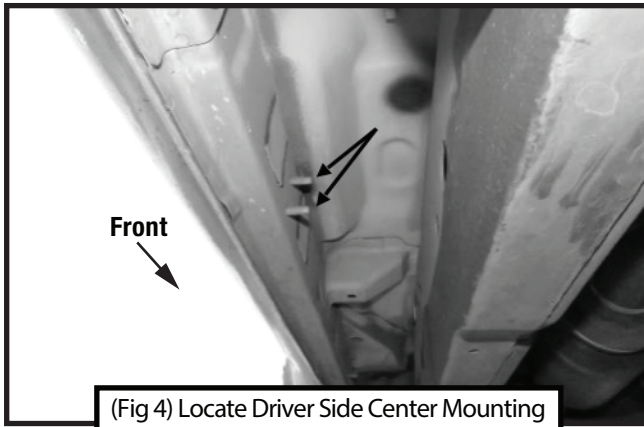

(Fig 4) Locate Driver Side Center Mounting Location. Tap studs if necessary.

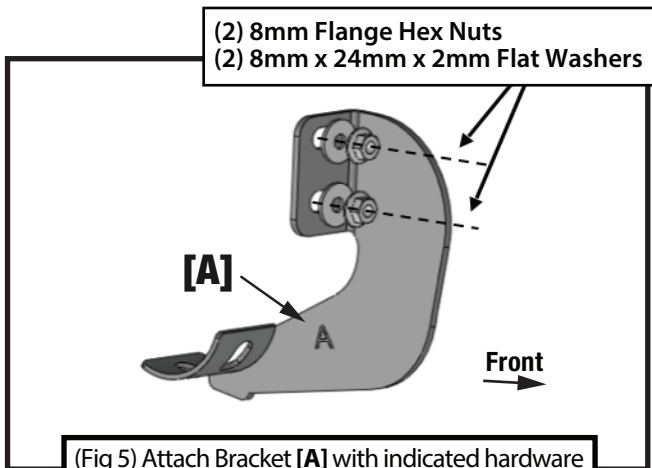


(Fig 5) Attach Bracket [A] with indicated hardware to Driver Side Center Mounting Location. DO NOT fully tighten at this time.

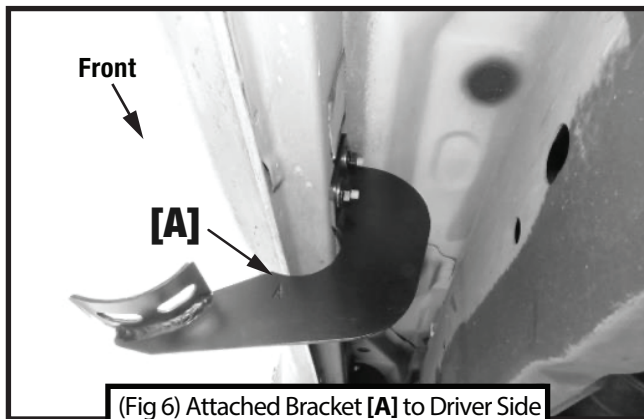


(Fig 6) Attached Bracket [A] to Driver Side Center Mounting Location.




Driver-side Rear Mounting Areas

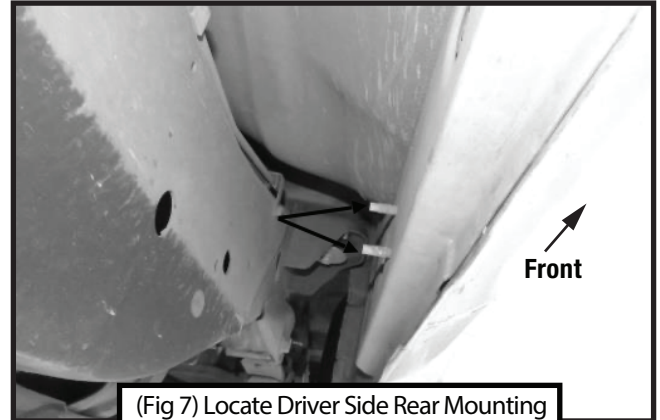

(Fig 7) Locate Driver Side Rear Mounting Location. Tap studs if necessary.

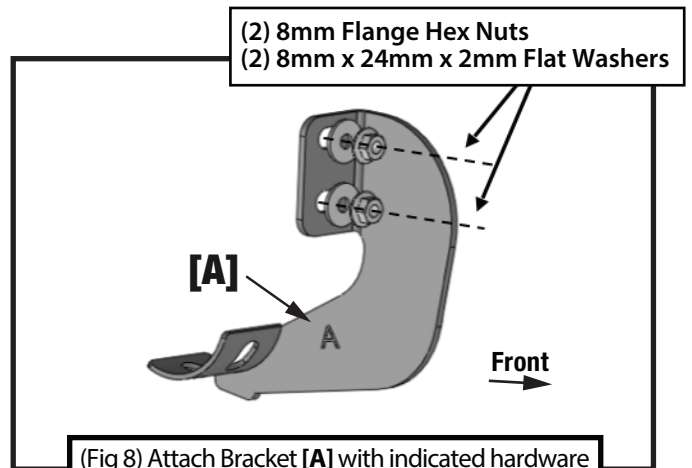


(Fig 8) Attach Bracket [A] with indicated hardware to Driver Side Rear Mounting Location. DO NOT fully tighten at this time.

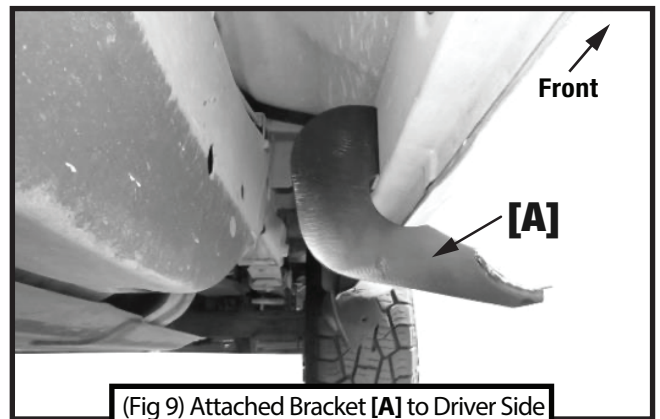

(Fig 9) Attached Bracket [A] to Driver Side Rear Mounting Location.


STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 10) to install the Access Drop Step on the Passenger/Right. **Ensure all hardware is hand tightened at this point.**

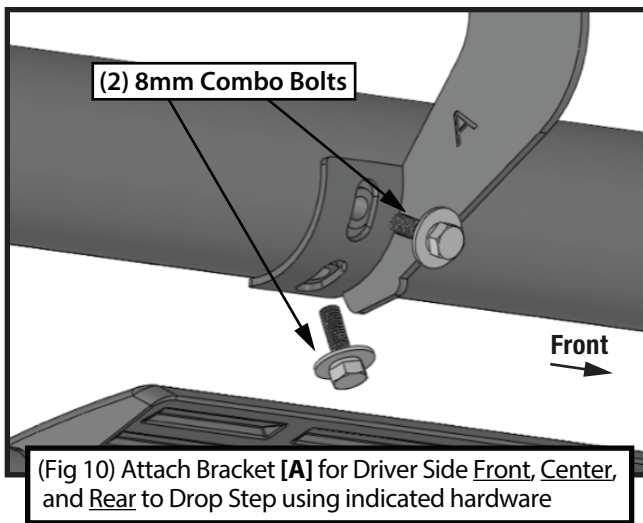

STEP 3 PASSENGER SIDE

Repeat **STEPS 1-2** for passenger side installation. Use Mounting Brackets [A] instead of [B].

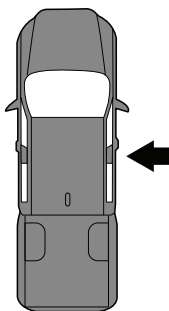

STEP 4 COMPLETION

Ensure Access Drop Step is level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

