



TYGER®

TYGER ACCESS

TG-AS2N24035

Scan to Download the
Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES



Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1 Driver/Left Tyger Access
- x1 Passenger/Right Tyger Access
- x3 Driver/Left Mounting Brackets [A]
- x3 Passenger/Right Mounting Brackets [B]
- x12 8mm x 24mm OD x 2mm Flat Washers
- x6 8mm Nylon Lock Nuts
- x12 8mm Lock Washers
- x12 8-1.25mm x 25mm Combo Bolts
- x12 8-1.25 x 30mm Hex Bolts

Parts List


Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

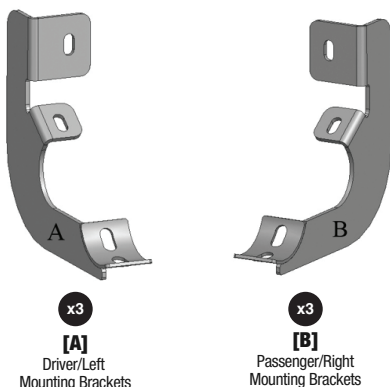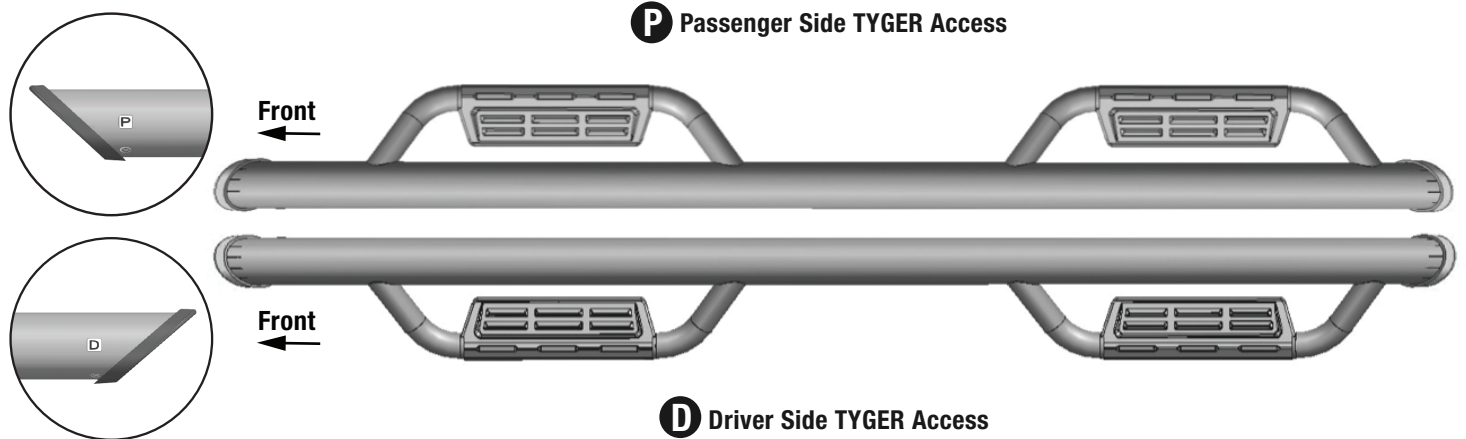


Reference the letters printed on the brackets to determine mounting locations


Top View

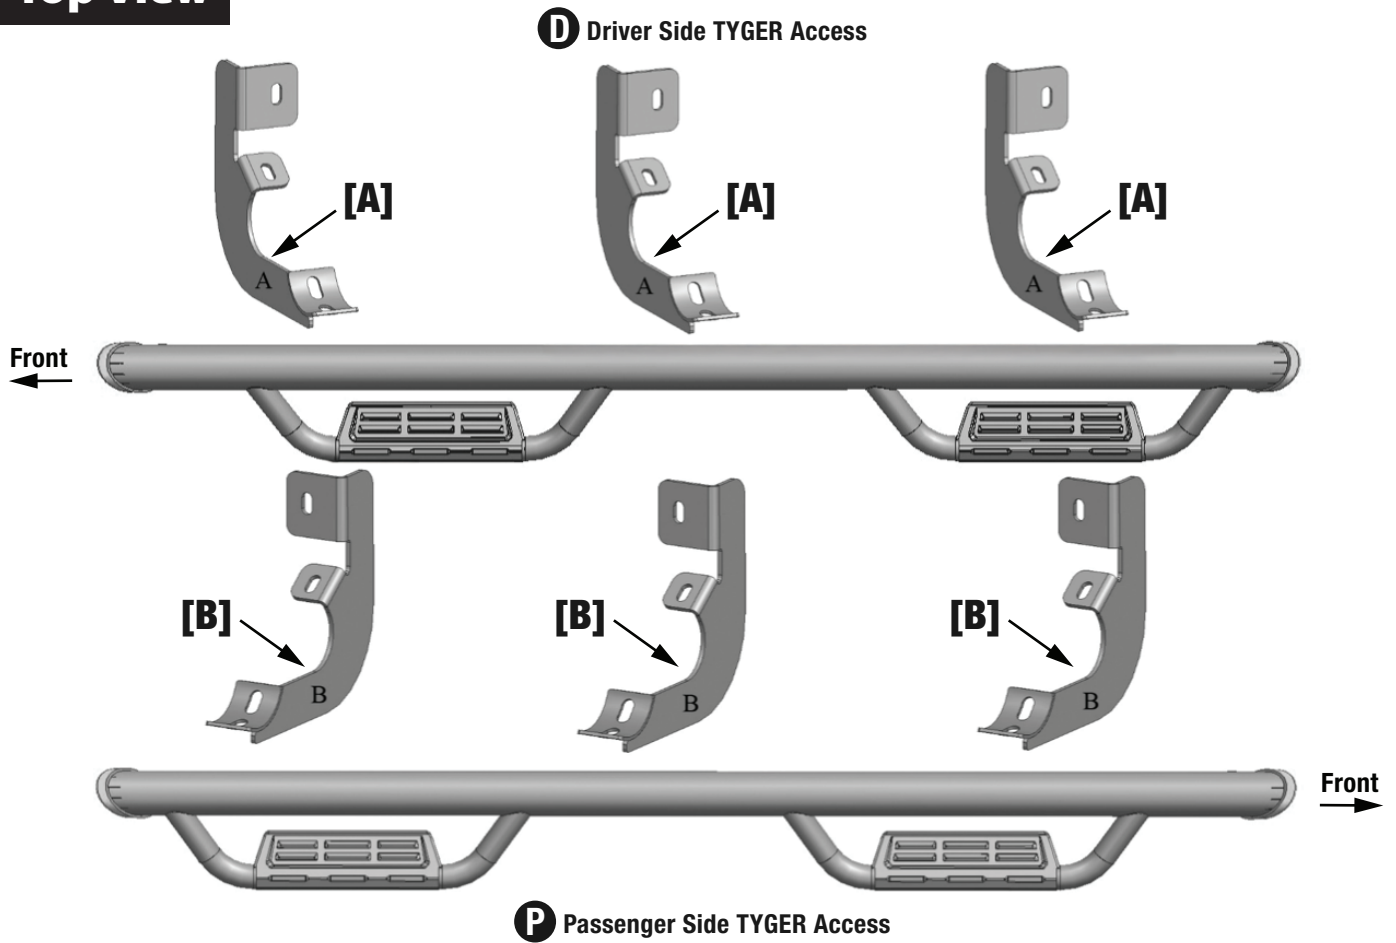

Bottom View

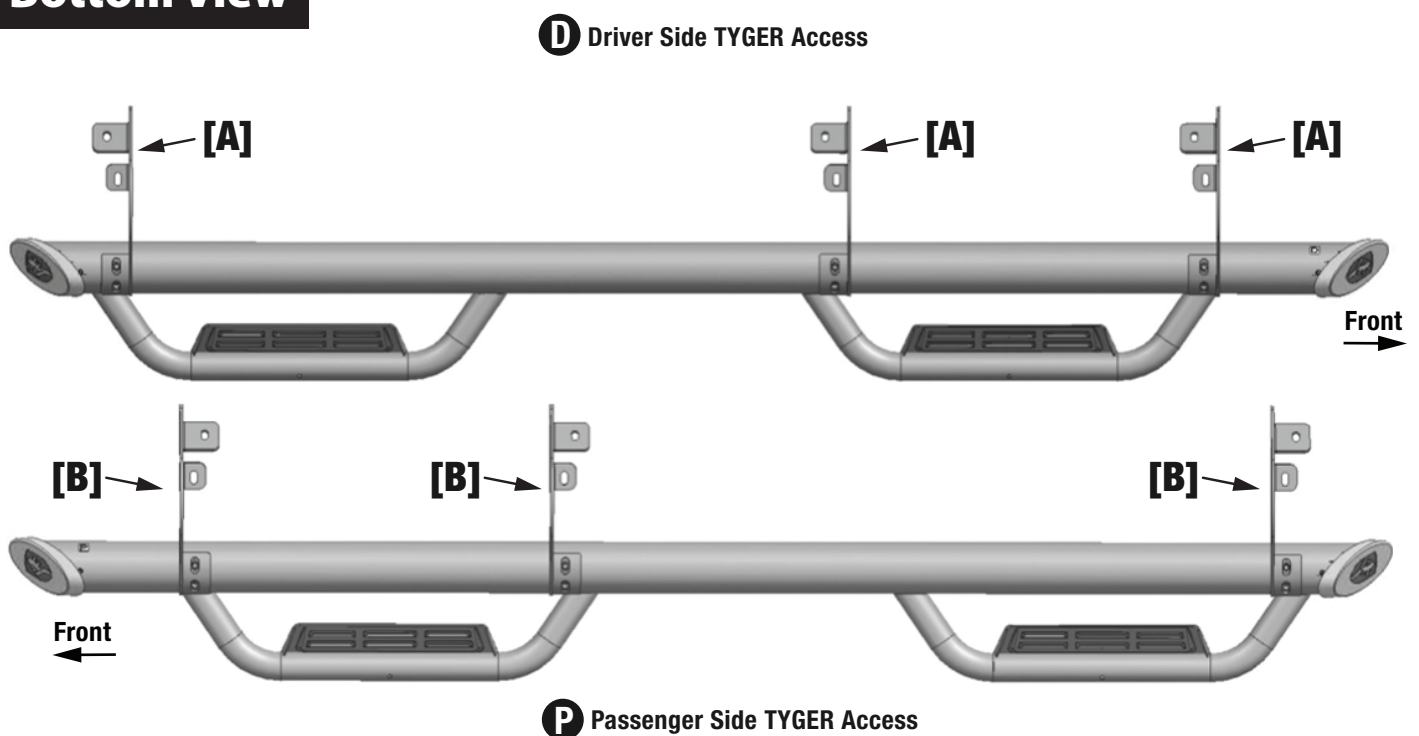

TOOLS REQUIRED



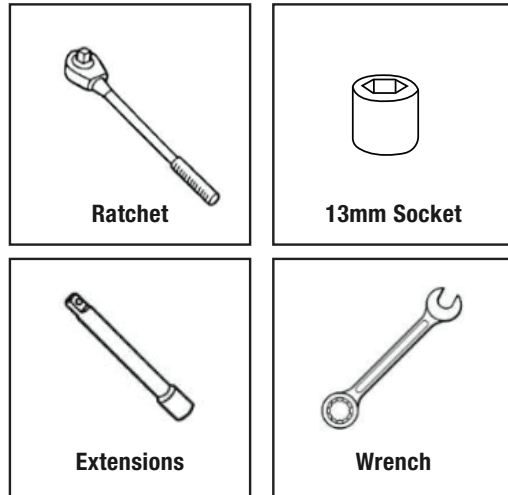


STEP 1 MOUNTING BRACKETS

For model years **2016 & Up**, follow (Fig 1 – 7) to attach Passenger/Right Mounting Brackets to the Passenger/Right side.


For model years **2015 & Below**, follow (Fig 1A – 7A) to attach Passenger/Right Mounting Brackets.

Ensure all hardware is hand tightened at this point.

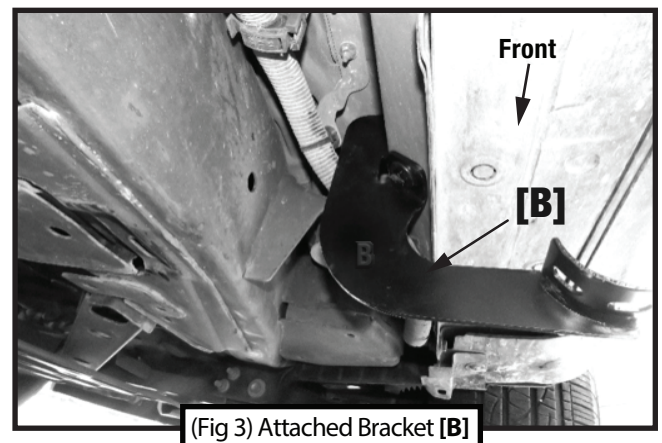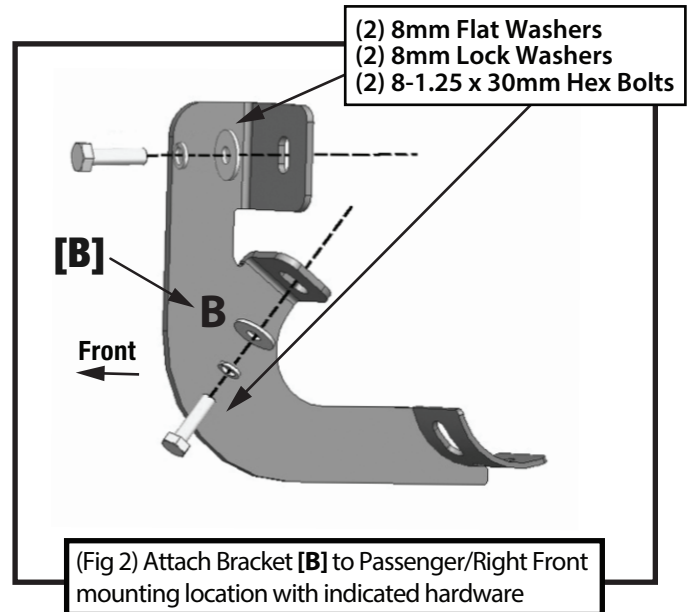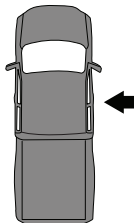





Passenger-side Front Mounting Areas

2016 & Up Model

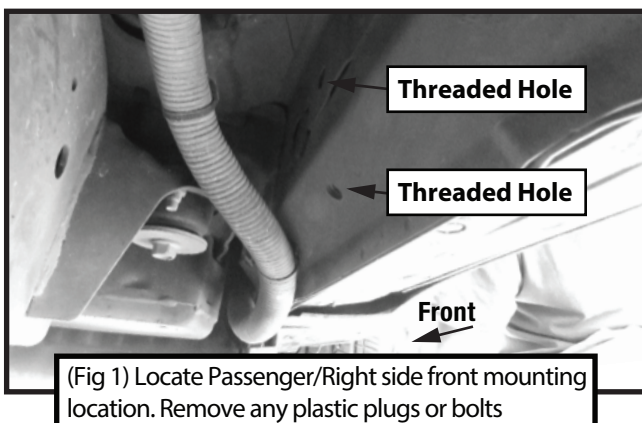


2015 & Below Model

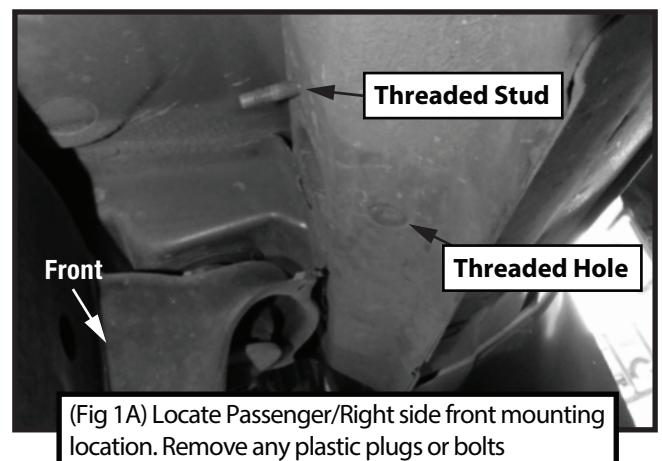

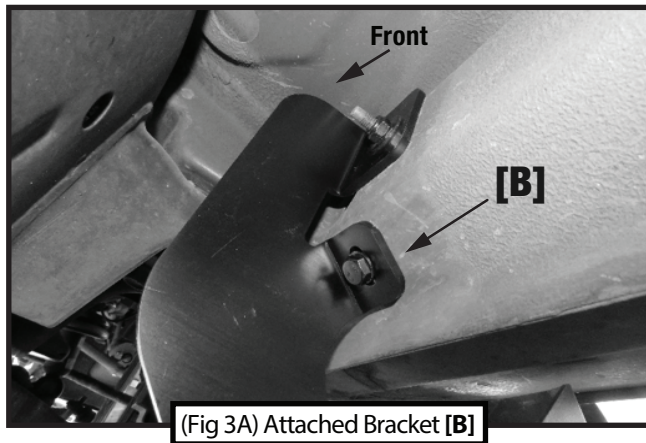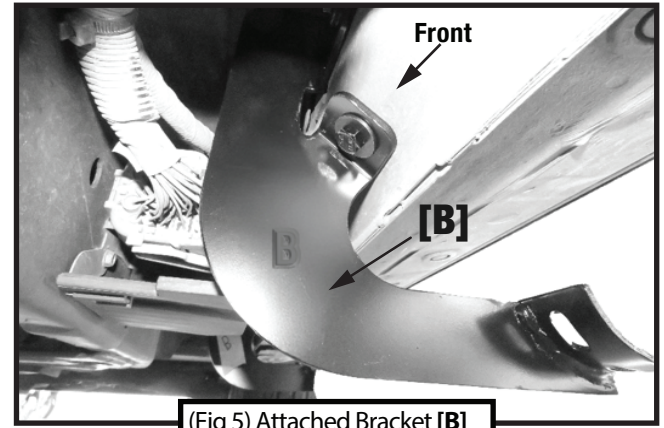
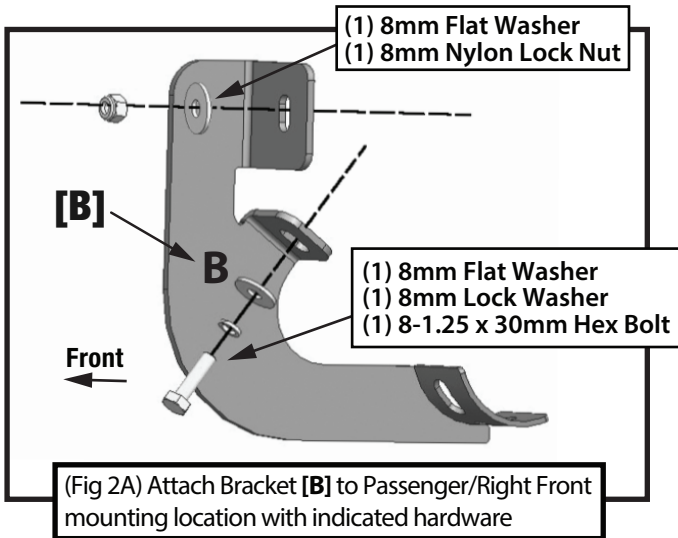


2015 & Below Model

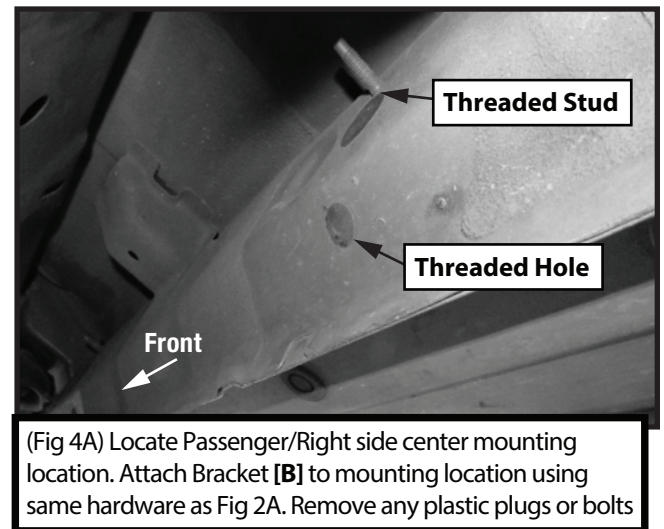

Passenger-side Center Mounting Areas


2016 & Up Model

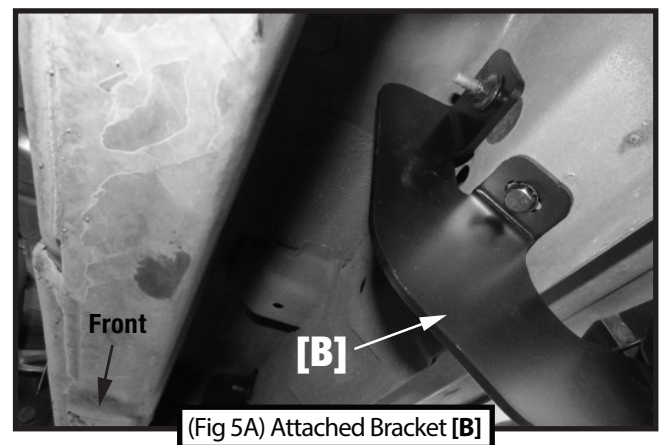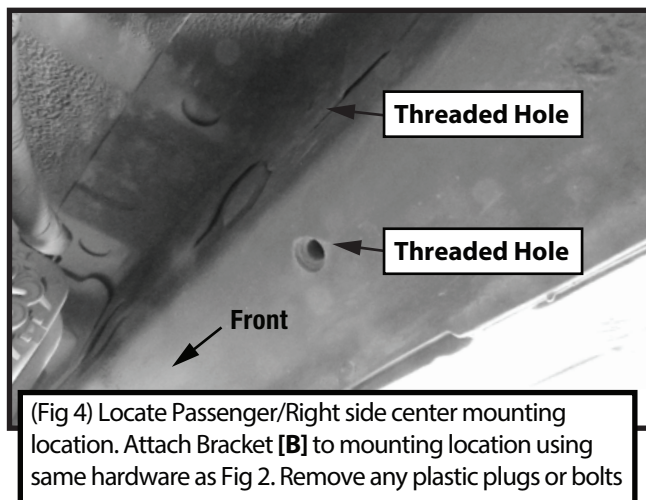




Passenger-side Rear Mounting Areas

2016 & Up Model

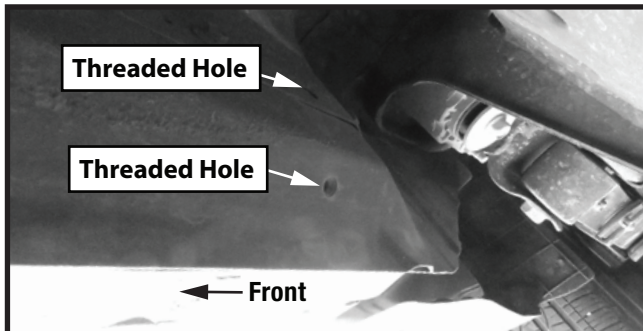


(Fig 6) Locate Passenger/Right side rear mounting location. Attach Bracket [B] to mounting location using same hardware as Fig 2. Remove any plastic plugs or bolts

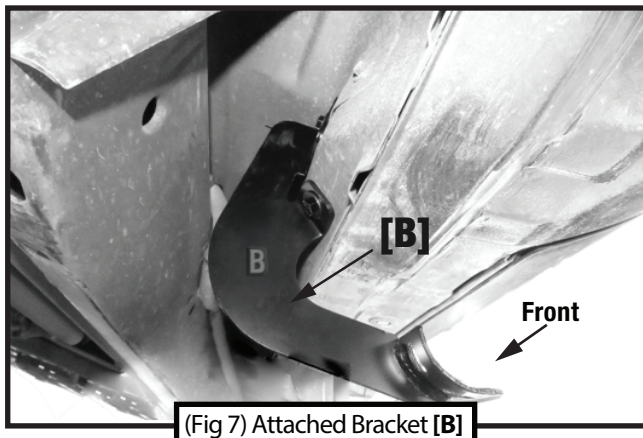


(Fig 7) Attached Bracket [B]

2015 & Below Model

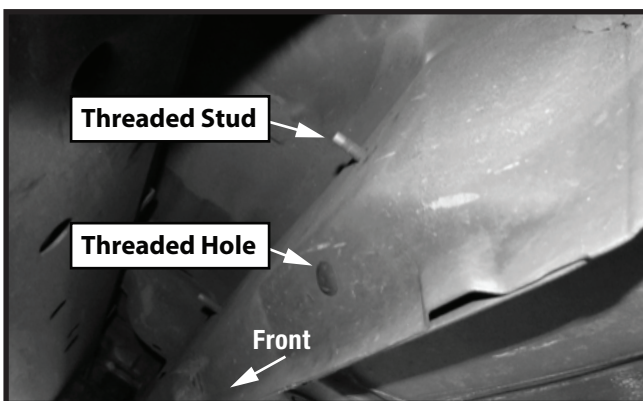


(Fig 6A) Locate Passenger/Right side rear mounting location. Attach Bracket [B] to mounting location using same hardware as Fig 2A. Remove any plastic plugs or bolts

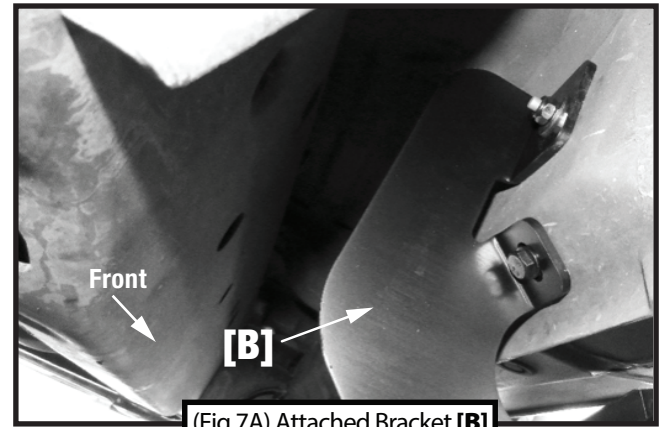

(Fig 7A) Attached Bracket [B]

STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 8-9) to install the Access Drop Step on the Passenger/Right. **Ensure all hardware is hand tightened at this point.**

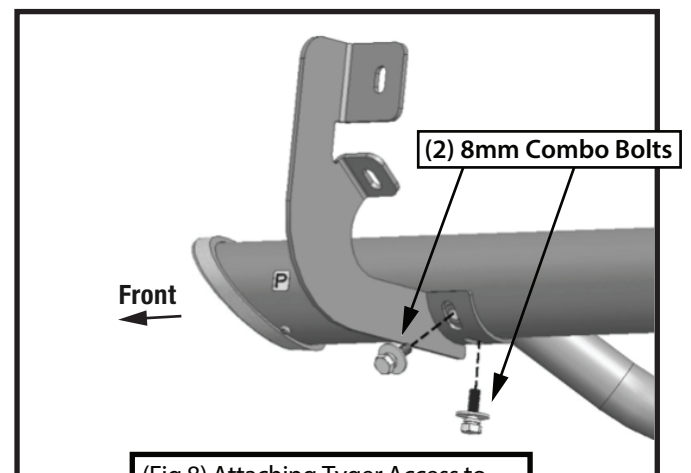


(Fig 8) Attaching Tyger Access to Passenger/Right Mounting Brackets



(Fig 9) Attached Tyger Access Steps

STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for Driver side installation.
Use Mounting Brackets **[A]** instead of **[B]**.

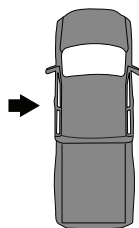

STEP 4 COMPLETION

Ensure Access Drop Step is level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation