



TYGER®

TYGER ACCESS

TG-AS2T24033

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT:

WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

x1 Driver/Left Tyger Access **D**

x1 Passenger/Right Tyger Access **P**

x1 Driver/Left Front Mounting Bracket **A**

x1 Passenger/Right Front Mounting Bracket **D**

x1 Driver/Left 2nd Mounting Bracket **B**

x1 Passenger/Right 2nd Mounting Bracket **E**

x2 Driver/Left 3rd/Rear Mounting Brackets **C**

x2 Passenger/Right 3rd/Rear Mounting Brackets **F**

x16 8-1.25mm x 25mm Hex Combo Bolts

x16 8-1.25mm x 30mm Hex Bolts

x16 8mm x 24mm OD x 2mm Flat Washers

x16 8mm Lock Washers


Parts List

Top View


ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Access

P Passenger Side TYGER Access

D Driver Side TYGER Access

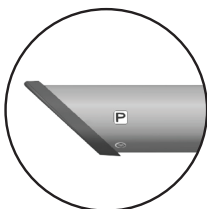

Front

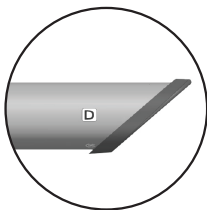

Front



x1

A
Driver/Left Front
Mounting Bracket



x1

B
Driver/Left 2nd
Mounting Bracket



x2

C
Driver/Left 3rd/Rear
Mounting Brackets



x1

D
Passenger/Right Front
Mounting Bracket



x1

E
Passenger/Right 2nd
Mounting Bracket



x2

F
Passenger/Right 3rd/Rear
Mounting Brackets



x16 8-1.25mm x 25mm Hex Combo Bolts



x16 8mm x 24mm OD x 2mm Flat Washers



x16 8mm Lock Washers




x16 8-1.25mm x 30mm Hex Bolts

Reference the letters printed on the brackets to determine mounting locations

Top View


D Driver Side TYGER Access

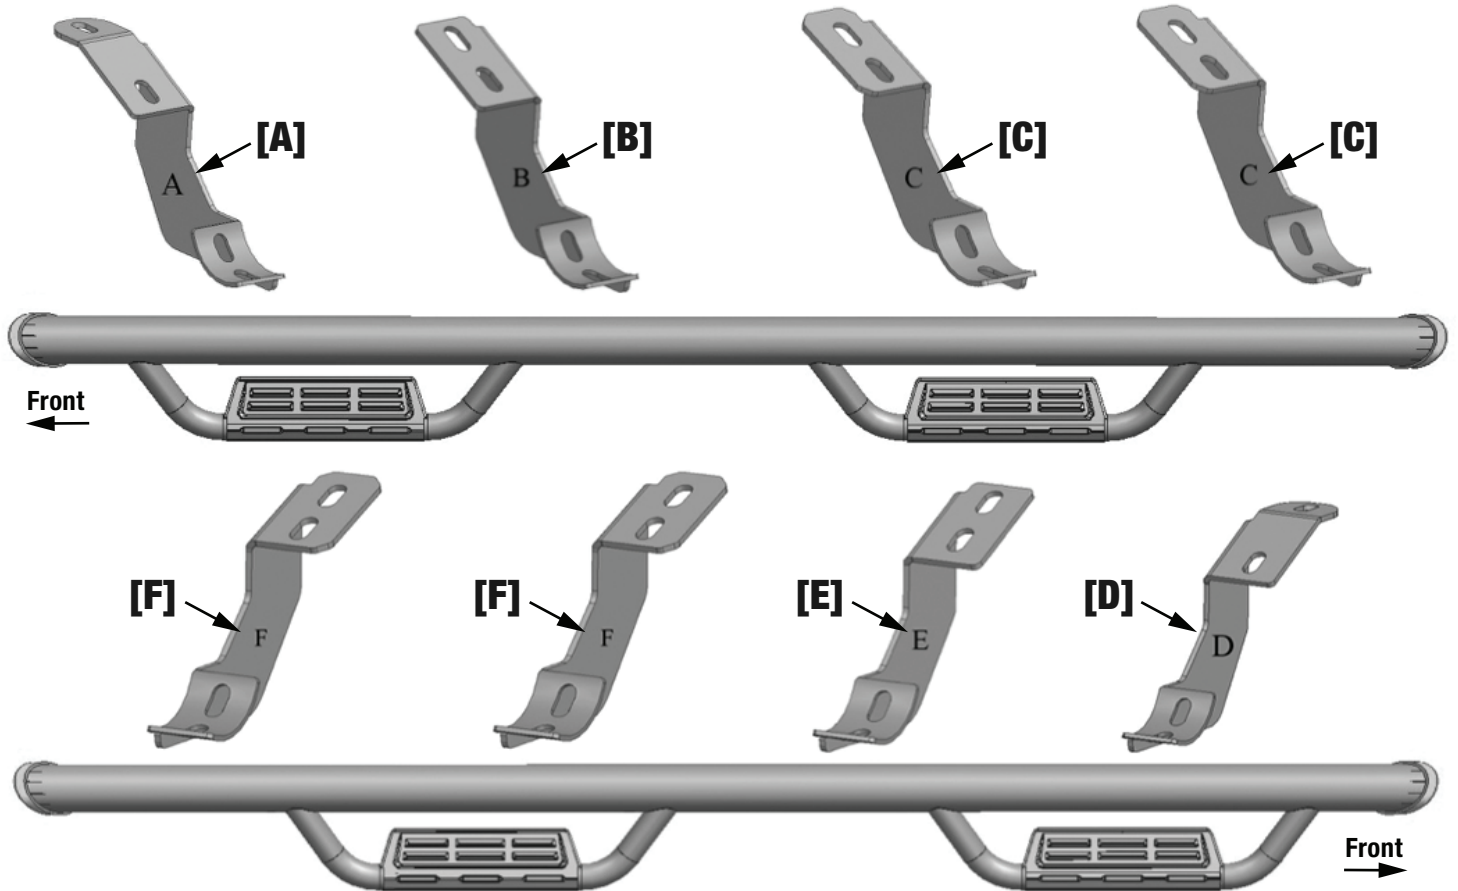

P Passenger Side TYGER Access



Bottom View

D Driver Side TYGER Access

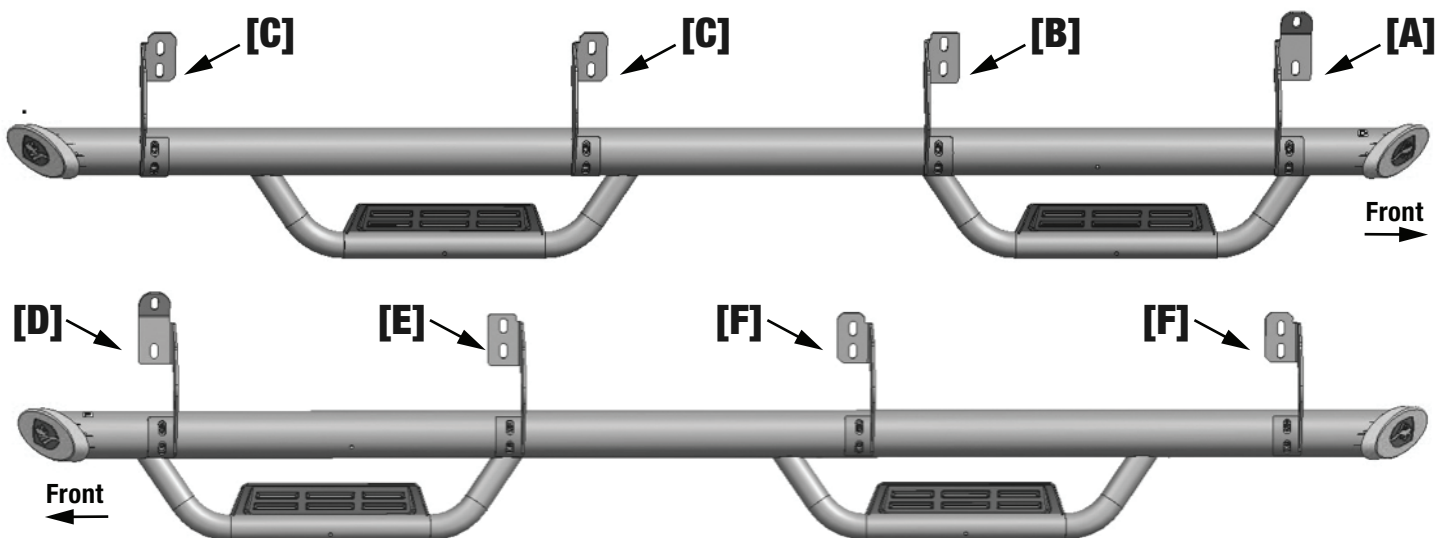



P Passenger Side TYGER Access

TOOLS REQUIRED

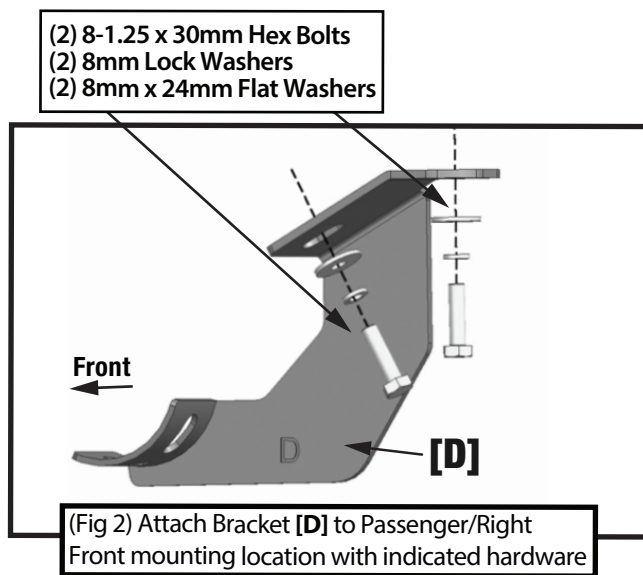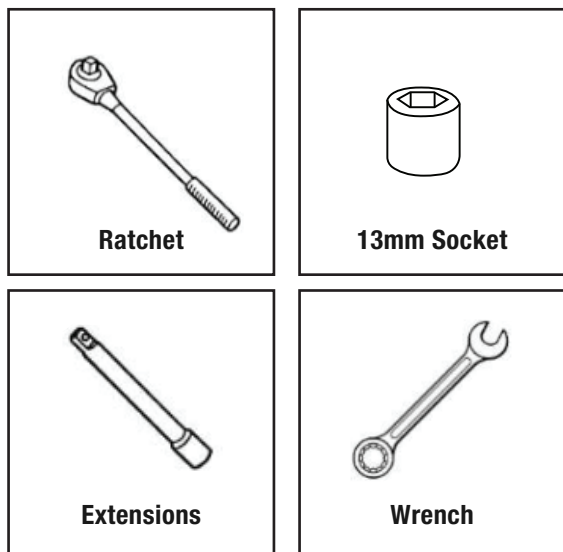


STEP 1 MOUNTING BRACKETS


Follow (Fig 1 – 12) to attach Passenger/Right Mounting Brackets to the Passenger/Right side. **Ensure all hardware is hand tightened for this step.**

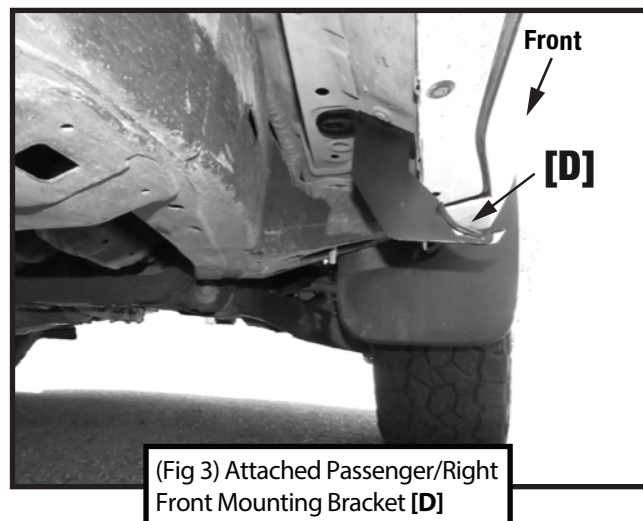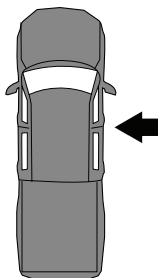


Passenger Front Mounting Areas

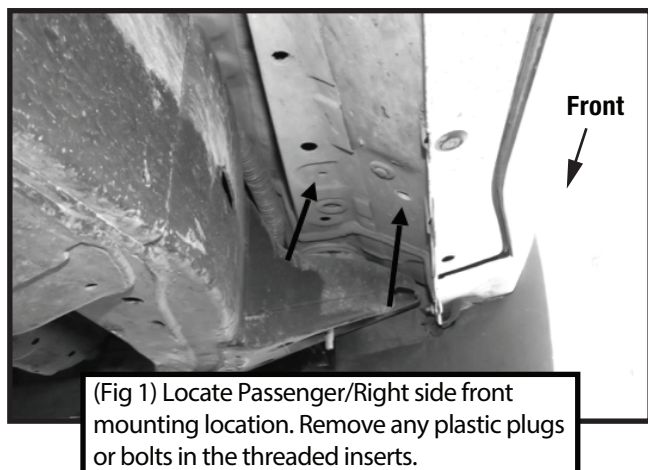

Passenger 2nd Mounting Areas

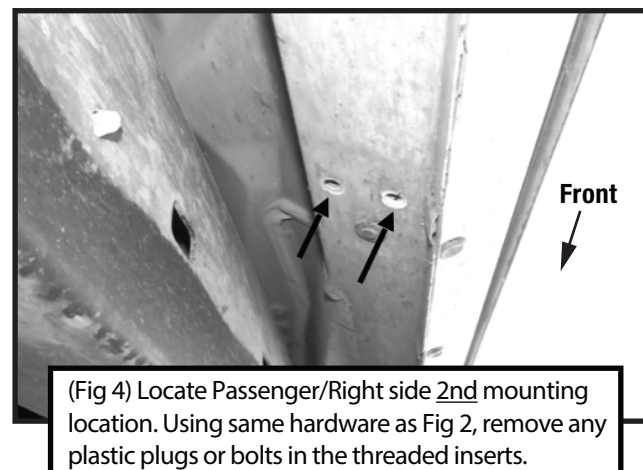


- (2) 8-1.25 x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm Flat Washers

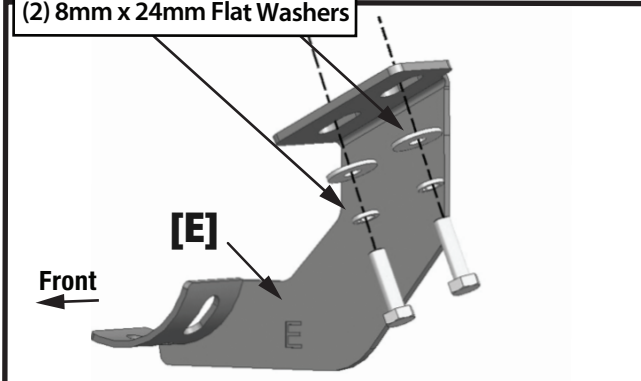


(Fig 5) Attaching Passenger/Right 2nd Mounting Bracket [E] to Passenger/Right 2nd mounting location with indicated hardware.


- (2) 8-1.25 x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm Flat Washers

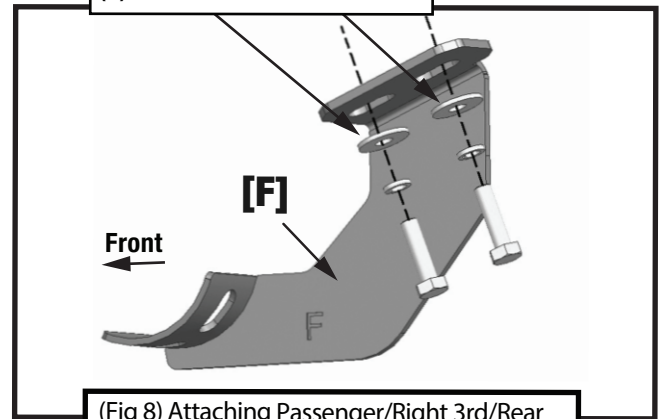

(Fig 8) Attaching Passenger/Right 3rd/Rear Mounting Bracket [F] to Passenger/Right 3rd mounting location with indicated hardware

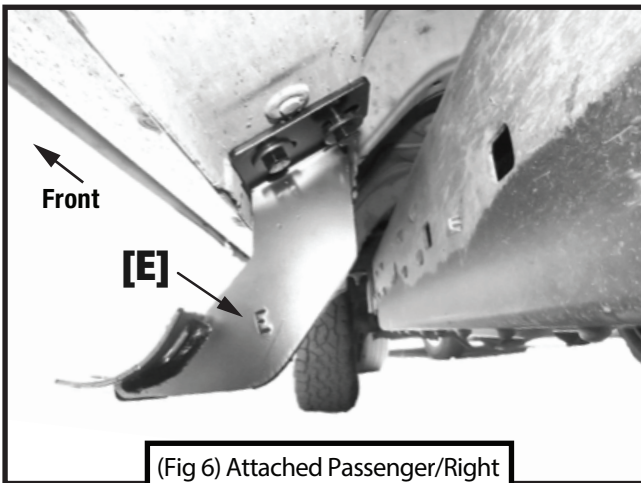


(Fig 6) Attached Passenger/Right 2nd Mounting Bracket [E]

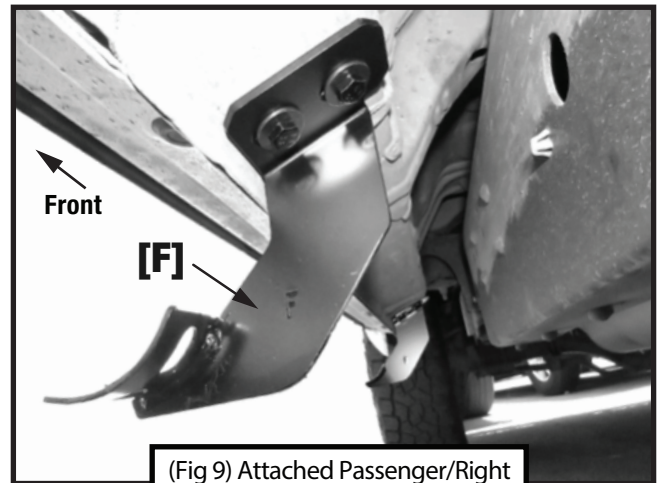

(Fig 9) Attached Passenger/Right 3rd/Rear Mounting Bracket [F]



Passenger 3rd Mounting Areas

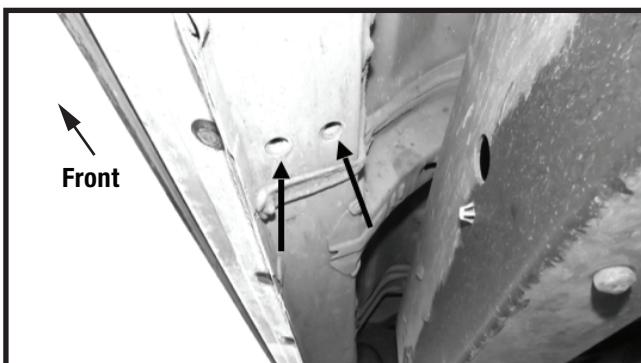


(Fig 7) Locate Passenger/Right side 3rd mounting location. Attach Passenger/Left 3rd/Rear Mounting Bracket [F] to mounting location using same hardware as Fig 2. Remove any plastic plugs or bolts in the threaded inserts




Passenger Rear Mounting Areas




(Fig 10) Locate Passenger/Right side rear mounting location. Attach Passenger/Left 3rd/Rear Mounting Bracket [F] to mounting location using same hardware as Fig 2. Remove any plastic plugs or bolts in the threaded inserts

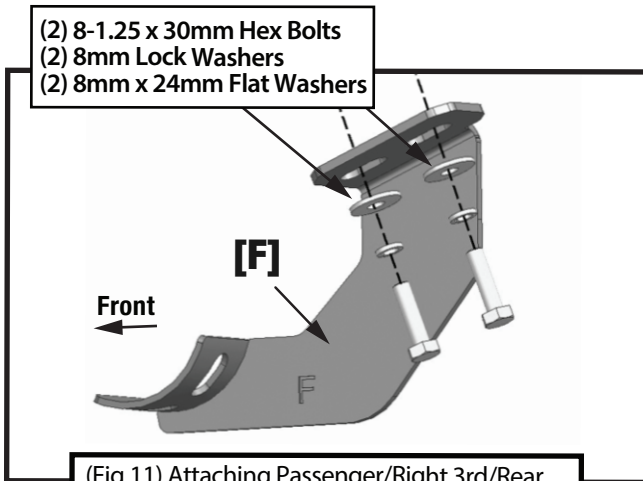

(Fig 11) Attaching Passenger/Right 3rd/Rear Mounting Bracket **[F]** to Passenger/Right Rear mounting location with indicated hardware

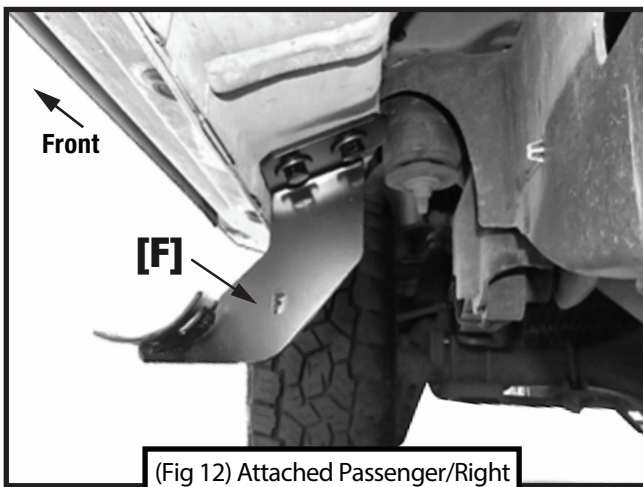

(Fig 12) Attached Passenger/Right 3rd/Rear Mounting Bracket **[F]**

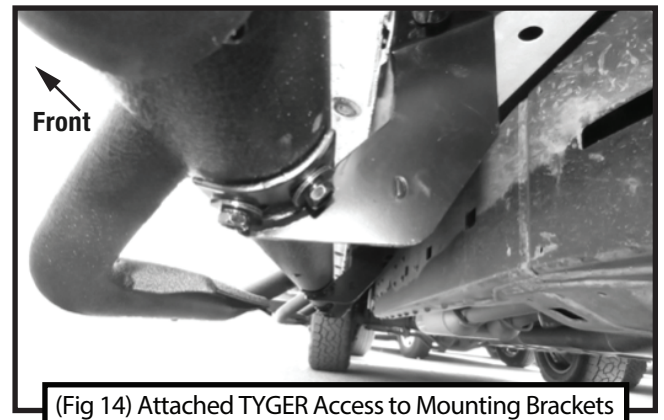


(Fig 14) Attached TYGER Access to Mounting Brackets

STEP 3 DRIVER SIDE


Repeat **STEP 1-3** to install mounting brackets to the 4 mounting locations on Driver/Left side.

Use Front Mounting Bracket **[A]** instead of **[D]**;
Use 2nd Mounting Bracket **[B]** instead of **[E]**;
Use 3rd/Rear Mounting Brackets **[C]** instead of **[F]**.

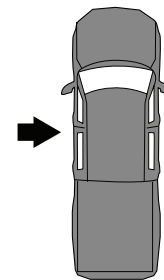

STEP 3 MOUNTING RUNNING BOARD


Follow (Fig 13 – 14) to install the Access Side Step on the Passenger/Right. **Ensure all hardware is hand tightened at this point.**

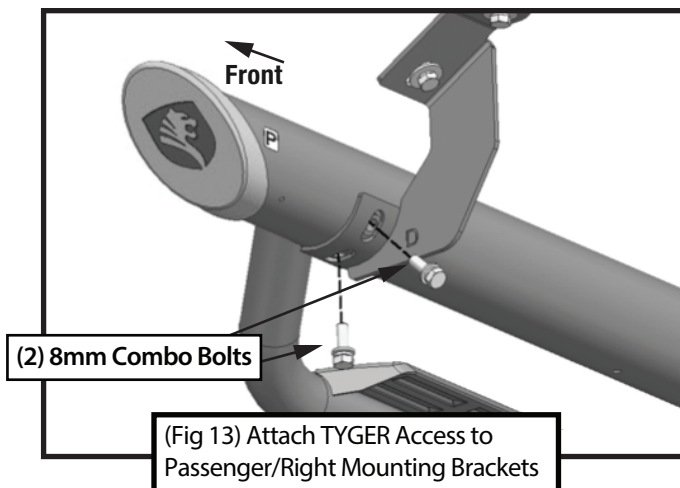

(Fig 13) Attach TYGER Access to Passenger/Right Mounting Brackets

STEP 4 COMPLETION

Ensure TYGER Access is level and straightened, then **tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

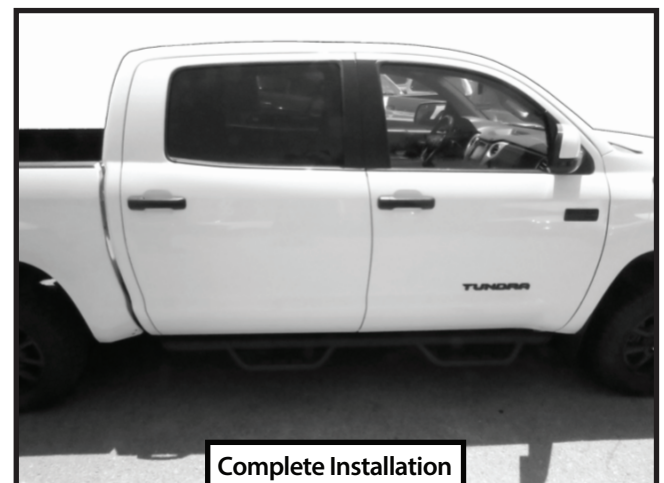

Complete Installation