



## BLADE®


TG-BL2T7088

### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. PLEASE ALSO SEND THE PICTURES, ORDER NUMBER, AND DETAILS OF THE ISSUE TO [SUPPORT@TYGERAUTO.COM](mailto:SUPPORT@TYGERAUTO.COM).

### Torque Value

Fastener Size	Class 8.8 Tightening Torque (ft-lbs)	Class 10.9 Tightening Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

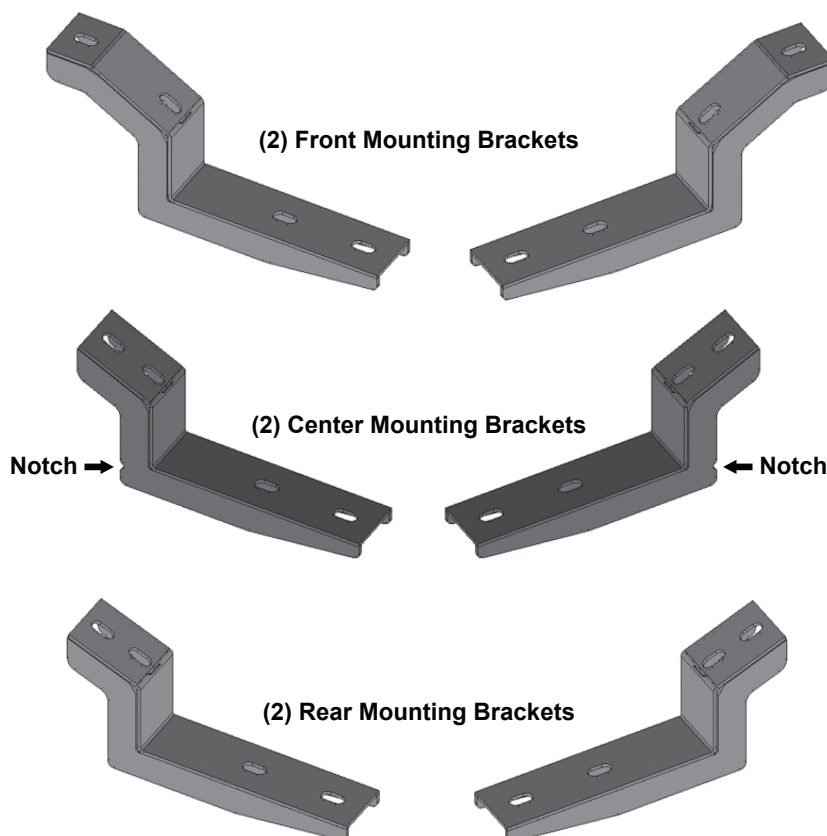

#### NOTE:

Use illustration to properly identify brackets and sidebars.

### Parts List

- x2 78" TYGER Blade Running Boards
- x2 Front Mounting Brackets
- x2 Center Mounting Brackets
- x2 Rear Mounting Brackets
- x6 8-1.25mm Double Bolt Plates
- x12 8-1.25mm x 30mm Hex Bolts
- x24 8mm x 24mm x 2mm Flat Washers
- x12 8mm Lock Washers
- x12 8-1.25mm Nylon Lock Nuts

#### Tool Needed:


13mm Socket




# TYGER®

## STEP 1

Starting on the passenger side, front of the vehicle, remove the plastic plugs or hex bolts covering the (2) threaded holes in the body panel, (Fig 1). Select (1) Front Mounting Bracket, (Fig 2).

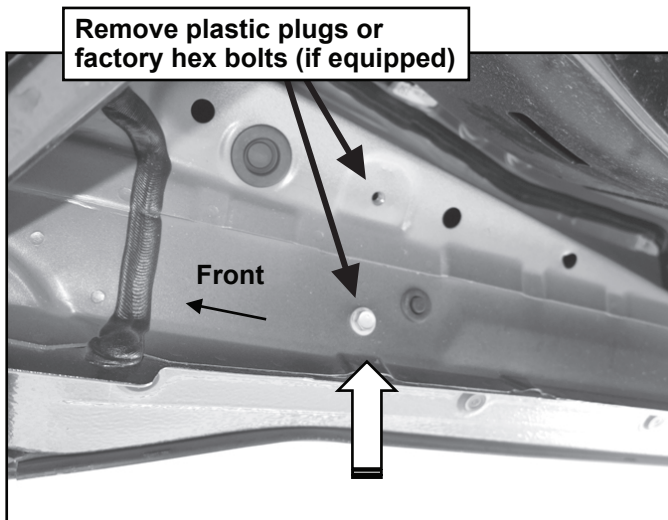


(Fig 1) Passenger/right side front mounting location

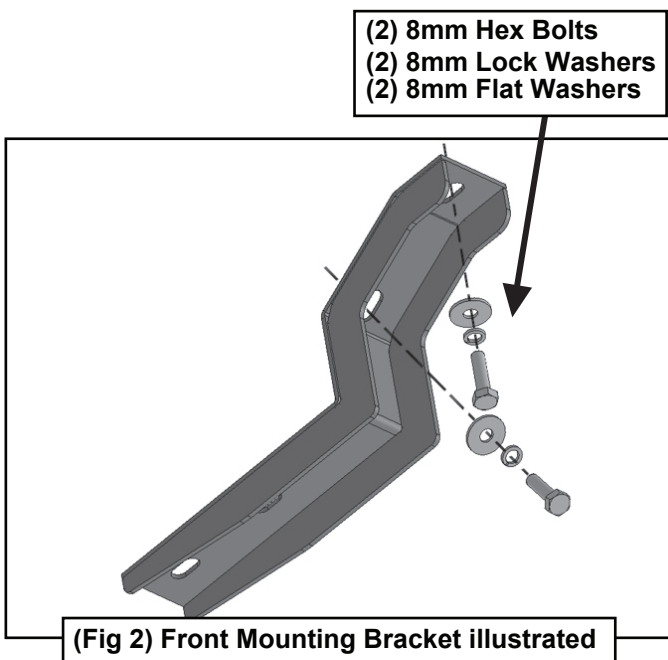

(Fig 2) Front Mounting Bracket illustrated

Attach the Bracket to the vehicle using the included (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Fig 3). Do not tighten hardware.

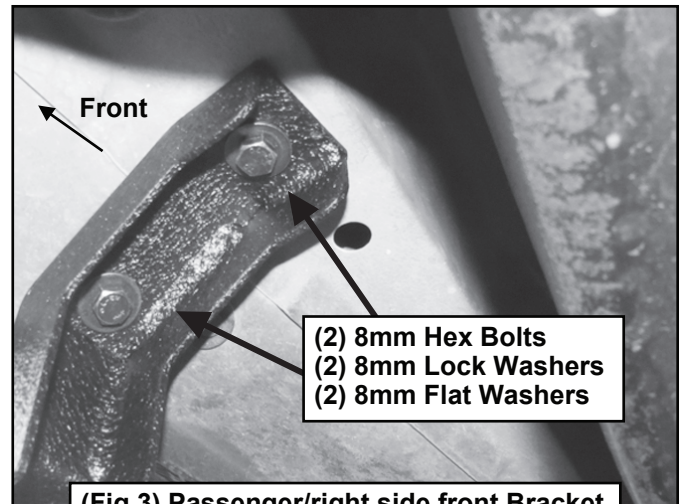


(Fig 3) Passenger/right side front Bracket

## STEP 2

Next, move to the next (2nd) center mounting location, (Fig 4).

**NOTE:** Installation will use the 1st, 2nd and 4th mounting locations for the Running Board Brackets.

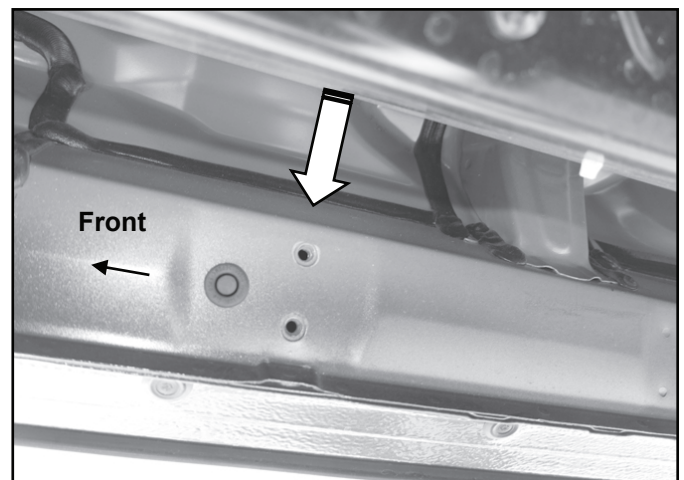



(Fig 4) Passenger/right side center mounting location



## STEP 3



Select (1) Center Mounting Bracket, (Fig 5).

**IMPORTANT:** The Center and Rear Brackets look similar but each one is unique. Use the illustration above and Fig 5 to help identify each Bracket. Repeat Step 1 to install the Center Mounting Bracket, (Fig 6).

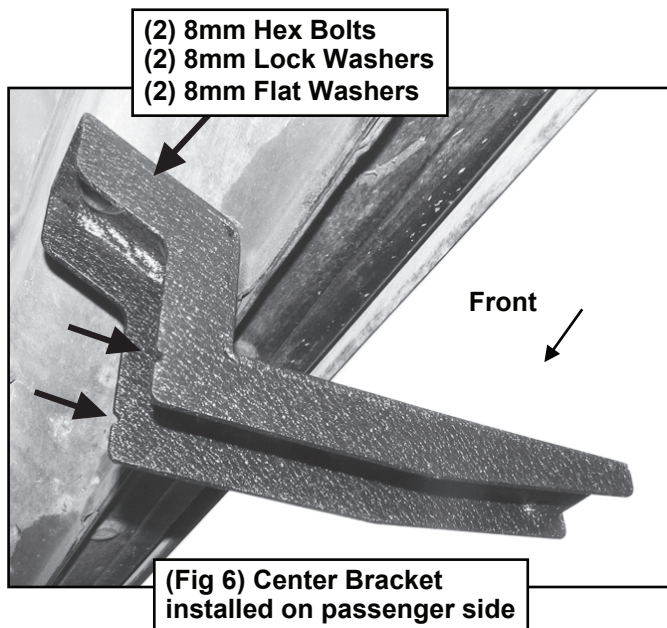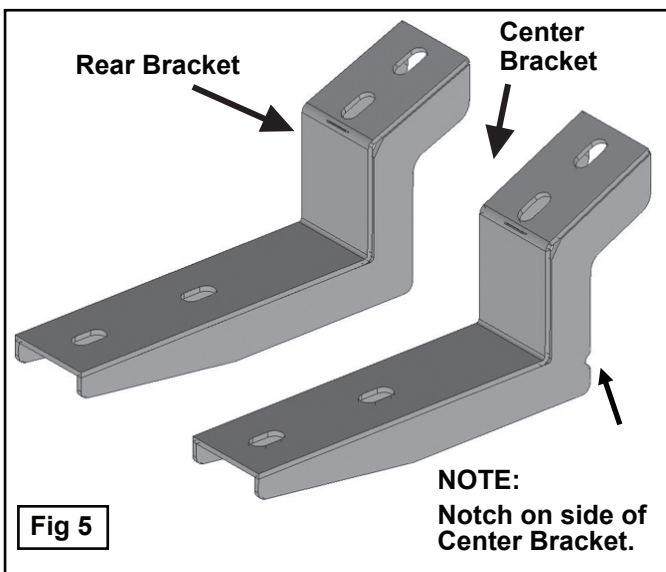

## STEP 4

Continue to the last mounting location at the back of the cab, (Fig 7). Repeat Step 1 to install (1) Rear Mounting Bracket, (Fig 8).

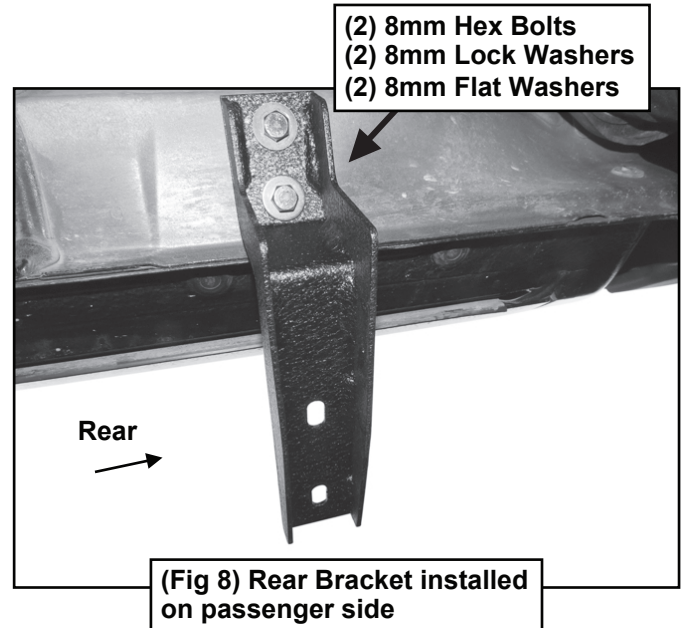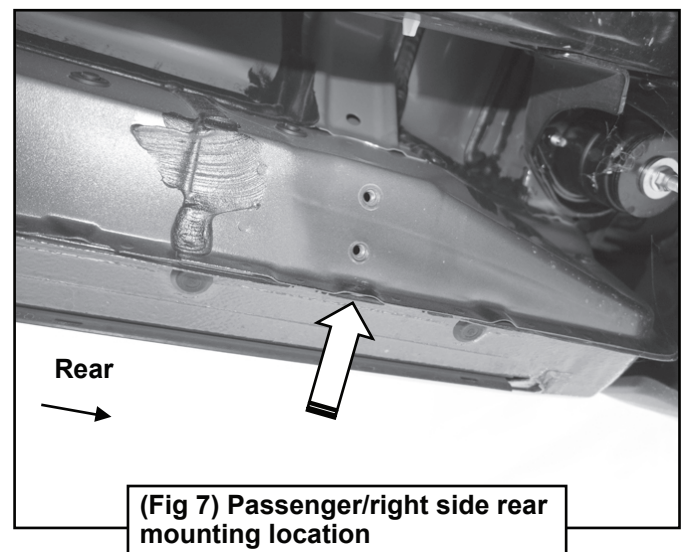






# TYGER®

## STEP 5


Once all (3) Mounting Brackets have been fully installed, carefully unwrap (1) Running Board. Place the Running Board on top of the (3) Mounting Brackets. Locate the channel in the bottom of the Running Board. Select (3) 8mm Double Bolt Plates. Insert the Bolt Plates into the channel in the bottom of the Running Board closest to the Brackets, (Fig 9). Lift the Running Board up and guide the studs down through the Brackets.

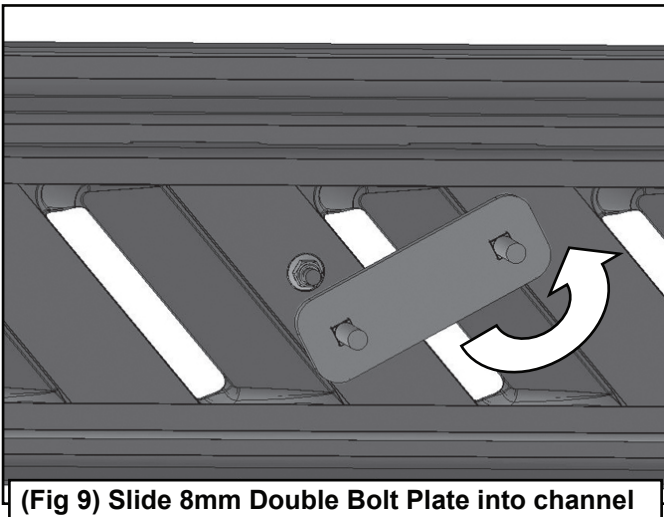


(Fig 9) Slide 8mm Double Bolt Plate into channel

## STEP 6


Attach the Running Board to the Mounting Brackets with the included (6) 8mm Flat Washers and (6) 8mm Nylon Lock Nuts, (Figures 10-12). Do not tighten at this time.

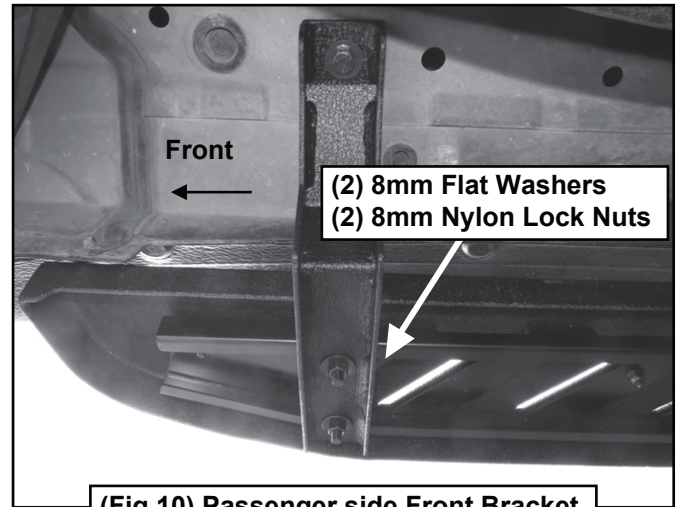

(Fig 10) Passenger side Front Bracket attached to Running Board installed

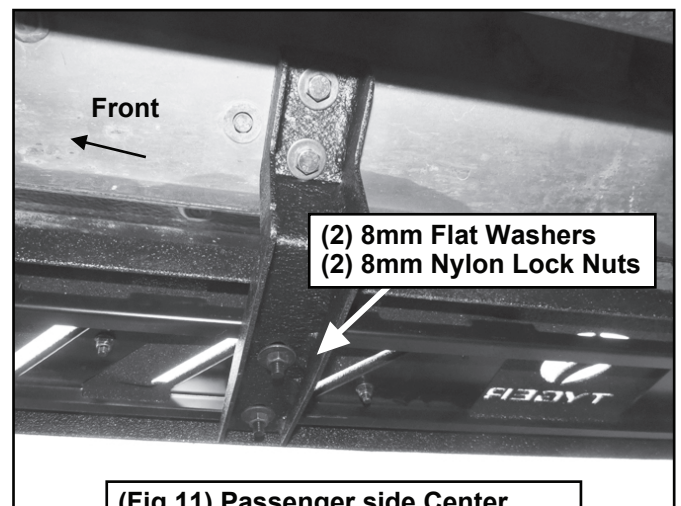

(Fig 11) Passenger side Center Bracket attached to Running Board

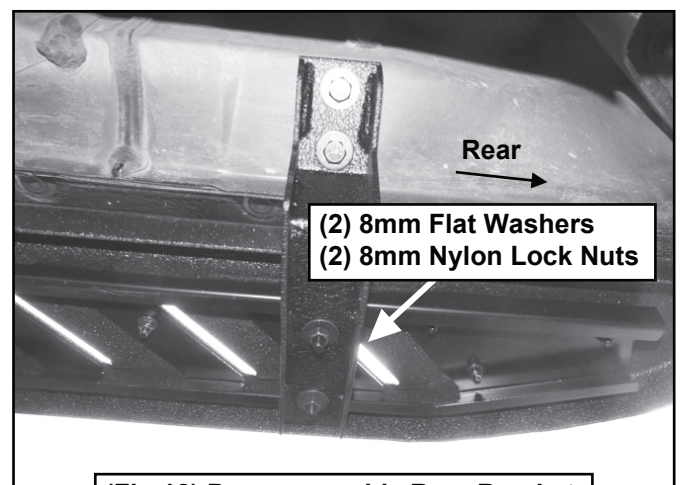

(Fig 12) Passenger side Rear Bracket attached to Running Board



# TYGER®

## STEP 7

Level and adjust the Running Board as desired and tighten all hardware.

## STEP 8

Repeat Steps 1-7 for driver side Running Board installation

## STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

