



TYGER BLADE

TG-BL3C7018

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT:

WWW.TYGERAUTO.COM/CONTACT


TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126



- x2** 78" Running Boards
- x6** 8mm Double Bolt Plates
- x16** 8mm Lock Washers
- x6** Mounting Brackets **[A]**
- x2** Short Bolt Plates
- x32** 8mm x 24mm x 2mm Flat Washers
- x1** Driver Left Side Rear Mounting Bracket **[B]**
- x16** 8-1.25mm x 30mm Hex Bolts
- x16** 8mm Clip Nuts
- x1** Passenger Right Side Rear Mounting Bracket **[C]**
- x16** 8mm Nylon Lock Nuts

Parts List


Top View

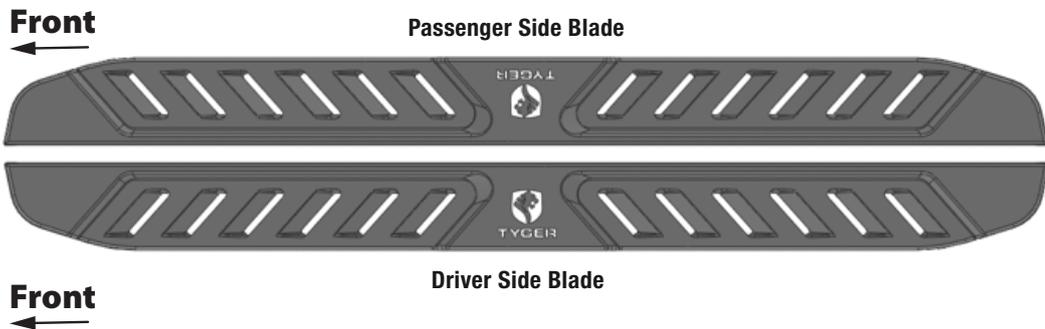



Reference the letters printed on the brackets to determine mounting locations

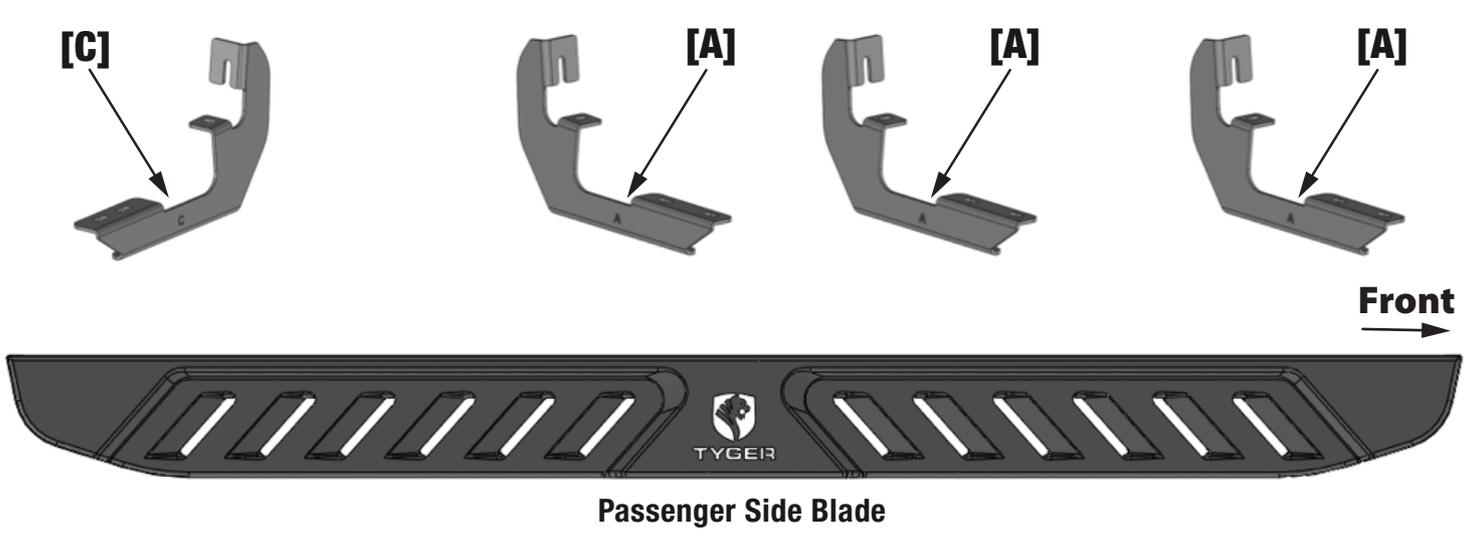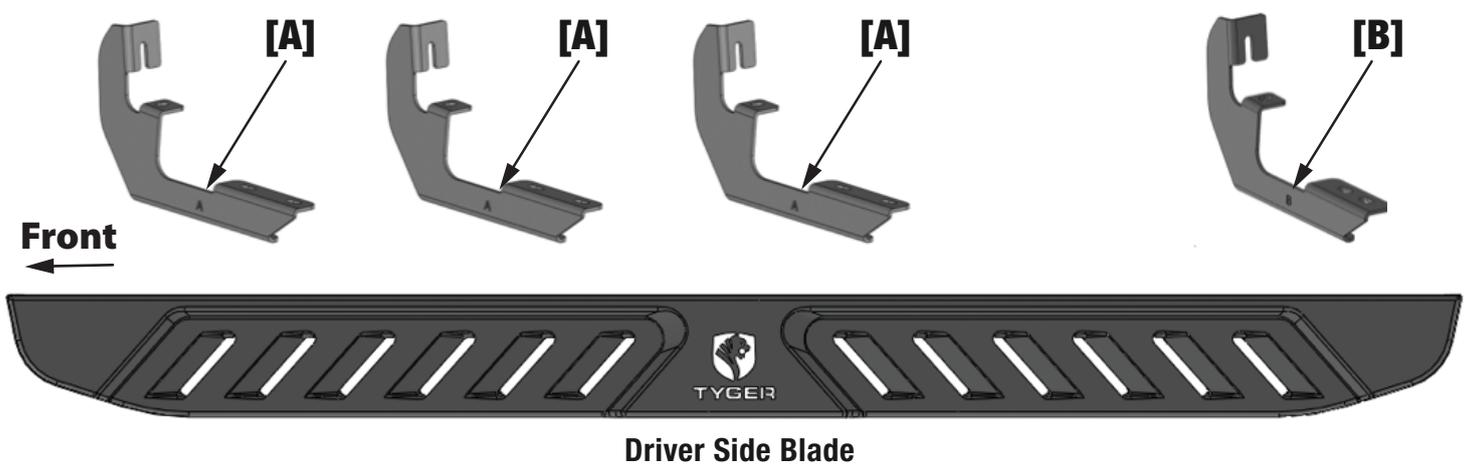

Bottom View

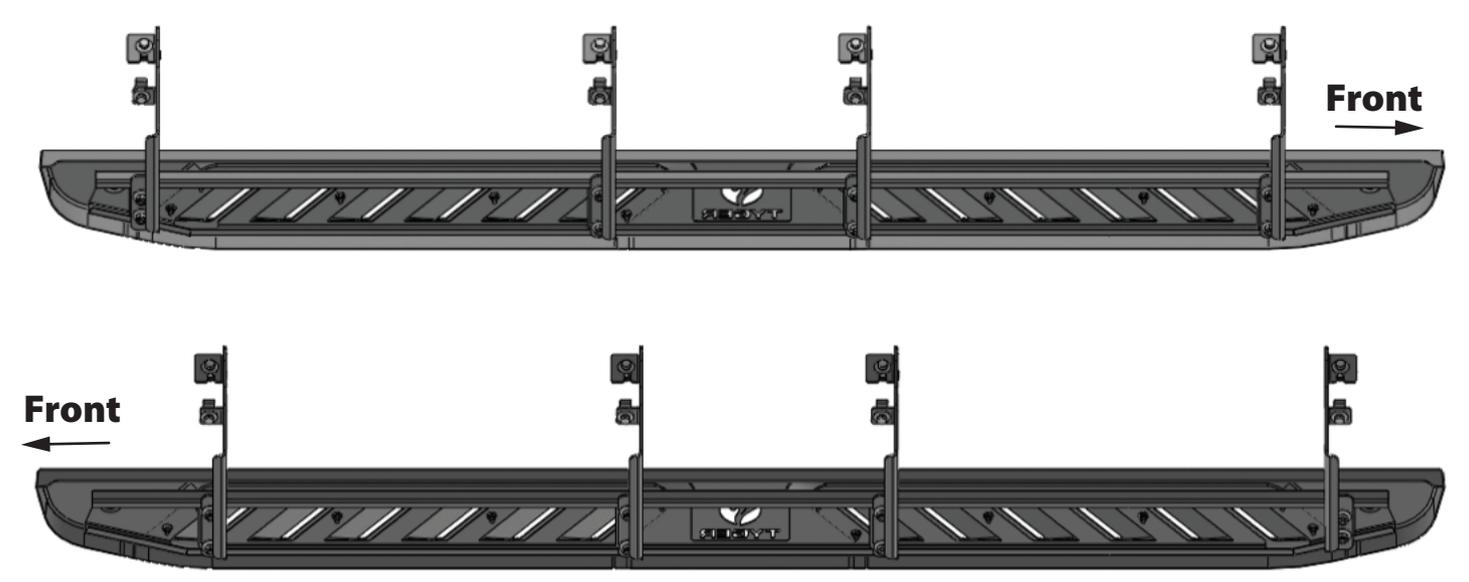



TOOLS REQUIRED

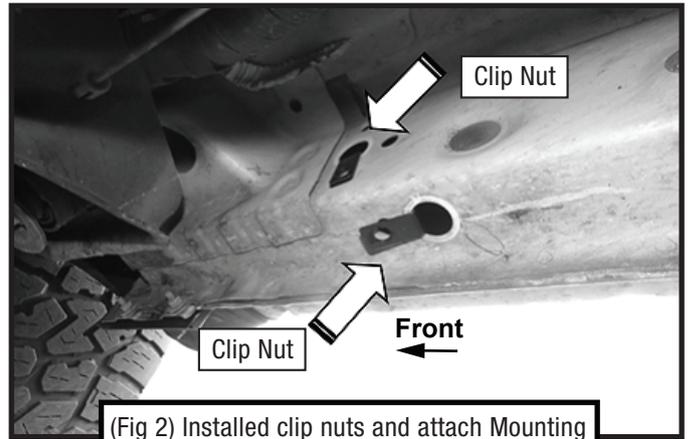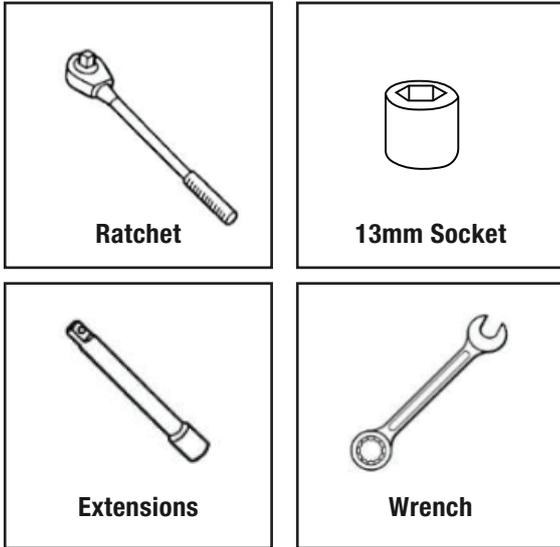

(Fig 2) Installed clip nuts and attach Mounting Bracket [A] to **front** mounting location


STEP 1 MOUNTING BRACKETS

Follow (Fig 1 – 10) to attach the brackets to the Passenger Side.

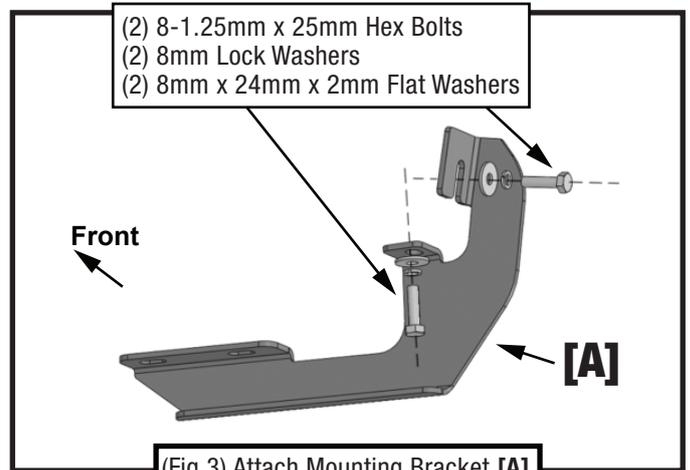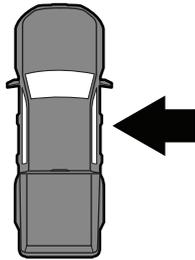

(Fig 3) Attach Mounting Bracket [A]

Passenger-side Front Mounting Area

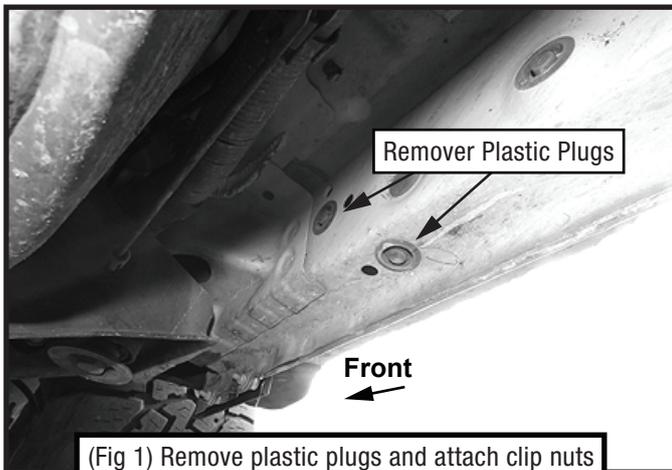


(Fig 1) Remove plastic plugs and attach clip nuts to **front** mounting location




(Fig 4) Attached Mounting Bracket [A]


Passenger-side 1st & 2nd Center Mounting Areas

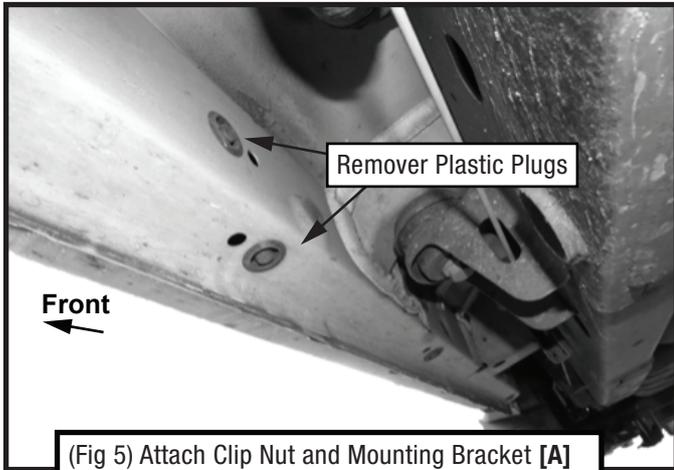

(Fig 5) Attach Clip Nut and Mounting Bracket [A] to 1st center mounting location (Refer to Fig 2-3)

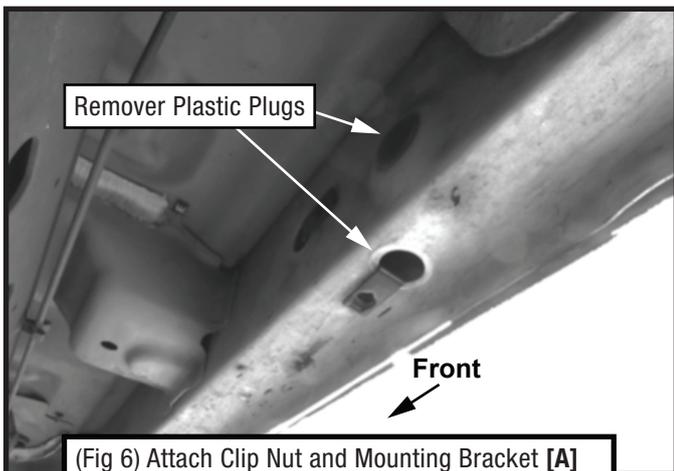


(Fig 6) Attach Clip Nut and Mounting Bracket [A] to 2nd center mounting location (Refer to Fig 2-3)

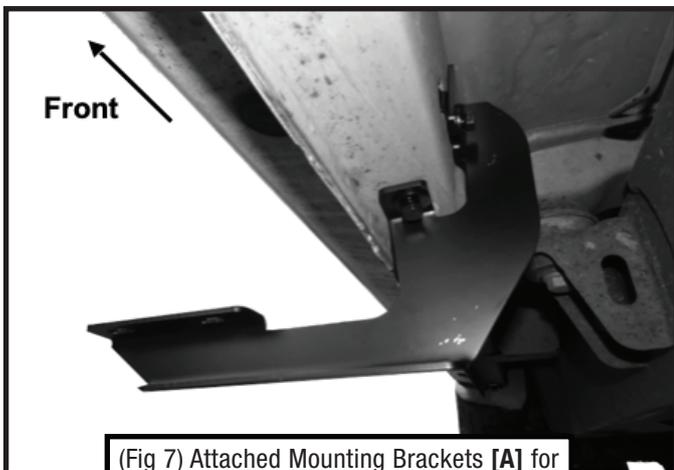


(Fig 7) Attached Mounting Brackets [A] for 1st and 2nd center mounting locations


Passenger-side Rear Mounting Area

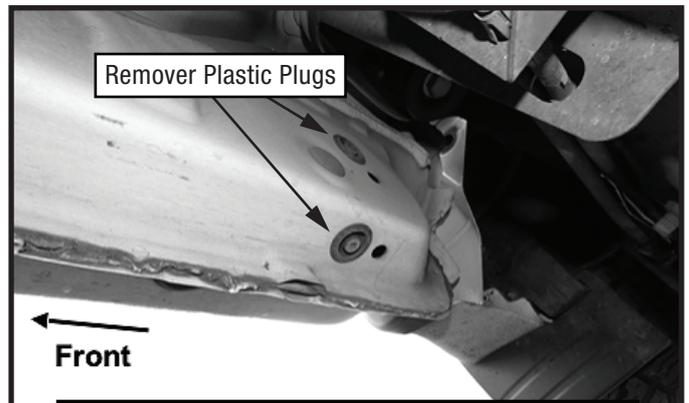

(Fig 8) Attach Clip Nut and Rear Mounting Bracket [C] to Rear mounting location (Refer to Fig 2)

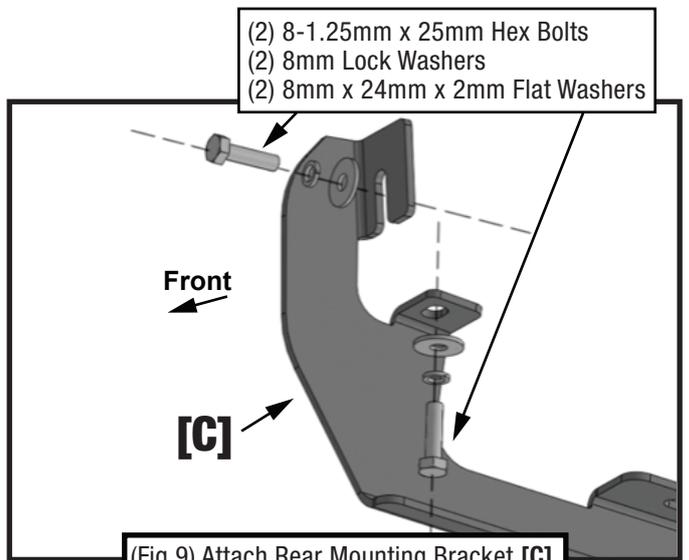


(Fig 9) Attach Rear Mounting Bracket [C]

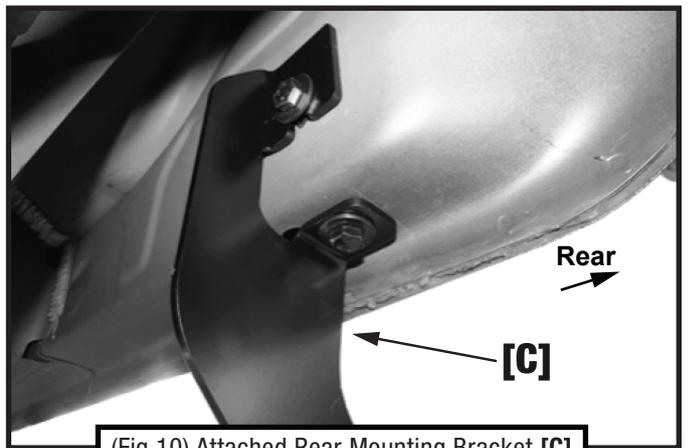


(Fig 10) Attached Rear Mounting Bracket [C]

STEP 2 MOUNTING RUNNING BOARDS

Follow (Fig 11-12) to install the running board.

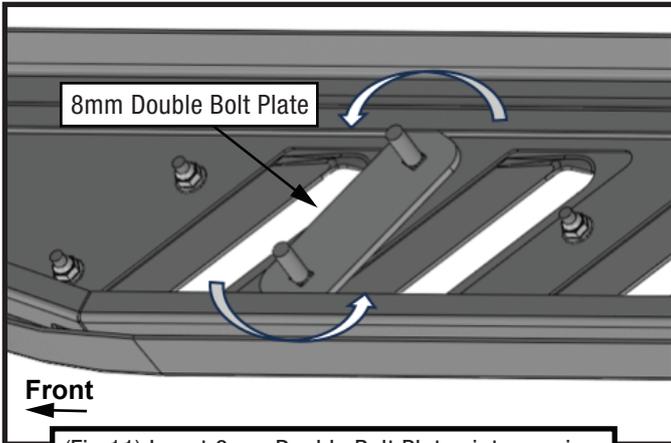


(Fig 11) Insert 8mm Double Bolt Plates into running board channels for Mounting Brackets [A]
NOTE: For Rear Bracket [C], use Short Double Plate

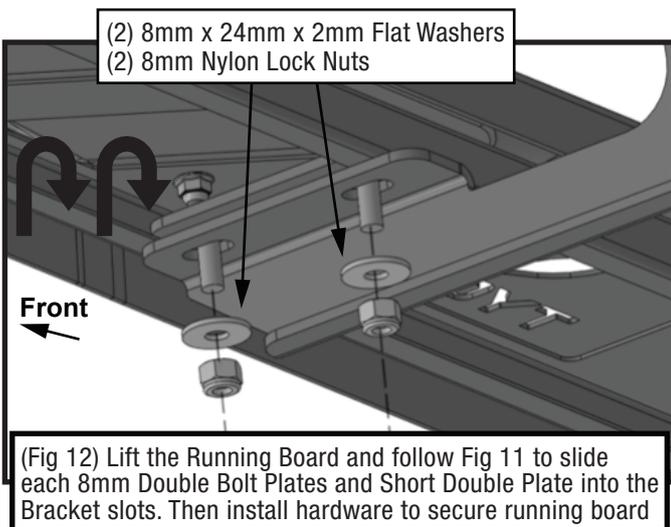

(Fig 12) Lift the Running Board and follow Fig 11 to slide each 8mm Double Bolt Plates and Short Double Plate into the Bracket slots. Then install hardware to secure running board

STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation. Use Rear Mounting Bracket [B] instead of [C].

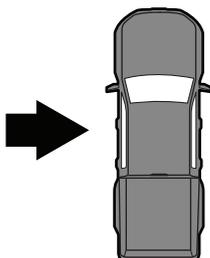

STEP 4

Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.