



BLADE®

TG-BL8F7218

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x2 TYGER BLADE Running Boards
- x6 Double Bolt Plates
- x6 Mounting Brackets
- x24 8mm Clip Nuts
- x12 8mm Hex Nuts
- x24 8mm Lock Washers
- x12 8mm x 28mm x 3mm Large Flat Washers
- x36 8mm x 24mm x 2mm Flat Washers
- x12 8-1.25mm x 25mm Hex Bolts
- x12 8-1.25mm x 30mm Hex Bolts
- x12 8mm Nylon Lock Nuts

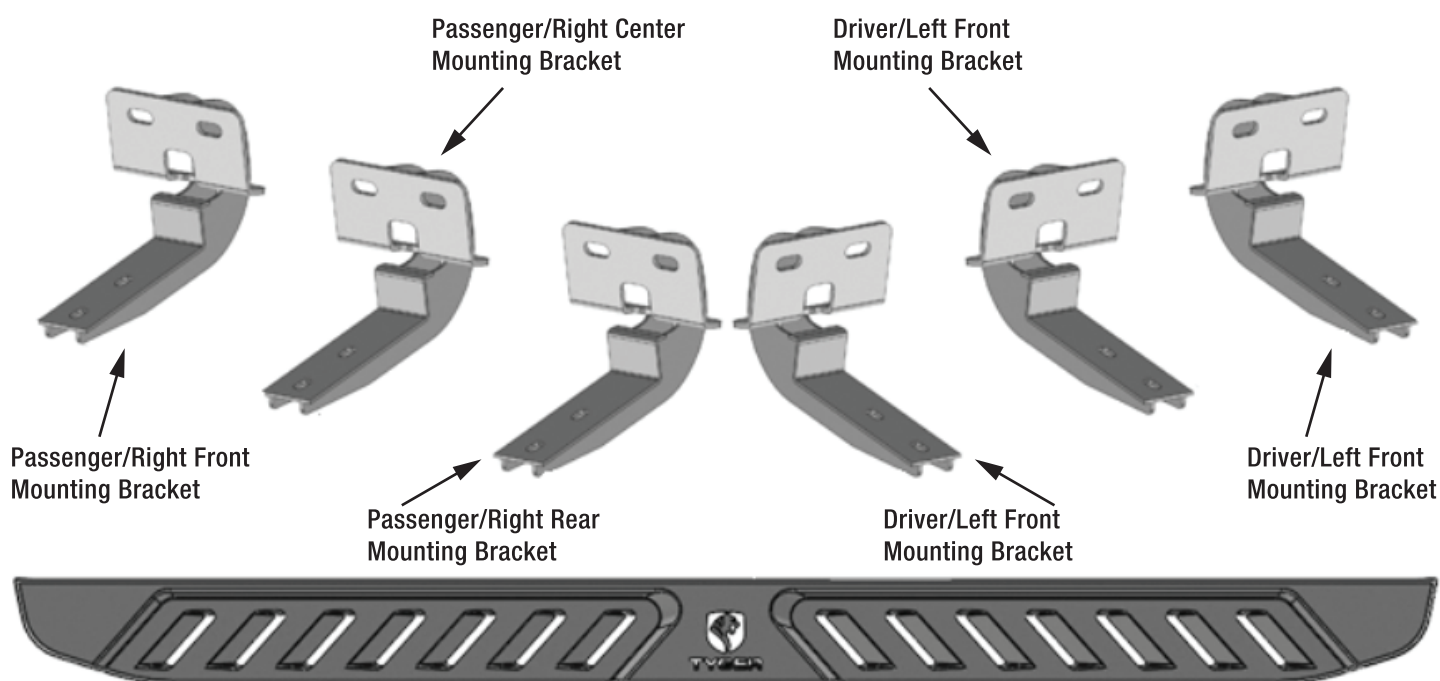



STEP 1

Remove Contents From Box. Verify All Parts Are Present. Read Instructions Carefully Before Starting Installation.


STEP 2

Starting on the Driver/Left, front of the vehicle, locate the (2) holes in the pinch weld. Directly above the (2) holes, locate the factory mounting holes in the inner side panel, (Figure 1).

NOTE: The inner holes may be covered with sealing tape or insulation. Slide the 8mm Clip Nuts into the opening with the nut towards the inside. Line up the threaded nut on the clip with the round holes, (Figure 2).

Driver/Left Side Installation Pictured

8mm Clip Nuts (hole in body panel shown for example only-location and shape may differ slightly)

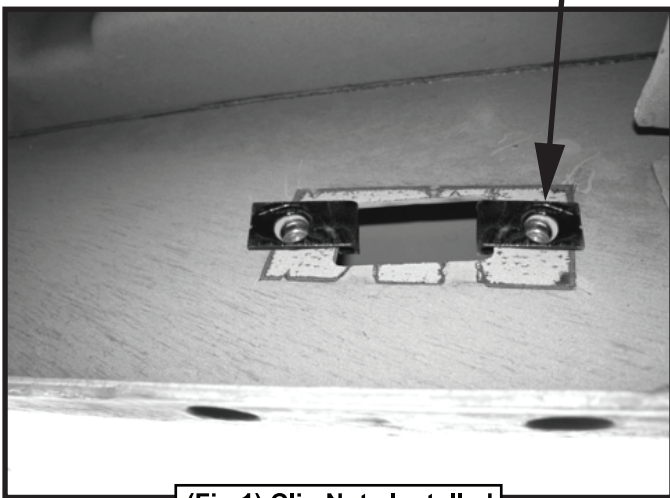

(Fig 1) Clip Nuts Installed

(2) 8mm Clip Nuts




(Fig 2) Driver/Left Front Mounting location

STEP 3

Attach the Driver/Left side Mounting Bracket to the Clip Nuts with (2) 8mm x 30mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Figure 3). Depending on model and year, the brake cable may run on the inside or outside of the Bracket. DO NOT tighten hardware at this time.

Driver/Left Side Installation Pictured

(2) 8mm x 25mm Hex Bolts
(2) 8mm x 24mm Flat Washer

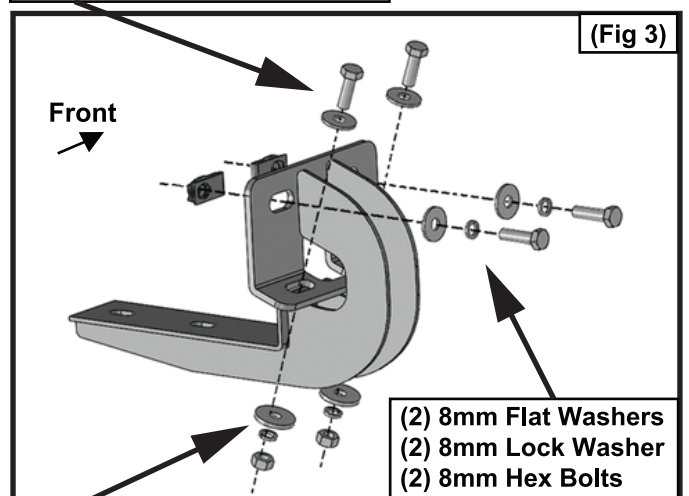

(Fig 3)

(2) 8mm x 28mm Flat Washers
(2) 8mm Lock Washer
(2) 8mm Hex Nuts



TYGER[®]


STEP 4

Align the bottom holes in the front Mounting Bracket with the (2) holes in the pinch weld. Bolt the Bracket to the pinch weld using the included (2) 8mm x 25mm Hex Bolts, (2) 8mm x 24mm Flat Washers, (2) 8mm x 28mm Flat Washers, (2) 8mm Lock Washers and (2) 8mm Hex Nuts, (Figure 3).


STEP 5

Repeat **STEPS 2—4** to attach the Center and Rear Brackets to the rocker panel, (Figures 4 & 5).

Driver/Left Side Installation Pictured

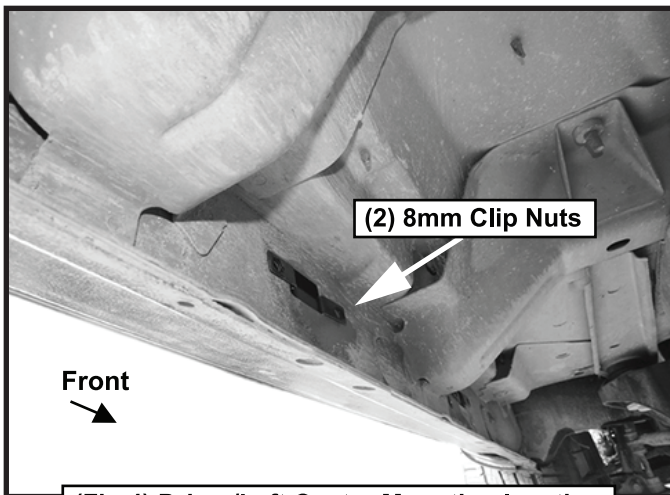

(Fig 4) Driver/Left Center Mounting location

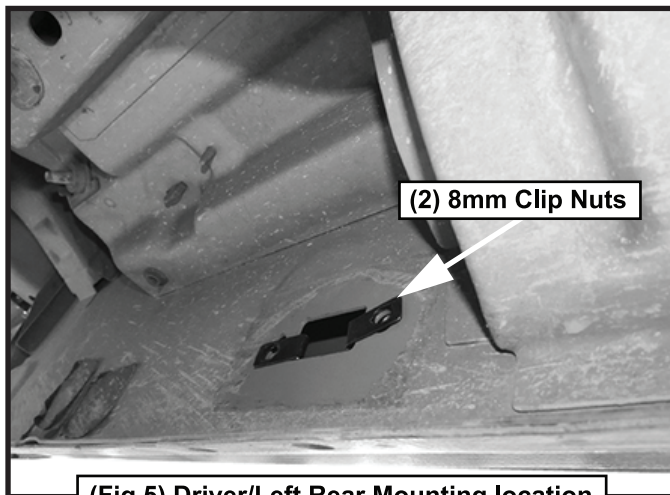


(Fig 5) Driver/Left Rear Mounting location

STEP 6

Select a Running Board. Insert (3) 8mm Double Bolt Plates into the channel and line up with the mounting brackets, (Figure 6).


Driver/Left Side Installation Pictured

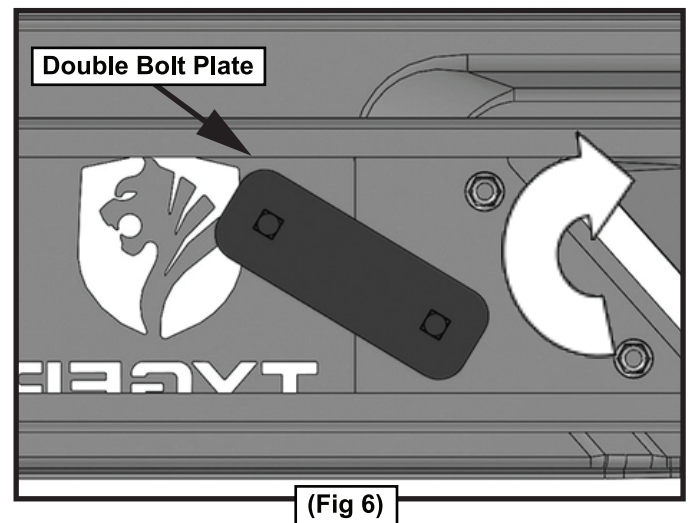

(Fig 6)

Attach Running Board to the mounting brackets with (6) 8mm x 24mm Flat Washers and (6) 8mm Nylon Lock Nuts, (Figure 7). Level and adjust the Running Board properly and tighten all hardware.

Driver/Left Side Installation Pictured

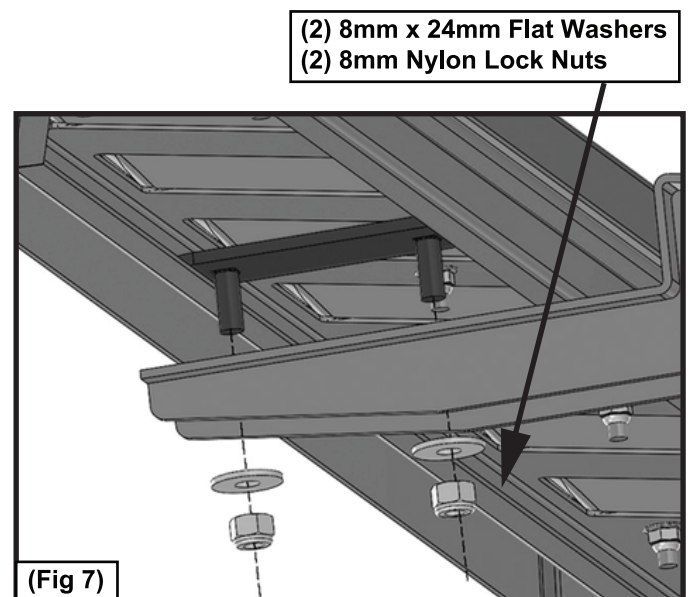

(Fig 7)



TYGER®

STEP 7

Repeat **STEPS 2—6** for Passenger/Right Running Board installation.

STEP 8

Do periodic inspections to the installation to make sure that all hardware is secure and tight.