



TYGER FENDER LINER

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


TG-FL6J46018

Parts List

- x1 Driver/Left Front Liner
- x1 Passenger/Right Front Liner
- x1 Driver/Left Rear Liner
- x1 Passenger/Right Rear Liner
- x2 Support Brackets
- x16 6mm x 20mm Torx Head Bolts
- x16 6mm Lock Washers
- x20 6mm x 18mm OD x 1.6mm Flat Washers
- x4 6mm Nylon Lock Nuts
- x2 6mm Flange Nuts
- x2 6mm Clip Nuts
- x1 4mm Torx Wrench


Passenger/Right
Rear Fender Liner

Passenger/Right
Front Fender Liner

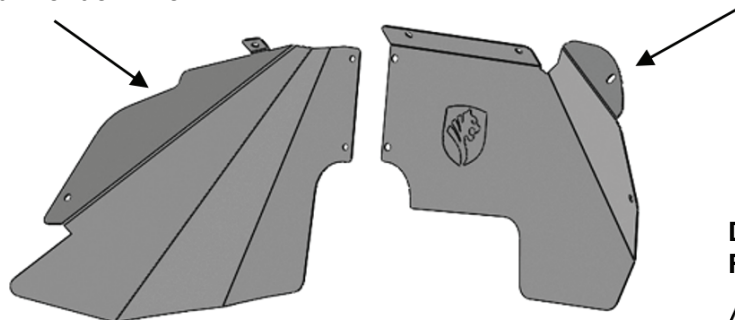

Driver/Left Front
Fender Liner

Driver/Left Rear
Fender Liner

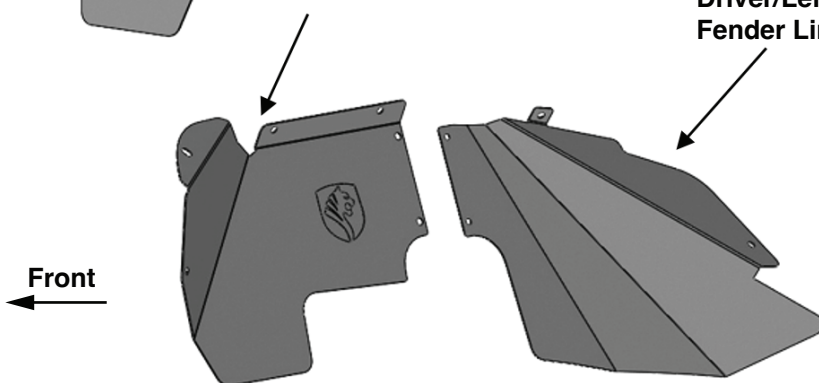



TYGER®


PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. CUTTING AND MODIFICATION IS REQUIRED TO REINSTALL THE PLASTIC FENDER LINER. DRILLING MAY BE REQUIRED. ASSISTANCE IS RECOMMENDED.

STEP 1

Start installation on the driver/left side of the vehicle. Unplug the side marker light from the wire harness. Release the plastic clips and remove any hardware attaching the liner to the outer edge and underside of the fender and the body (Fig 1). Remove the inner fender liner.

Driver/Left Side Installation Pictured

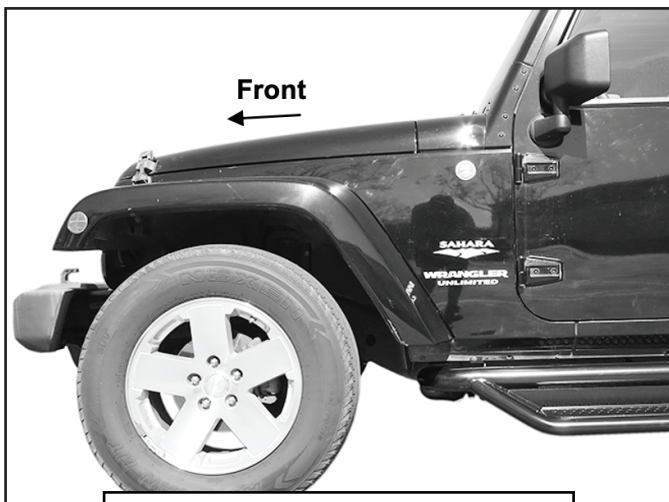


(Fig 1) Release clips and all hardware attaching inner fender liner to outer fender (Driver/Left side shown)

STEP 2

Next, firmly pull the fender straight outward from the body to pop the clips from the mounting holes (Fig 2). Remove any clips left attached to the body and move the fender to a smooth, clean surface.

Driver/Left Side Installation Pictured

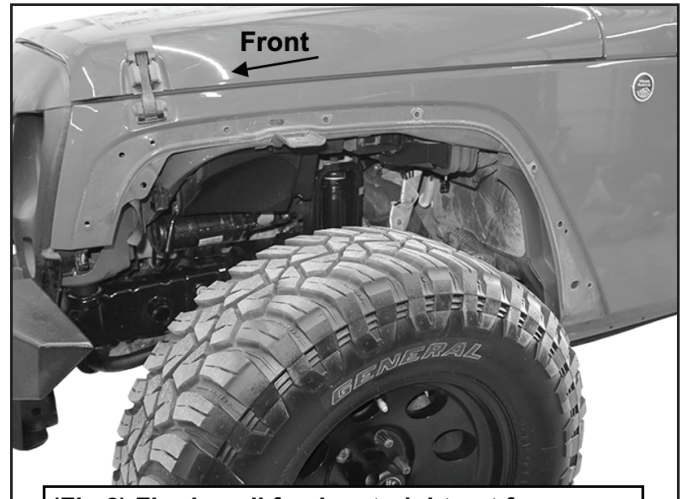


(Fig 2) Firmly pull fender straight out from vehicle. Remove any clips still attached to body

STEP 3

Slide (1) 6mm Clip Nut onto the indicated mounting tab in (Fig 3).

Driver/Left Side Installation Pictured

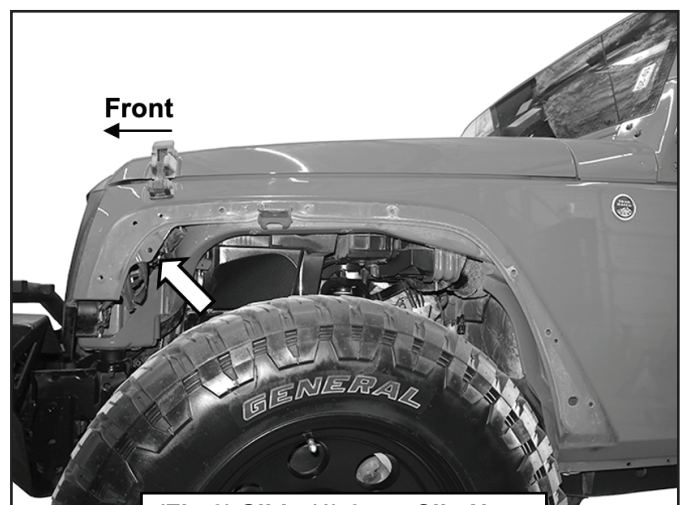


(Fig 3) Slide (1) 6mm Clip Nut onto the mounting hole (arrow)



STEP 4


Locate and temporarily remove the factory bolt in the lower front of the wheel well (Fig 4).

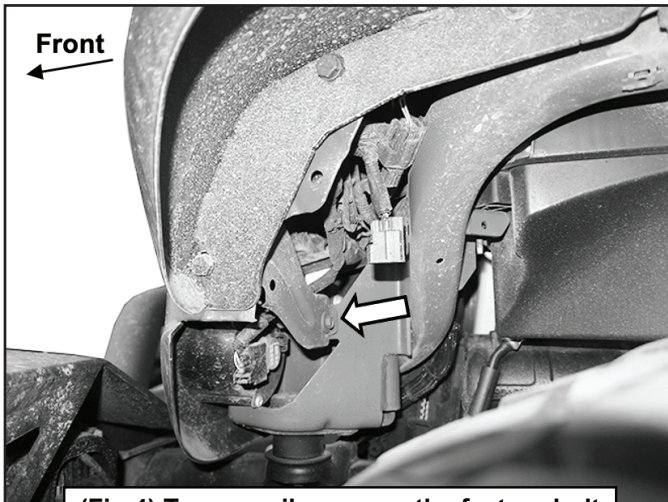

(Fig 4) Temporarily remove the factory bolt

STEP 5

Select the Driver/Left Front Fender Liner and Rear Fender Liner. Attach the Front Liner to the front face of the Rear Liner with (2) 6mm Torx Bolts, (2) 6mm Lock Washers, (4) 6mm Flat Washers and (2) 6mm Nylon Lock Nuts (Fig 5). DO NOT tighten hardware.

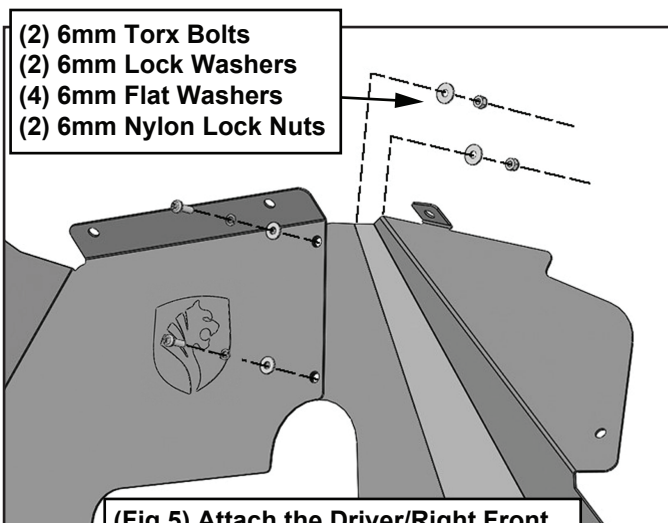


(Fig 5) Attach the Driver/Right Front Fender Liner to the Rear Fender Liner

STEP 6

Attach (1) Support Bracket to the front of the Fender Liner. Reuse the factory bolt to attach the Support Bracket to the front of the wheel well (Fig 6). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

- (1) 6mm Torx Bolt
- (1) 6mm Lock Washer
- (1) 6mm Flat Washer

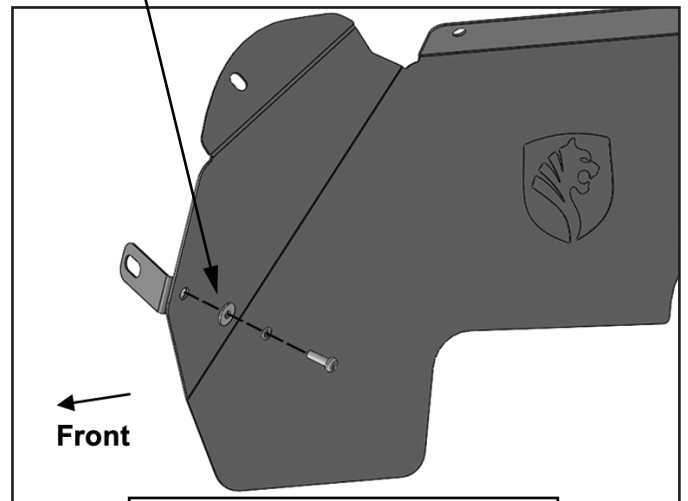


(Fig 6) Attach (1) Support Bracket to the front of the Fender Liner

STEP 7


Attach the top of the Fender Liner assembly to the Clip Nut and threaded inserts in the top of the wheel well with (3) 6mm Torx Bolts, (3) 6mm Lock Washers and (3) 6mm Flat Washers (Fig 7). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

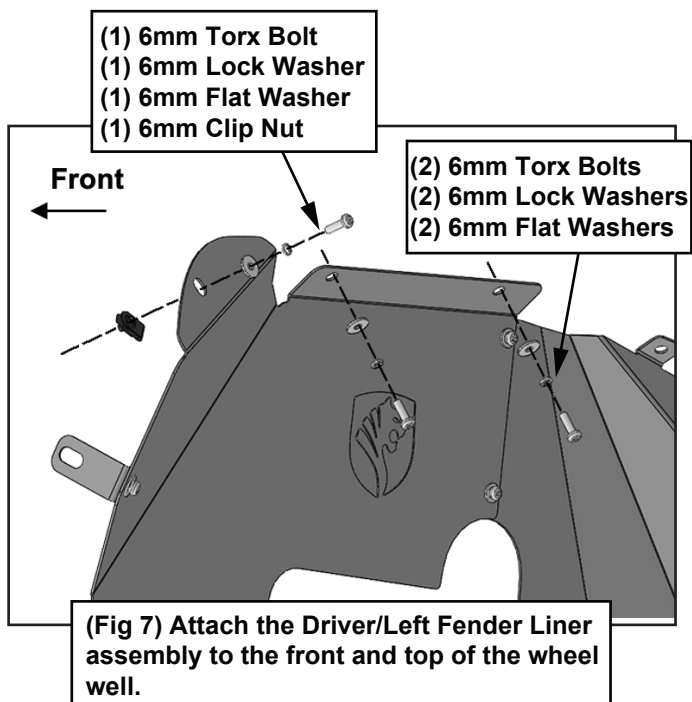

STEP 8

Attach the upper rear Fender Liner to the wheel well with (1) 6mm Torx Bolt, (1) 6mm Lock Washer and (1) 6mm Flat Washer and to the lower rear with (1) 6mm Torx Bolt, (1) 6mm Lock Washer, (1) 6mm Flat Washer and (1) 6mm Flange Nut (Fig 8). DO NOT tighten hardware.

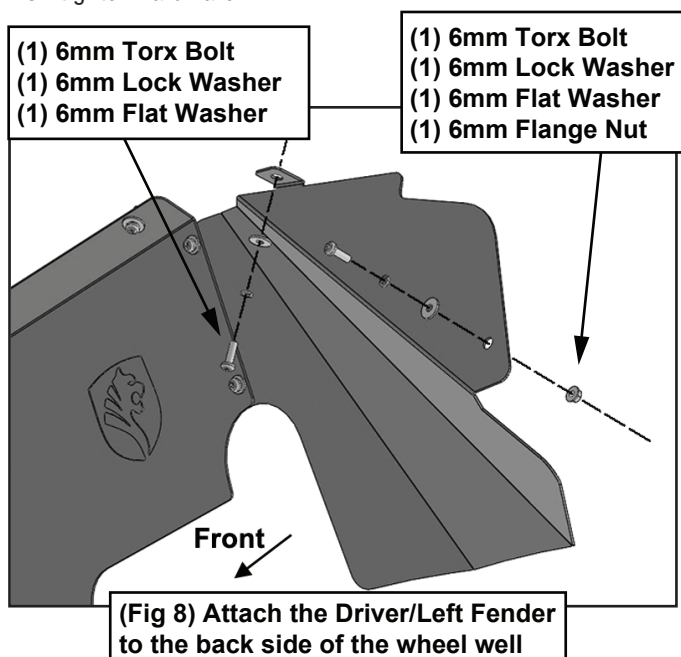

STEP 9

Adjust the position of the Fender Liner and fully tighten all hardware.

STEP 10

Repeat **STEPS 1-9** to attach the Passenger/Right Fender Liners.

STEP 11

Do periodic inspections to the installation to make sure that all hardware is secure and tight.