



# TYGER®

# TYGER FENDER LINER

## BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

## TORQUE VALUES


Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

TG-FL9J66028

## Parts List

- x1 Diver/Left Front Fender Liner
- x1 Passenger/Right Front Fender Liner
- x1 Driver/Left Center Fender Liner
- x1 Passenger/Right Center Fender Liner
- x1 Driver/Left Rear Fender Liner
- x1 Passenger/Right Rear Fender Liner
- x4 8mm x 18mm OD x 10mm Spacers
- x8 6mm x 30mm Torx Bolts
- x16 6mm x 20mm Torx Bolts
- x12 6mm x 18mm OD x 1.6mm Flat Washers
- x32 6mm x 12mm OD x 1.6mm Flat Washers
- x24 6mm Lock Washers
- x20 6mm Hex Nuts
- x1 Torx Wrench

## Exterior Facing Sides of the Fender Liners Shown

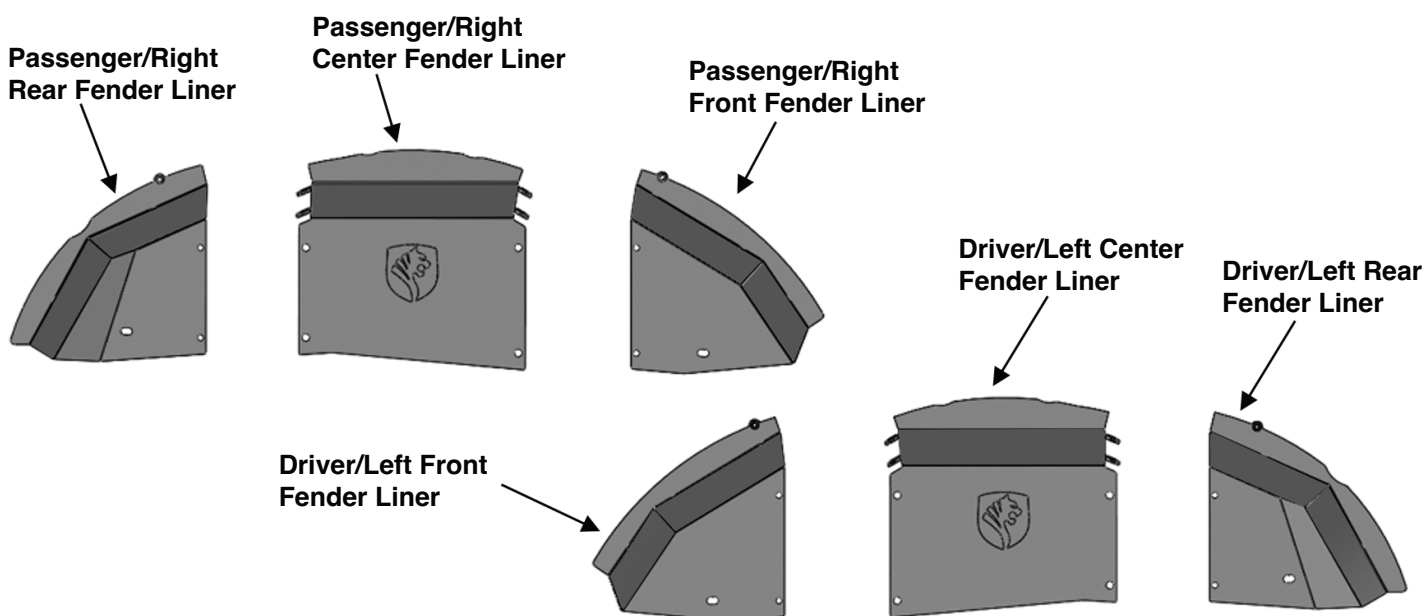



# TYGER®

## PROCEDURE:


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.

### STEP 1

Start installation on the Driver/Left side of the vehicle. Remove the plastic liner if equipped (Figs 1 & 2).

**NOTE:** Install factory or aftermarket fender first before installing the Fender Liner.

Driver/Left Side Installation Pictured

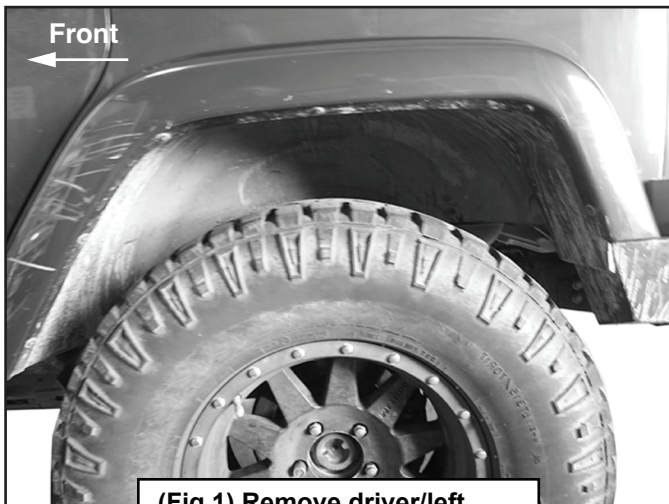

(Fig 1) Remove driver/left plastic fender liner if installed



(Fig 2) Fender and plastic liner pictured removed for instruction purposes only. Install aftermarket fender before installing Fender Liners

### STEP 2

Release the clip attaching the breather at the rear of the wheel opening (Fig 3). Relocate the breather for clearance to install liner.

Driver/Left Side Installation Pictured




(Fig 3) On driver/left side, relocate vent rear

### STEP 3

Select the Driver/Left Front, Center and Rear Fender Liners. Slide the (3) Liners together (Fig 4).

**NOTE:** The tabs on the Center Liner will lay on top of the front and Rear Liner. Attach the (3) Liners with (8) 6mm x 20mm Torx Bolts, (16) 6mm x 12mm Flat Washers, (8) 6mm Lock Washers and (8) 6mm Hex Nuts (Figs 5 & 6).

Driver/Left Side Installation Pictured

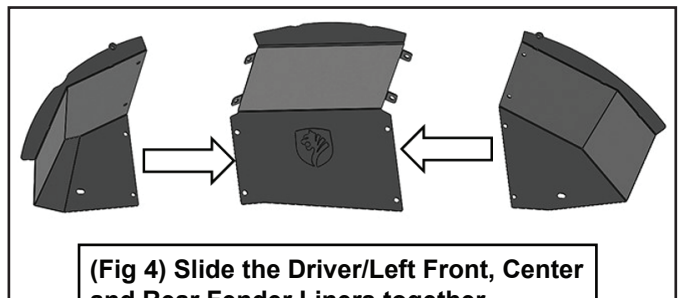


(Fig 4) Slide the Driver/Left Front, Center and Rear Fender Liners together




# TYGER<sup>®</sup>

- (4) 6mm x 20mm Torx Bolts
- (8) 6mm x 12mm Flat Washers
- (4) 6mm Lock Washers
- (4) 6mm Hex Nuts

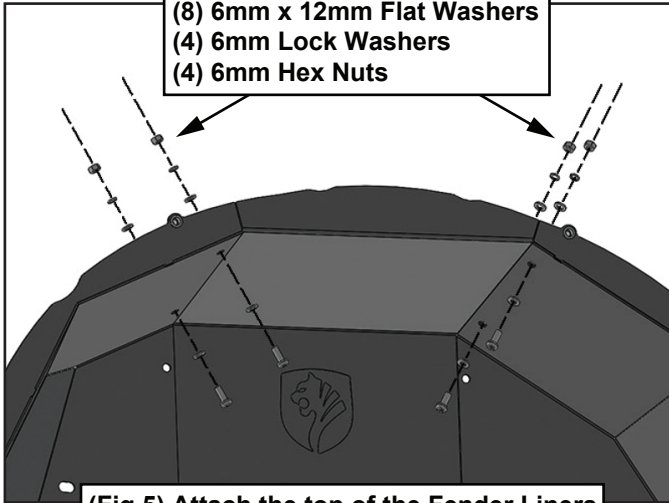

(Fig 5) Attach the top of the Fender Liners

- (4) 6mm x 20mm Torx Bolts
- (8) 6mm x 12mm Flat Washers
- (4) 6mm Lock Washers
- (4) 6mm Hex Nuts

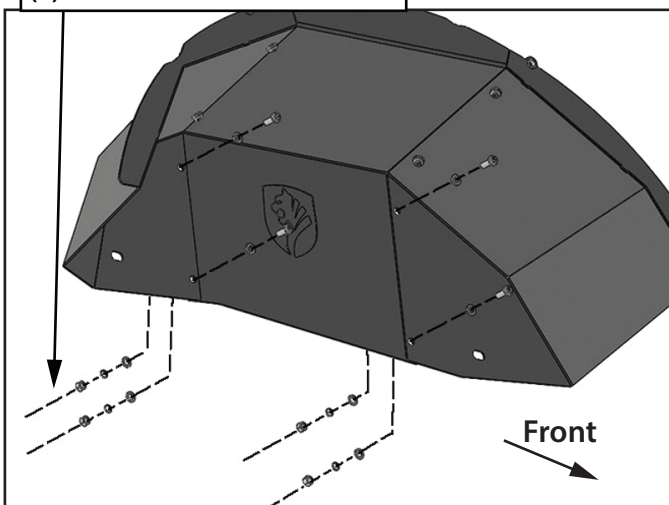

(Fig 6) Attach the sides of the Fender Liners

## STEP 4

Insert the Liner over the tire and back into position behind body panel.

**NOTE:** It may be slightly easier to install Liner with vehicle raised and tire removed.

## STEP 5


Attach the top of the Liner to the (2) holes in the body and aftermarket fender with (2) 6mm x 20mm Hex Socket Bolts, (2) 6mm Lock Washers and (2) 6mm x 18mm Flat Washers (Fig 7).

**NOTE:** Mounting holes in the Fender Liner line up with existing holes in the body panel and aftermarket fenders. DO NOT tighten hardware.

Driver/Left Side Installation Pictured

- (2) 6mm x 30mm Torx Bolts
- (4) 6mm x 18mm Flat Washers
- (2) 10mm Spacers
- (2) 6mm Lock Washers
- (2) 6mm Hex Nuts

- (2) 6mm x 20mm Hex Socket Bolts
- (2) 6mm Lock Washers
- (2) 6mm x 18mm Flat Washers

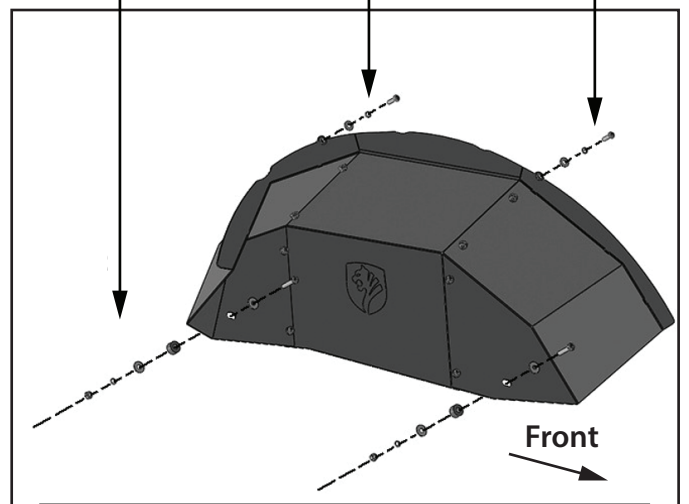

(Fig 7) Attach Fender Liner to existing holes in aftermarket fender (top) and body panel (bottom)



# TYGER®

## STEP 6

Attach the bottom of the Liner to the mounting holes in the body with (2) 6mm x 30mm Torx Bolts, (4) 6mm x 18mm Flat Washers, (2) 10mm Spacers, (2) 6mm Lock Washers and (2) 6mm Hex Nuts (Fig 7). DO NOT tighten hardware.

## STEP 7

Level and adjust Fender Liner and tighten at hardware.

## STEP 8

Repeat **STEPS 1-6** to attach the Passenger/Right Fender Liners.

## STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.