



# TYGER®

## TYGER FURY STEPS

TG-FS2C30078

### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)


### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


### Parts List

- x1 Driver/Left TYGER Fury Step
- x1 Passenger/Right TYGER Fury Step
- x4 Driver/Left Mounting Brackets
- x4 Passenger/Right Mounting Brackets
- x16 8mm x 30mm Hex Bolts
- x16 8mm x 25mm Combo Bolts
- x16 8mm Lock Washers
- x16 8mm x 24mm OD x 2mm Flat Washers

(4) Passenger/Right Mounting Brackets

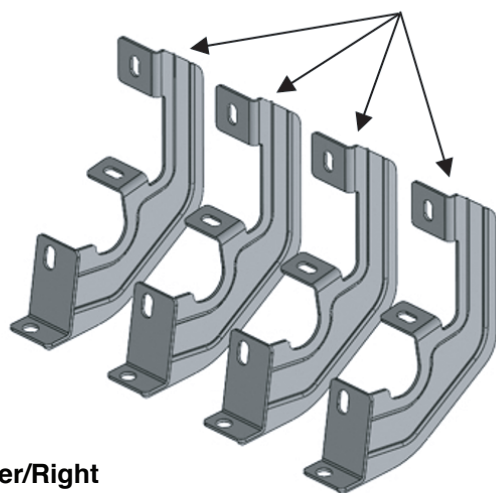

(4) Driver/Left Mounting Brackets

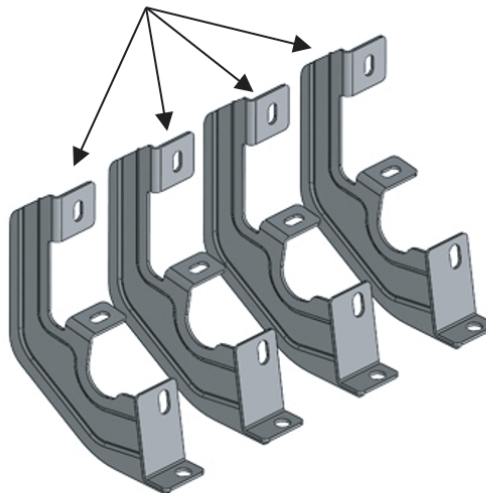

Passenger/Right TYGER Fury Step





# TYGER®

## PROCEDURE:


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.  
READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.  
ASSISTANCE IS RECOMMENDED.

## STEP 1

Start the installation under the Passenger/Right side of the vehicle.

a. For “Early” 2019 models, locate the 6 plugs along the bottom edge of the body. Mounting Brackets will bolt to the 1st, 3rd, 4th and 6th threaded mounting holes (Fig 1).

Passenger/Right Side Installation Pictured

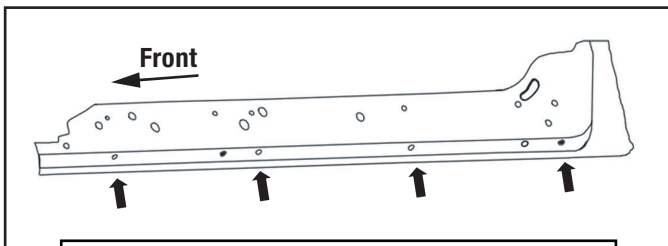


(Fig 1) Passenger/right “Early” rocker panel mounting locations (arrows) NOTE: Hold Bracket up to body panel to help determine the correct mounting locations.

b. For “Late” 2019 models, all (4) mounting locations will be used.


## STEP 2

Remove the plastic plugs from the passenger/right front mounting location. Select (1) Passenger/Right Mounting Bracket. Attach the Mounting Bracket to the factory threaded holes with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Figs 2 & 3). DO NOT tighten hardware.

Passenger/Right Side Installation Pictured

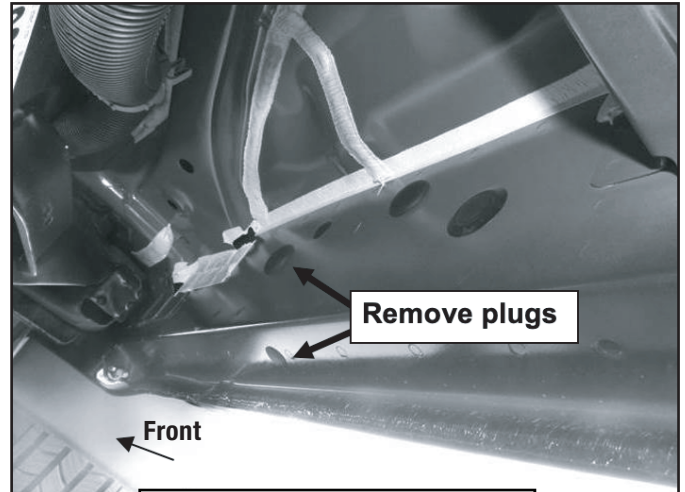

(Fig 2) Remove plastic plugs to uncover threaded inserts

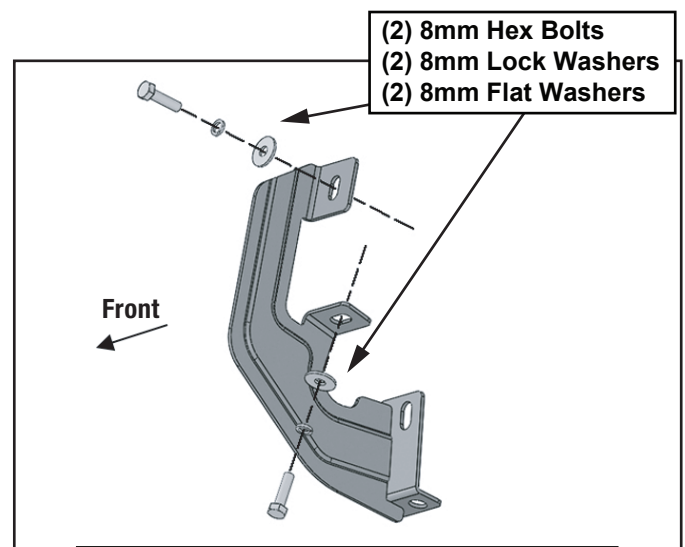

(Fig 3) Attach (1) Passenger/Right Mounting Bracket to the mounting location


## STEP 3

Repeat **STEPS 1 & 2** to attach the remaining (3) Passenger/Right Mounting Brackets to the (3) remaining locations along the rocker panel (Figs 4-7). DO NOT tighten hardware.


Passenger/Right Side Installation Pictured




# TYGER<sup>®</sup>

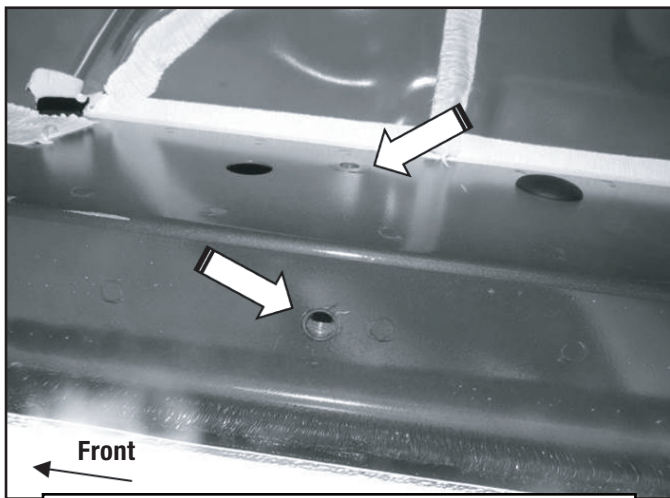


(Fig 4) Passenger/right front mounting location

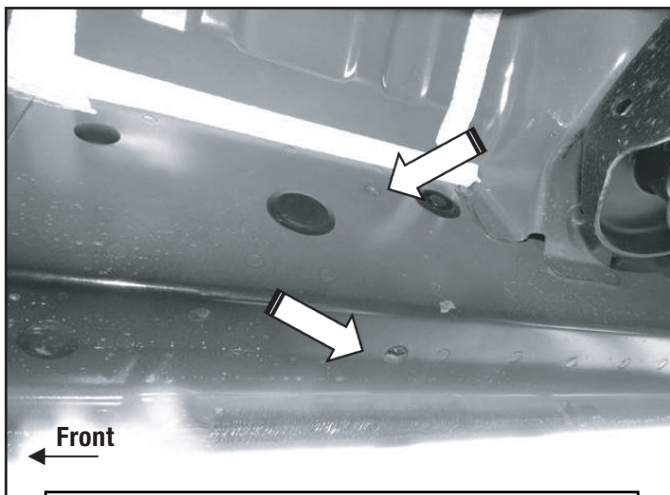

(Fig 5) Passenger/right 2nd mounting location

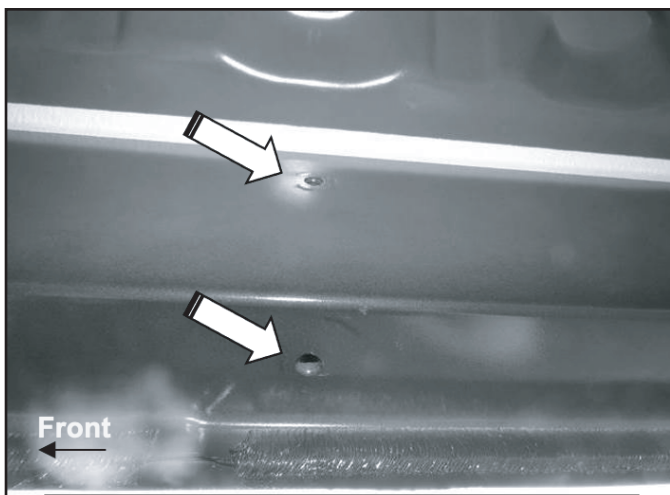

(Fig 6) Passenger/right 3rd mounting location

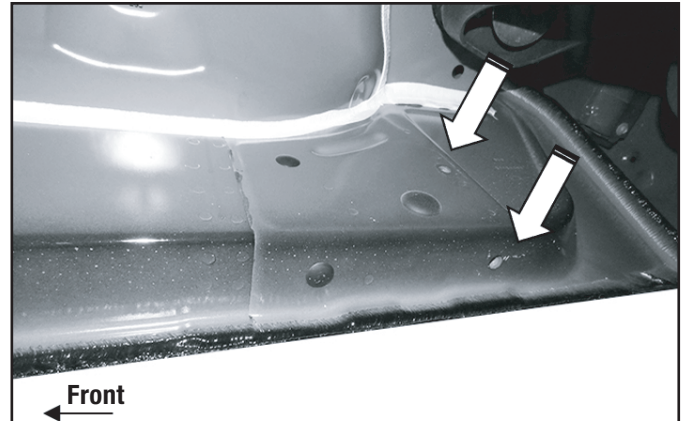


(Fig 7) Passenger/Right rear mounting location

## STEP 4

Select the Passenger/Right TYGER Fury Step. Attach the STEP to the Mounting Brackets with (8) 8mm Combo Bolts (Fig 8). DO NOT tighten hardware.

Passenger/Right Side Installation Pictured

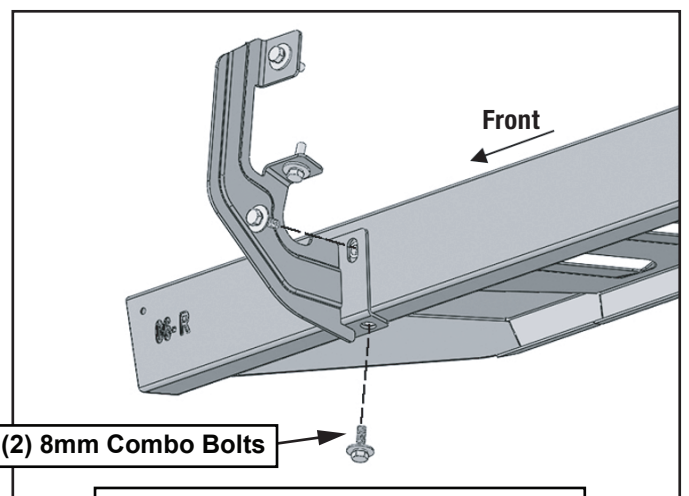

(2) 8mm Combo Bolts

(Fig 8) Attach Passenger/Right TYGER Fury Step to the Mounting Brackets



# TYGER<sup>®</sup>

## STEP 5

Level and adjust the TYGER Fury Step and fully tighten all hardware.

## STEP 6

Repeat **STEPS 1-5** to attach the Driver/Left TYGER Fury Step.

## STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.