



## TYGER FURY STEPS

TG-FS2C30118

### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)


### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- x1** Driver/Left Tyger Fury Step
- x1** Passenger/Right Tyger Fury Step
- x3** Driver/Left Mounting Bracket
- x3** Passenger/Right Mounting Bracket
- x12** 8-1.25mm x 30mm Hex Bolts
- x12** 8-1.25mm x 25mm Combo Bolts
- x12** 8mm Lock Washers
- x12** 8mm x 24mm OD x 2mm Flat Washers
- x12** 8mm Clip Nuts

### Parts List

(3) Passenger/ Right Mounting Brackets

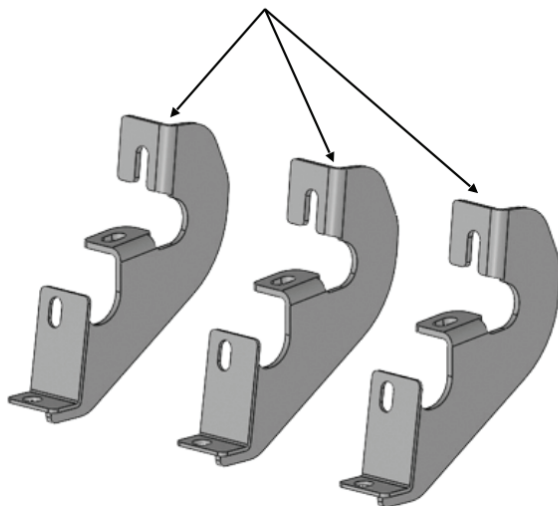

(3) Driver/Left Mounting Brackets

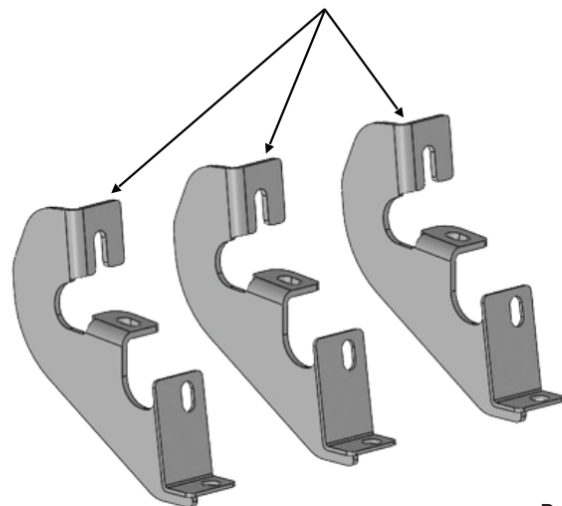

Approx. 23 inches between threaded holes

Approx. 40 inches between threaded holes

Driver/Left Tyger Fury Steps



**PROCEDURE:**


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

**STEP 1**

Start the installation under the Passenger/Right side of the vehicle. Locate the front mounting location along the bottom and inner side of the body panel (Fig 1). Installation will use the **1st**, **2nd** and **4th** mounting locations.


**NOTE:** It may help to hold a Bracket up in place to help determine the mounting holes to use along the bottom and inner side of the body.

**Passenger/Right Side Front Installation Pictured**

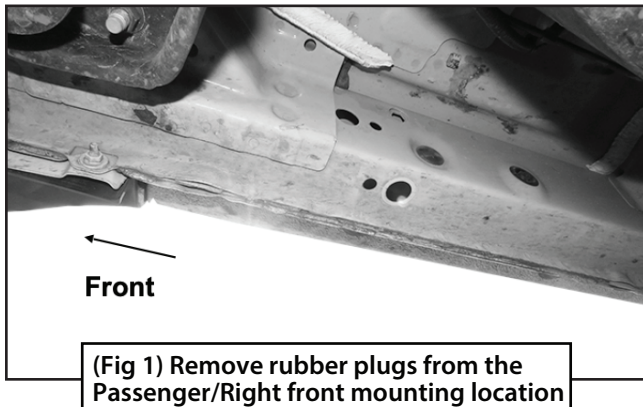
**STEP 3**


Select (1) Passenger/Right Mounting Bracket. Attach the Mounting Bracket to the (2) Clip Nuts in the vehicle with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Fig 3). DO NOT tighten hardware.

**Passenger/Right Side Front Installation Pictured**

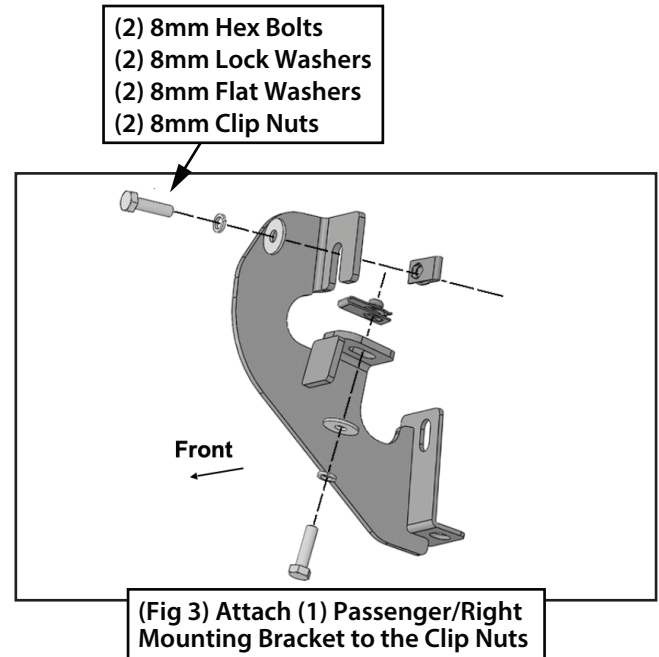
**STEP 2**


Remove rubber plugs from the front location. Select (2) 8mm Clip Nuts. Slide each Clip Nut into the large hole and over the smaller hole next to it. Line up threaded nut on the Clip Nut with smaller hole in body panel (Fig 2).

**Passenger/Right Side Front Installation Pictured**

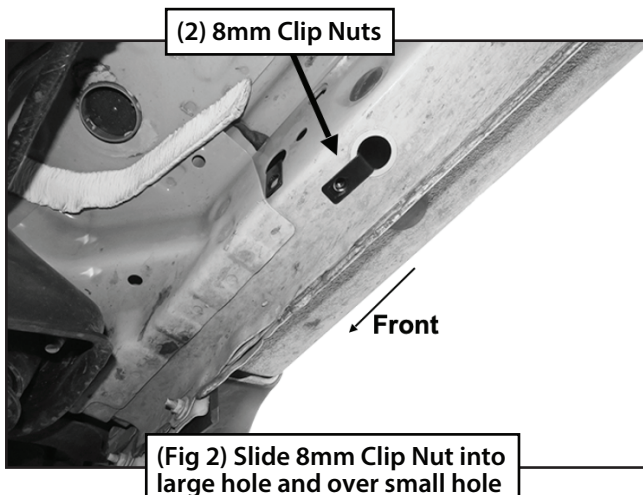
**STEP 4**

Repeat **STEPS 1-3** to attach the remaining (2) Passenger/Right Mounting Bracket to the **2nd** and **rear** locations (Figs 3-5). DO NOT tighten hardware.

**Passenger/Right Side Front Installation Pictured**

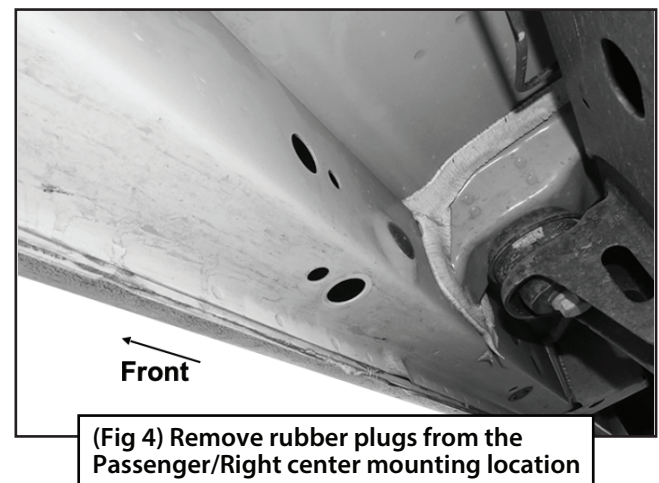




(Fig 5) Remove rubber plugs from the Passenger/Right rear mounting location

## STEP 5

Select the Driver/Left Tyger Fury Step. Attach the STEP to the Mounting Brackets with (2) 8mm Combo Bolts (Fig 6). DO NOT tighten hardware.

**Passenger/Right Side Front Installation Pictured**

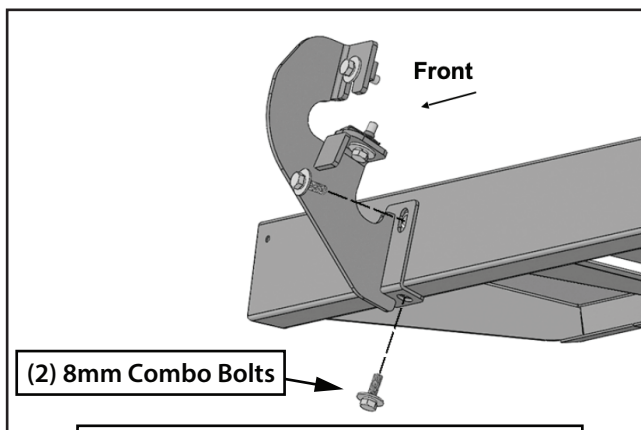

(Fig 6) Attach the Passenger/Right Tyger Fury Step to the Mounting Brackets

## STEP 6

Repeat **STEPS 1-5** to attach the Driver/Left Tyger Fury Step.

## STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.