



## TYGER FURY STEPS

TG-FS2D30098

### BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

### Parts List

- x1 Driver/Left TYGER Fury Step
- x1 Passenger/Right TYGER Fury Step
- x2 Front Upper Mounting Brackets
- x2 Front Lower Mounting Brackets
- x2 Center Mounting Brackets
- x2 Rear Mounting Brackets
- x4 Center/Rear Support Brackets
- x12 8mm x 25mm Combo Bolts
- x4 8mm x 25mm Hex Bolts
- x22 8mm x 24mm OD x 2mm Flat Washers
- x8 8mm x 16mm OD x 1.6mm Flat Washers
- x26 8mm Nylon Lock Nuts

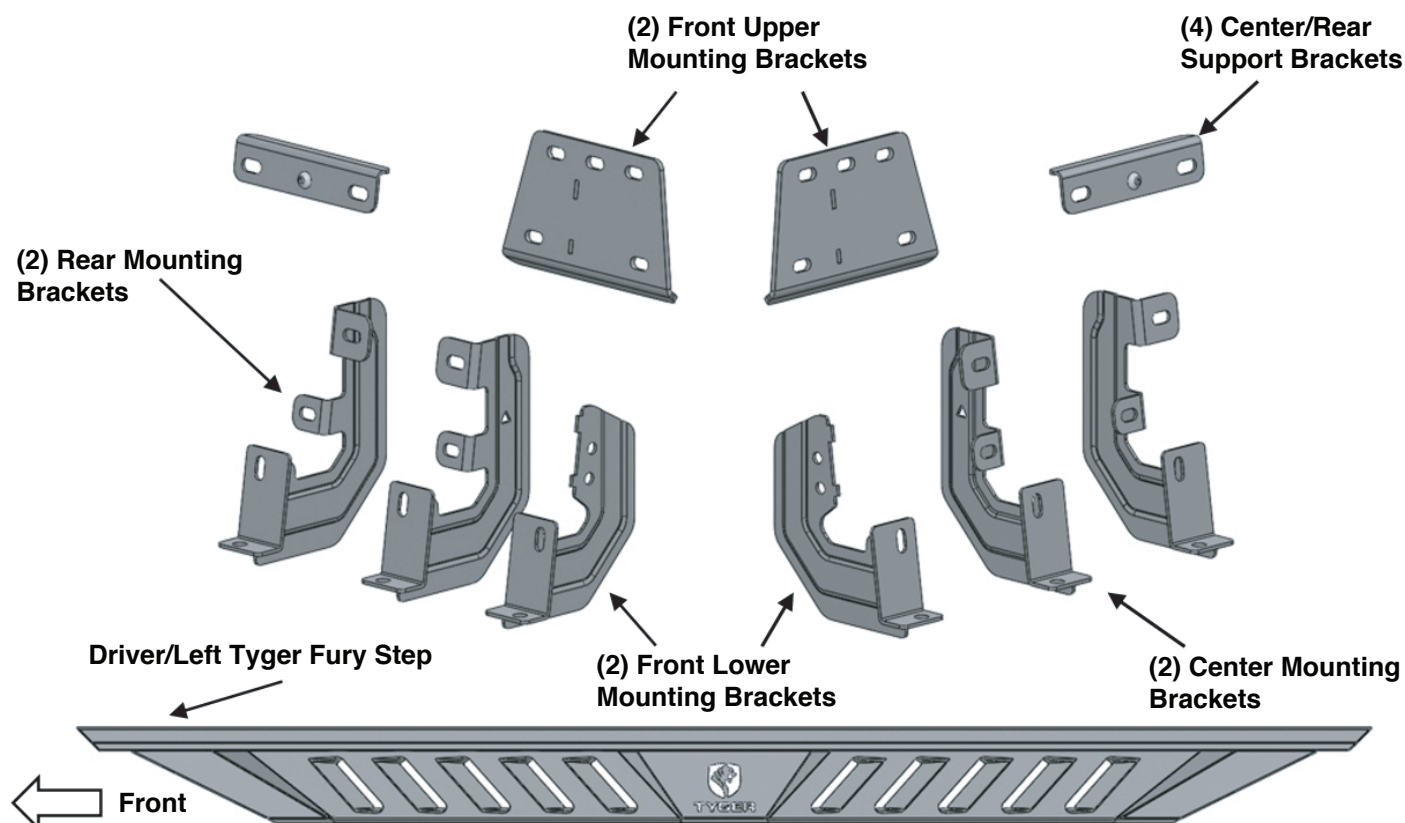




# TYGER<sup>®</sup>

## PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. USE WIRE BRUSH TO CLEAN MOUNTING STUDS OF PAINT AND DEBRIS.

### STEP 1


Start the installation under the driver/left side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel (Fig 1).

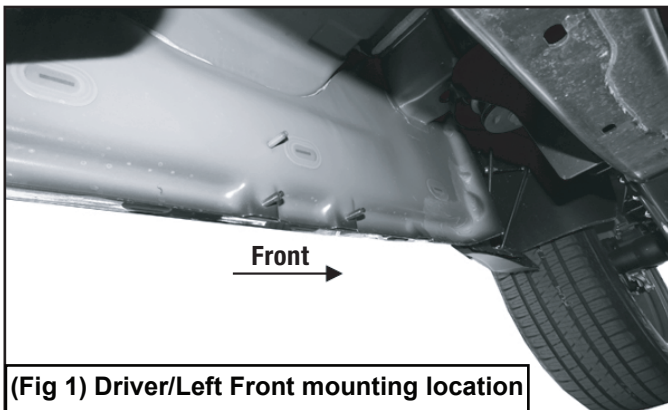

(Fig 1) Driver/Left Front mounting location

### STEP 2

Select (1) Front Upper Mounting Bracket. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm x 24mm Flat Washers and (3) 8mm Nylon Lock Nuts (Fig 2). DO NOT tighten hardware.

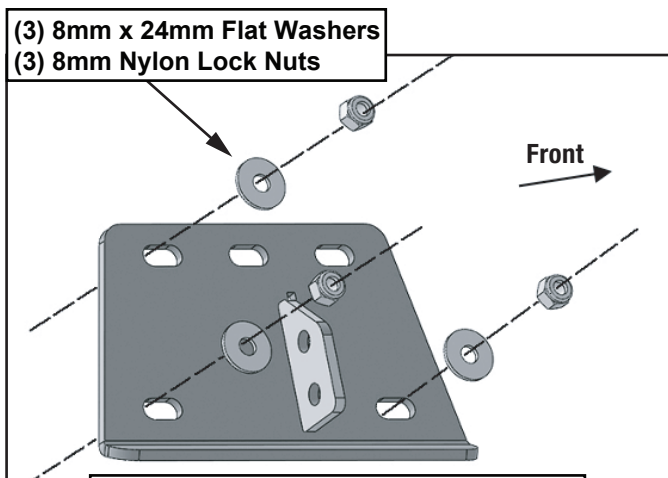


(Fig 2) Attach (1) Front Upper Mounting Bracket to the threaded studs

### STEP 3

Select (1) Front Lower Mounting Bracket. Attach the Lower Bracket to the shorter side (front facing) of the Upper Bracket with (2) 8mm Hex Bolts, (4) 8mm X 16mm Flat Washers and (2) 8mm Nylon Lock Nuts (Fig 3). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

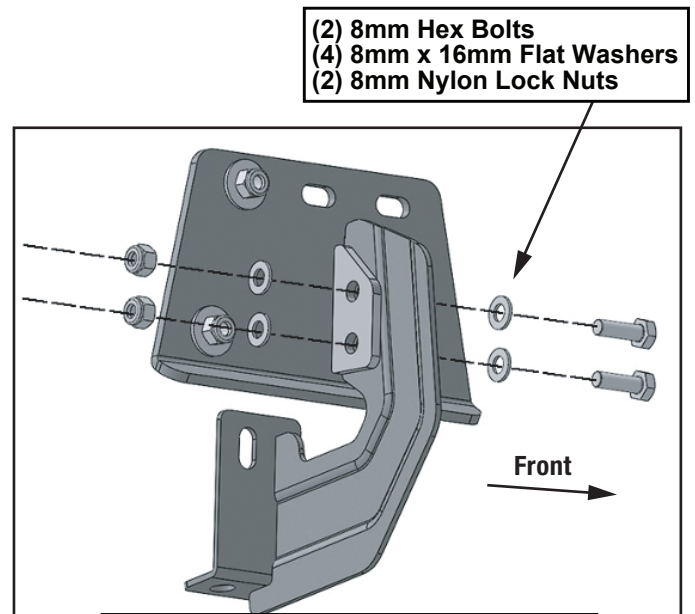

(Fig 3) Attach (1) Front Lower Mounting Bracket to the Upper Mounting Bracket


### STEP 4

Move to the center location (Fig 4). Select (1) Support Bracket. Attach the Support Bracket to the (2) lower threaded studs with (2) 8mm x 24mm Flat Washers and (2) 8mm Nylon Lock Nuts (Fig 5). Select (1) Center Mounting Bracket and attach to the Support Bracket and upper threaded stud with (2) 8mm Flat Washers and (2) 8mm Nylon Lock Nuts (Fig 6). DO NOT tighten hardware.


Driver/Left Side Installation Pictured




# TYGER<sup>®</sup>

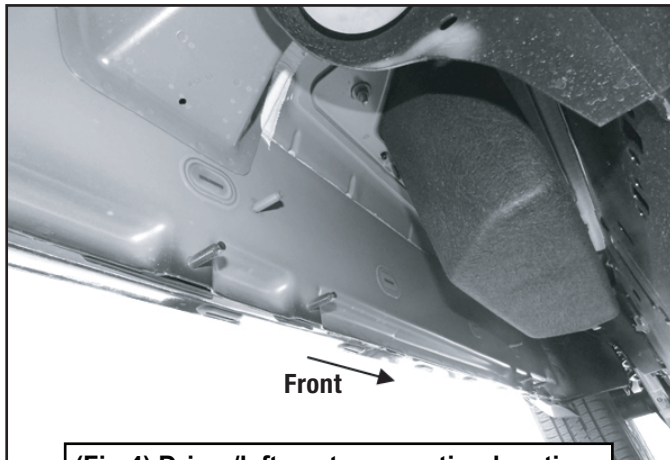

(Fig 4) Driver/left center mounting location

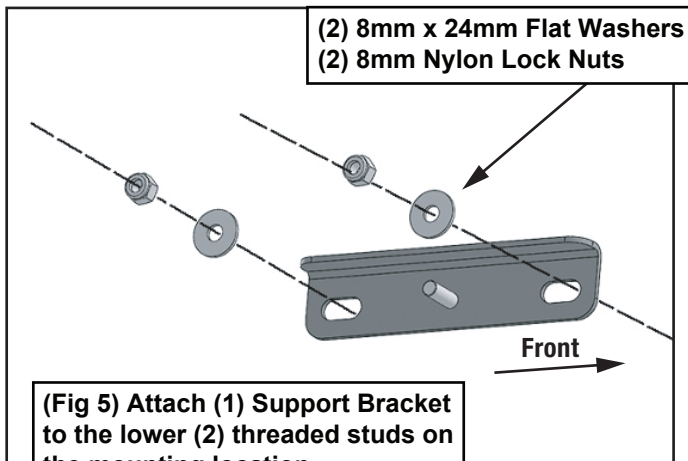

(Fig 5) Attach (1) Support Bracket to the lower (2) threaded studs on the mounting location

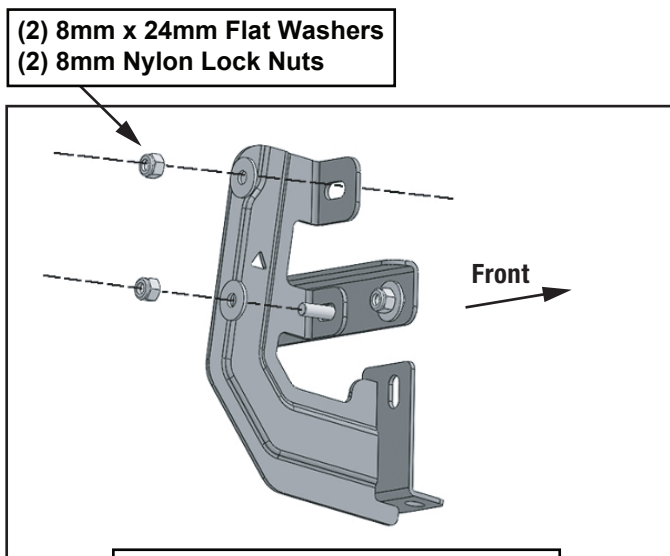


(Fig 6) Attach (1) Center Mounting Bracket to the upper threaded stud and Support Bracket

## STEP 5

Repeat **STEP 4** to attach (1) Rear Mounting Bracket and (1) Support Bracket to the rear mounting location (Fig 7). **DO NOT** tighten hardware.


Driver/Left Side Installation Pictured

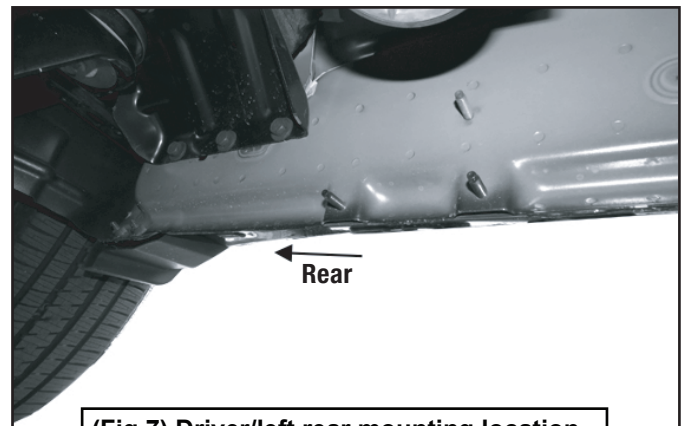

(Fig 7) Driver/left rear mounting location

## STEP 6

Select the Driver/Left Tyger Fury Step. Attach the STEP to the Mounting Brackets with (6) 8mm Combo Bolts (Fig 8). **DO NOT** tighten hardware.

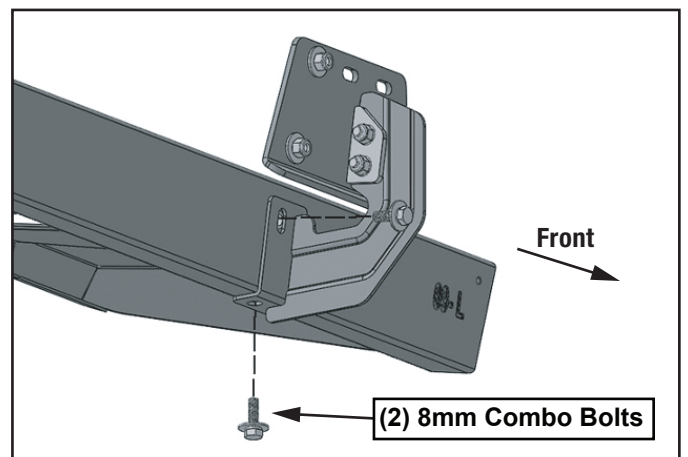

(Fig 8) Attach the Driver/Left Tyger Fury Step to the (3) Mounting Brackets



# TYGER®

## STEP 7

Level and adjust the Tyger Fury Step as necessary and fully tighten all hardware.

## STEP 8

Repeat **STEPS 1-6** to attach the Passenger/Right Tyger Fury Step to the vehicle.

## STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.