



TYGER FURY STEPS

TG-FS2T30128

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

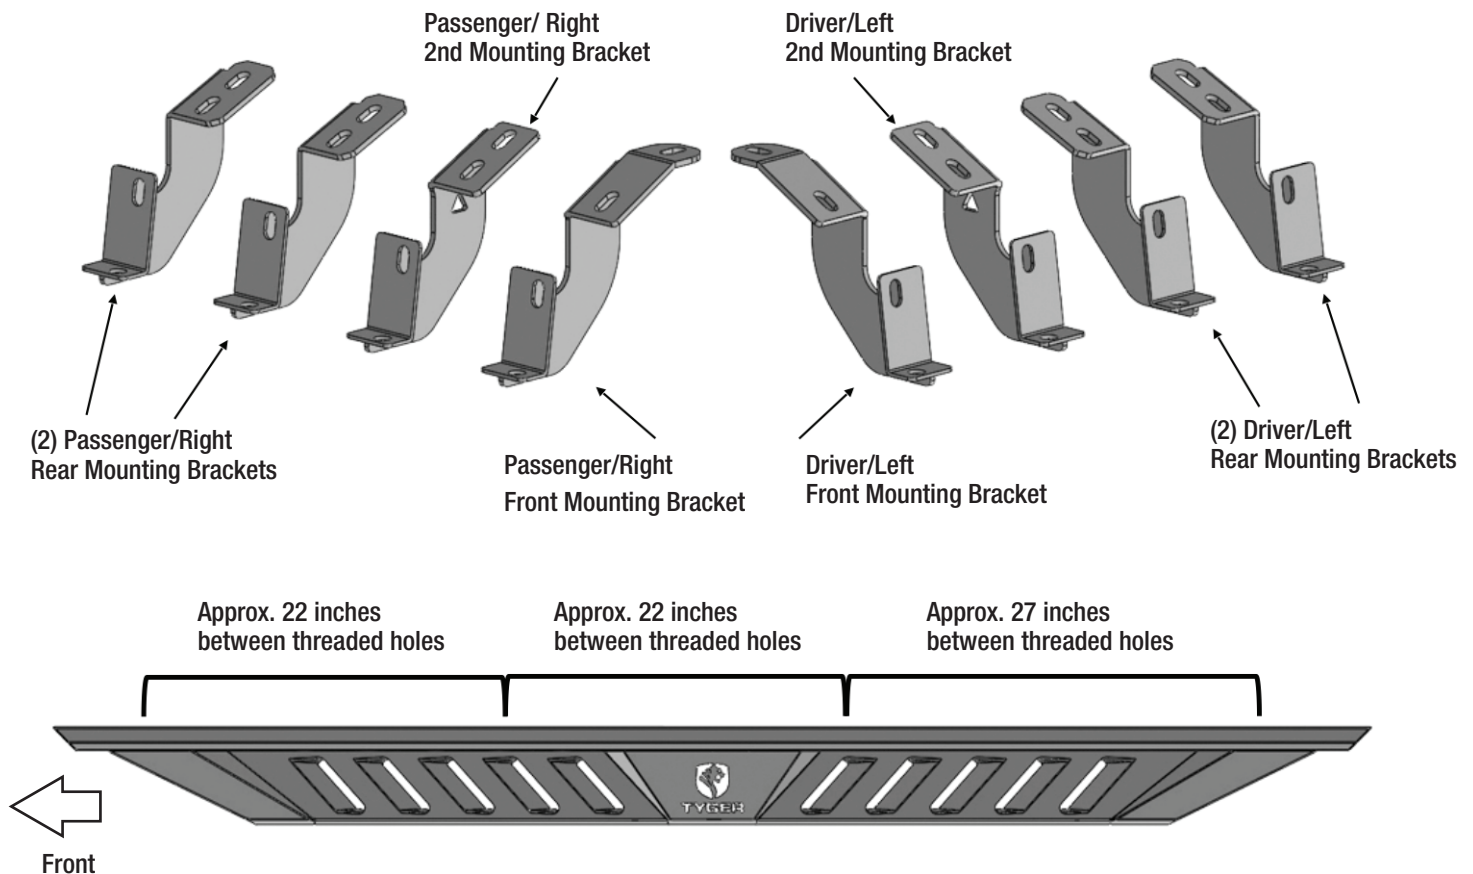
TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1** Driver/Left Tyger Fury Step
- x1** Passenger/Right Tyger Fury Step
- x1** Driver/Left Front Mounting Bracket
- x1** Passenger/Right Front Mounting Bracket
- x1** Driver/Left 2nd Mounting Bracket
- x1** Passenger/Right 2nd Mounting Bracket

- x2** Driver/Left Rear Mounting Brackets
- x2** Passenger/Right Rear Mounting Brackets
- x16** 8mm x 30mm Hex Bolts
- x16** 8mm x 25mm Combo Bolts
- x16** 8mm Lock Washers
- x16** 8mm x 24mm OD x 2mm Flat Washers

Parts List

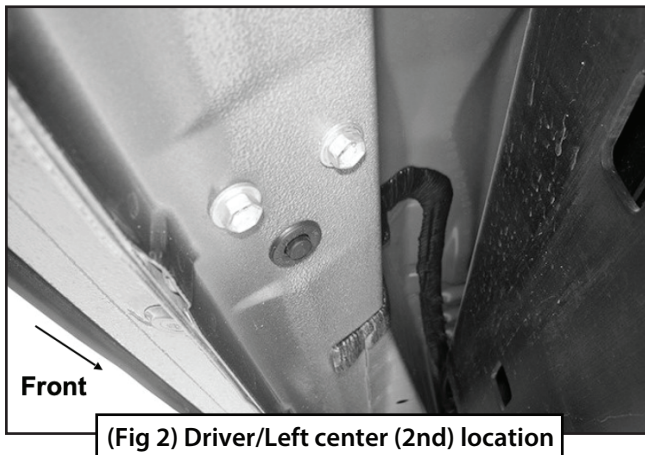
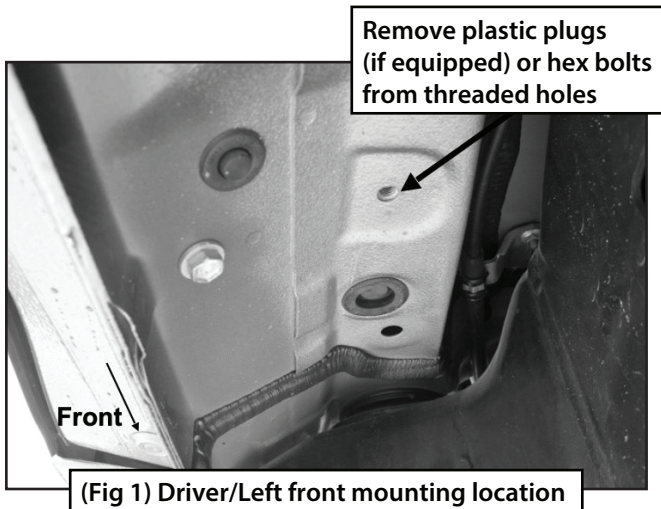
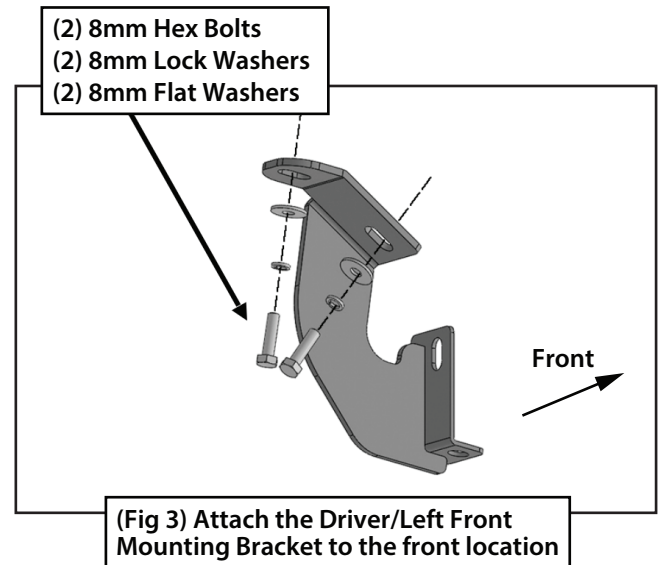


PROCEDURE:

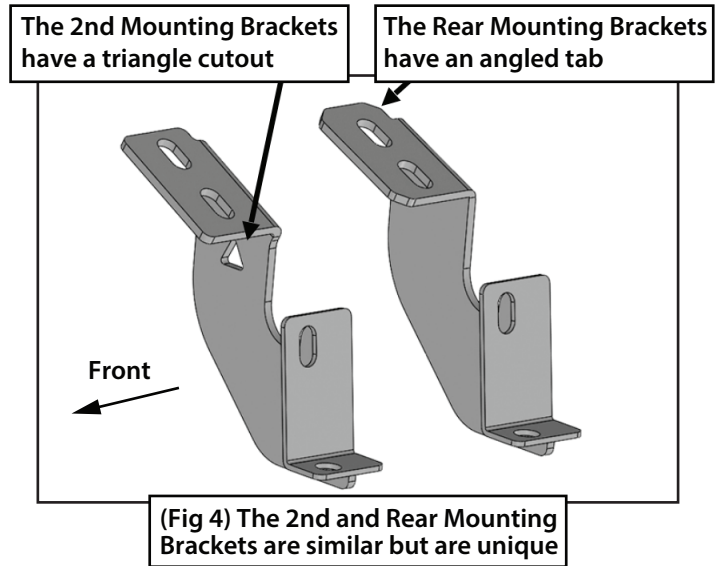
REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

STEP 1

Starting on the Driver/Left side of the vehicle and remove the plastic plugs or hex bolts from the factory mounting location along the bottom of the body (Figs 1 & 2).

Driver/Left Side Front Installation Pictured

Driver/Left Side Front Installation Pictured

STEP 3

For the 2nd and Rear Mounting Brackets refer to Fig 4 to determine the correct Mounting Bracket.

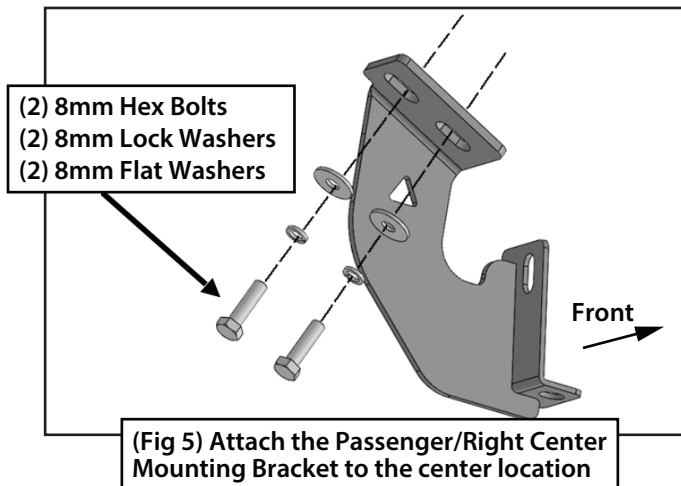
Driver/Left Side Front Installation Pictured

STEP 2

Select the Driver/Left Front Mounting Bracket. Attach the Bracket to the front location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Fig 3). DO NOT tighten hardware.

STEP 4

Repeat **STEPS 2 & 3** to attach (1) 2nd and (2) Rear Mounting Brackets (Figs 3, 4 & 5).

Driver/Left Side Front Installation Pictured



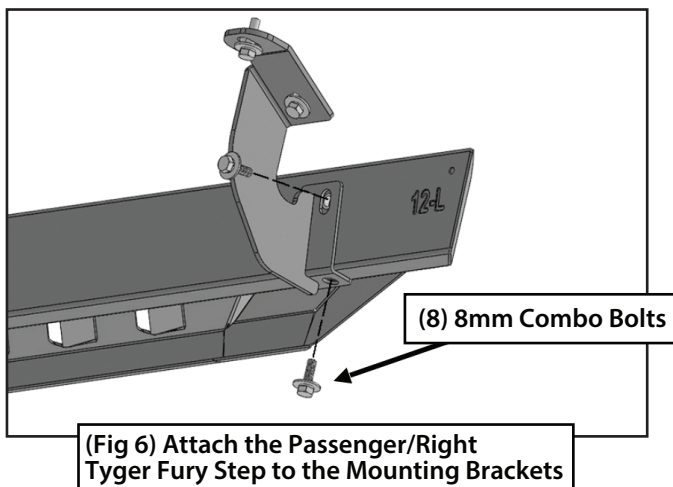
STEP 8

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

STEP 5

Select the Driver/Left Tyger Fury Step. Attach the STEP to the Mounting Brackets with (8) 8mm Combo Bolts (Fig 6). DO NOT tighten hardware.

Driver/Left Side Front Installation Pictured



STEP 6

Level and adjust the Fury Step and tighten all hardware.

STEP 7

Repeat **STEPS 1-6** to attach the Passenger/Right Tyger Fury Step.