



TYGER®

TYGER GUARD™

TG-GD6N60168

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1 Tyger Guard
- x1 Driver/Left Frame Mounting Bracket
- x1 Passenger/Right Frame Mounting Bracket
- x2 Spacer Tubes (23mm x 42mm)
- x2 12-1.25mm x 60mm Fine Thread Hex Bolts
- x2 12-1.25mm x 30mm Fine Thread Hex Bolts
- x4 12mm x 37mm x 3mm Flat Washers
- x4 12mm Lock Washers
- x4 8-1.25mm x 35mm Hex Bolts
- x4 8mm Lock Washers
- x4 8mm x 22mm x 2mm Flat Washers
- x2 6-1.0mm x 20mm Combo Bolts
- x1 4mm Wrench

Parts List

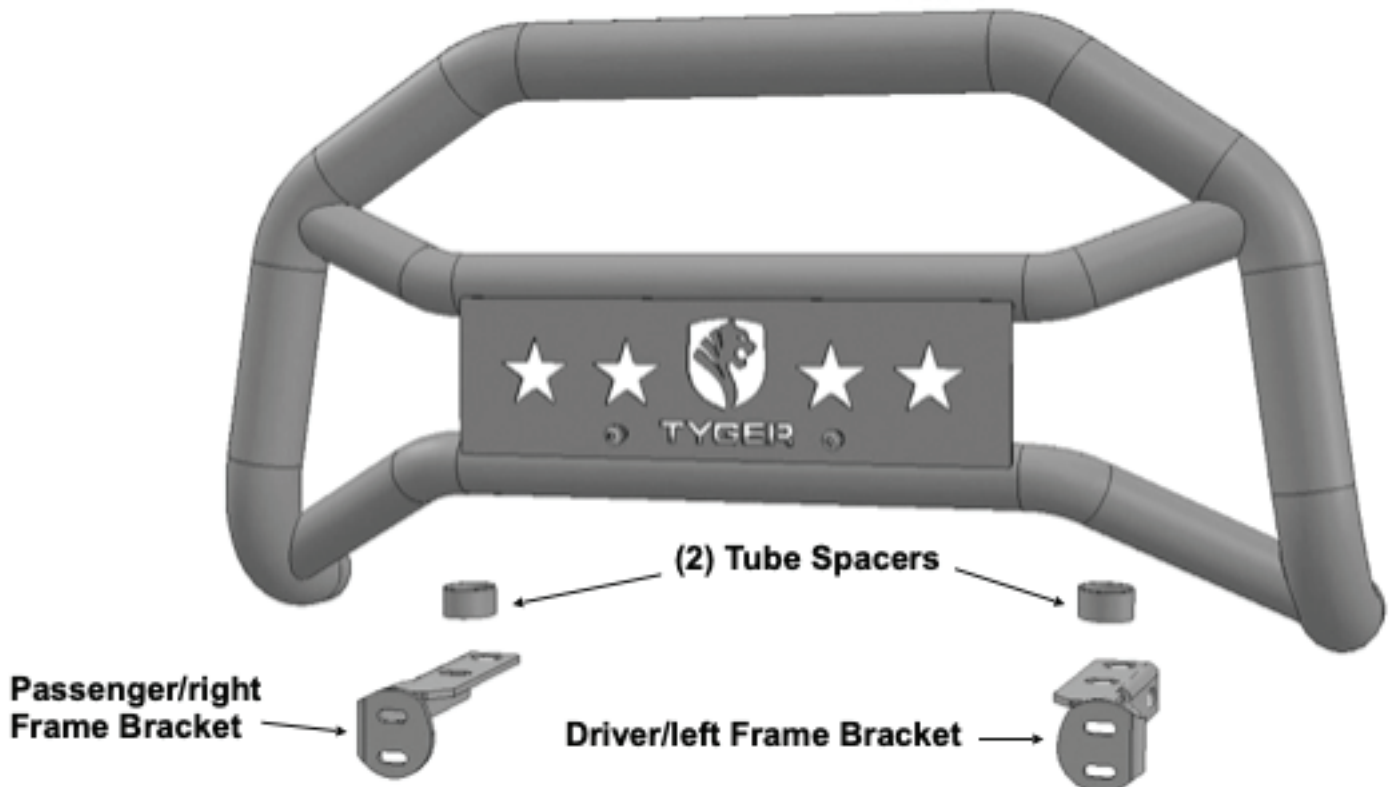

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. SKID PLATE AND TOW HOOKS MUST BE REMOVED IF EQUIPPED.


STEP 1

Remove the factory skid plate and tow hooks from vehicle, if equipped (Figs 1, 2 & 4). On models without tow hooks, remove the bent bracket from the bottom of the frame (Figs 3 & 4).


NOTE: Skid plate, brackets and tow hooks cannot be reinstalled.




(Fig 1) Remove skid plate if equipped

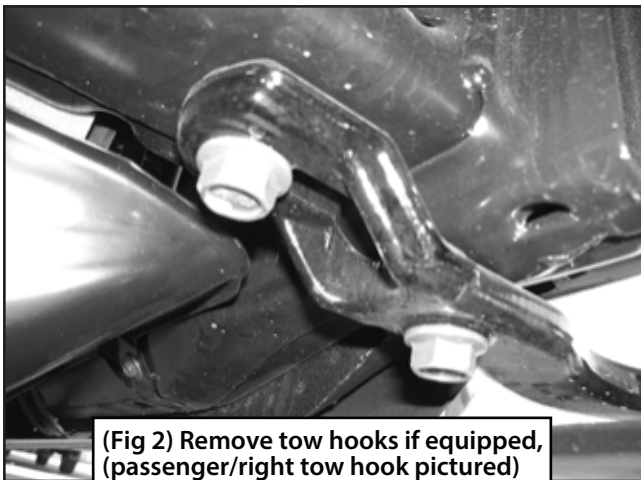

(Fig 2) Remove tow hooks if equipped, (passenger/right tow hook pictured)

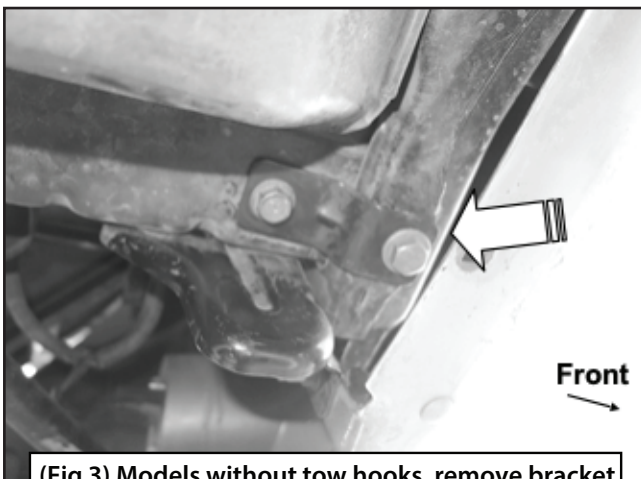


(Fig 3) Models without tow hooks, remove bracket

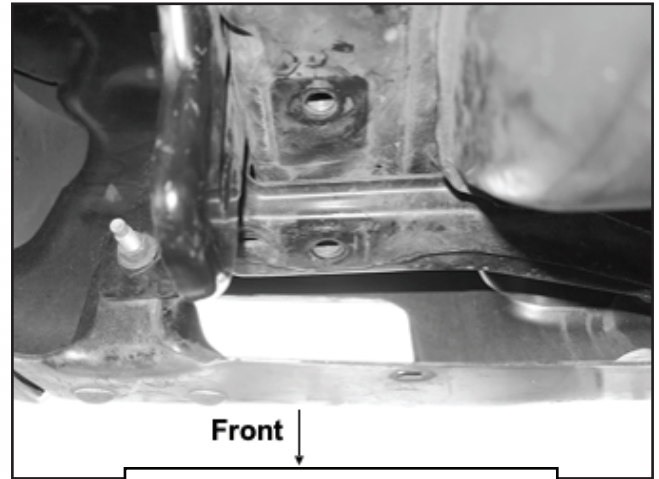


(Fig 4) Driver/left mounting location

STEP 2

Select the driver/left Frame Mounting Bracket and (1) Tube Spacer (Fig 5). Attach the Bracket to the front (forward), mounting hole on the frame with the included (1) 12mm x 30mm Fine Thread Hex Bolt, (1) 12mm Lock Washer and (1) 12mm Flat Washer (Figs 5 & 6). Leave hardware loose.

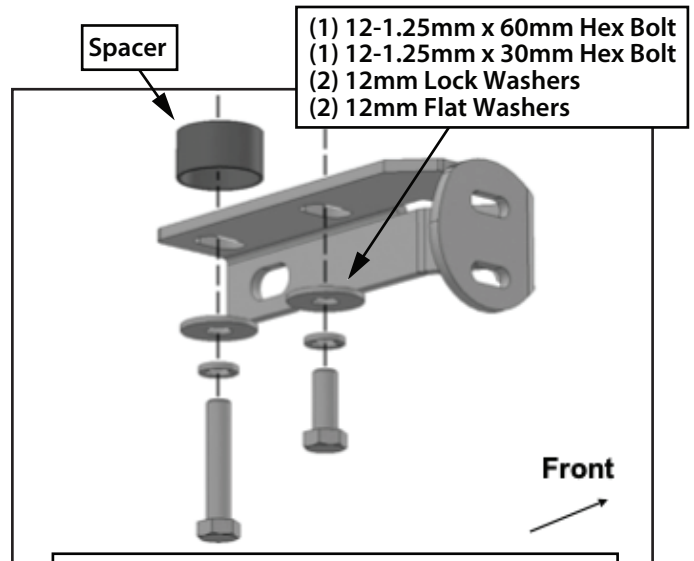

(Fig 5) Attach driver/left Frame Bracket to frame

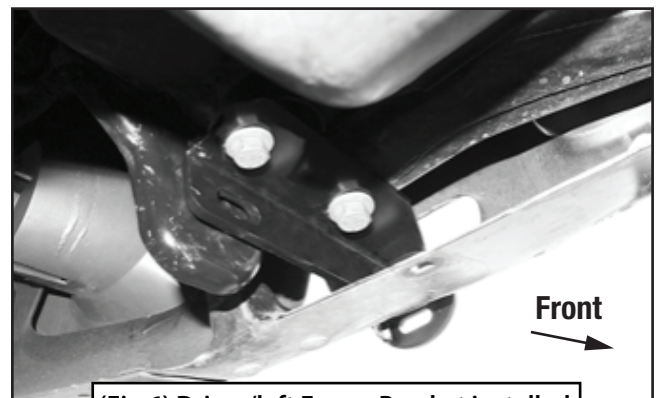

(Fig 6) Driver/left Frame Bracket installed

STEP 3


Slide (1) Tube Spacer between the rear mounting hole on the Bracket and the bottom of the frame. Insert (1) 12mm x 60mm Fine Thread Hex Bolt, (1) 12mm Lock Washer and (1) 12mm Flat Washer through the Bracket, the Tube Spacer and into the Frame (Figs 5 & 6). **DO NOT** fully tighten hardware at this time.

STEP 4

Repeat **STEPS 2 & 3** to attach the passenger/right Frame Mounting Bracket.

STEP 5

With assistance, hold the Tyger Guard up to the vehicle. Attach the end of the tube on the Tyger Guard to the driver/left Mounting Bracket with (2) 8mm x 35mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Fig 7). Center the Bracket on the end of the tube but do not fully tighten at this time. Repeat this Step to attach the passenger/right side of the Tyger Guard to the Mounting Bracket.

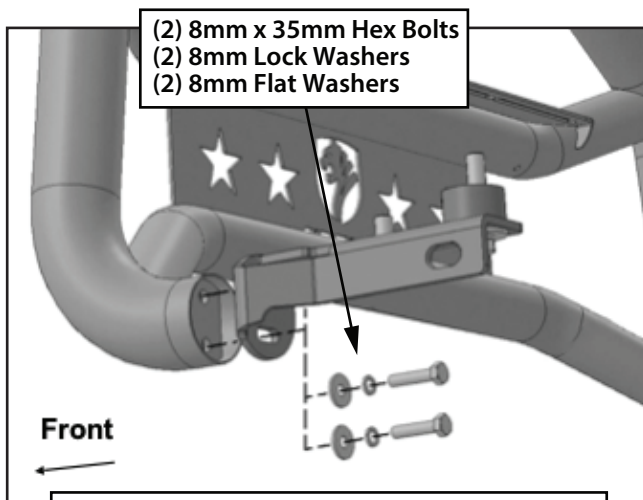


(Fig 7) Attach driver/left end of tube to Bracket

STEP 6

Align Tyger Guard properly with vehicle and fully tighten all hardware.

STEP 7

Models with front license plate, attach the plate to the threaded holes in the front of the Tyger Guard with the included (2) 6mm Button Head Combo Bolts (Fig 8).

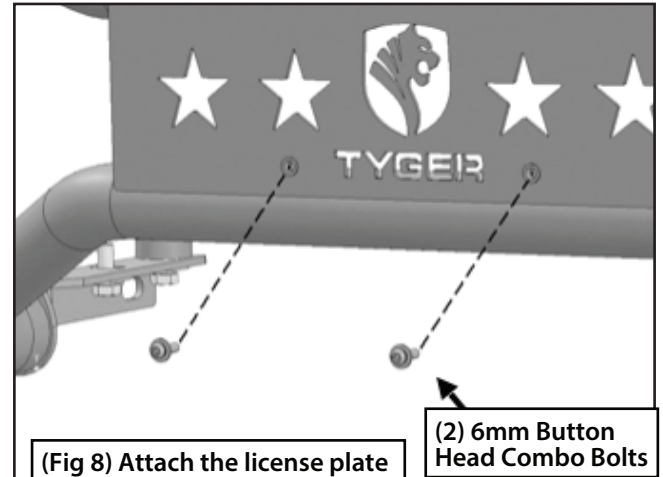

(Fig 8) Attach the license plate to the front of the Tyger Guard

STEP 8

Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation