



TYGER®

TYGER GUARD™

TG-GD6T60037

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Tyger Guard
- x1 DS Tube Mounting Brackets (left A)
- x1 PS Tube Mounting Brackets (right B)
- x1 Driver/Left Frame Mounting Bracket
- x1 Passenger/Right Frame Mounting Bracket
- x4 10-1.5mm x 35mm Hex Bolts
- x8 10mm x 27mm OD x 3mm Flat Washers
- x4 10-1.5mm Nylon Lock Nuts
- x4 8-1.25mm x 35mm Hex Bolts
- x4 8mm x 22mm OD x 2mm Flat Washers
- x4 8mm Lock Washers
- x2 6-1.0mm x 20mm Combo Bolts (license plate)
- x1 4mm Wrench

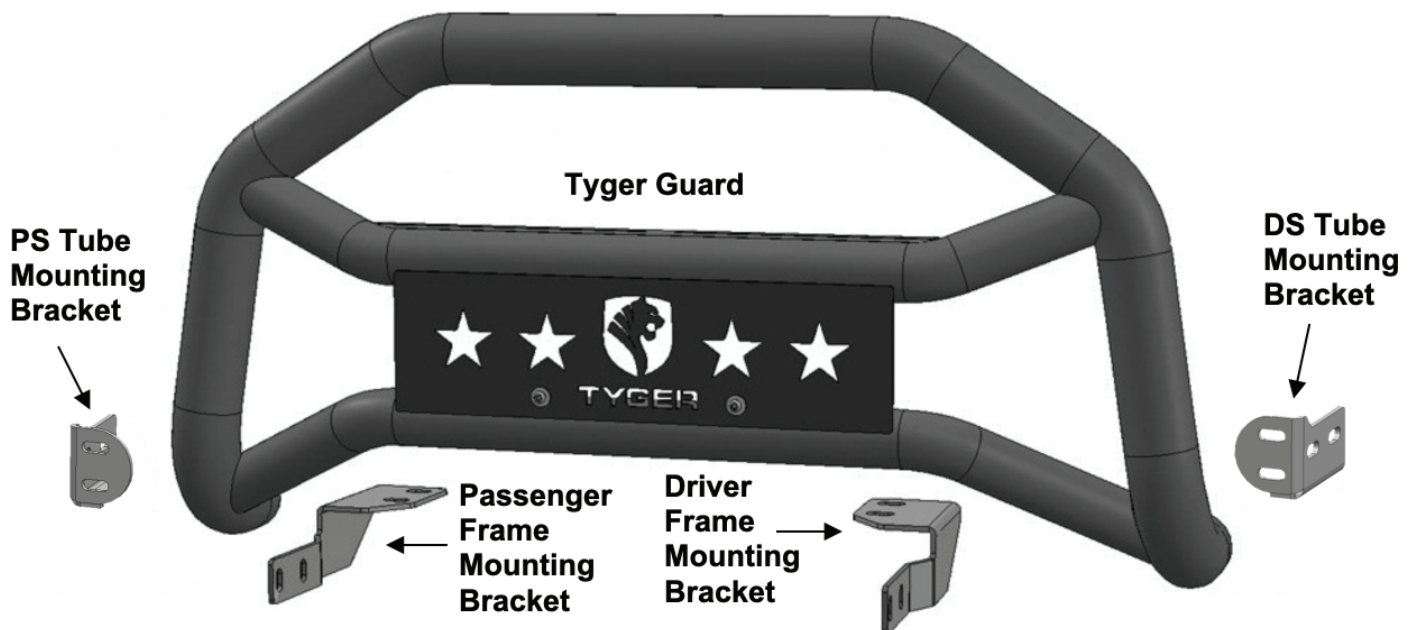




TYGER[®]

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. INSTALLATION MAY INTERFERE WITH FRONT MOUNTED SENSORS. NOT RECOMMENDED FOR VEHICLES WITH OPTIONAL "ACTIVE" LASER GUIDED CRUISE CONTROL SYSTEMS.

STEP 1


Start installation at the driver side, front of the vehicle. Remove the driver side tow hook (Fig 1).

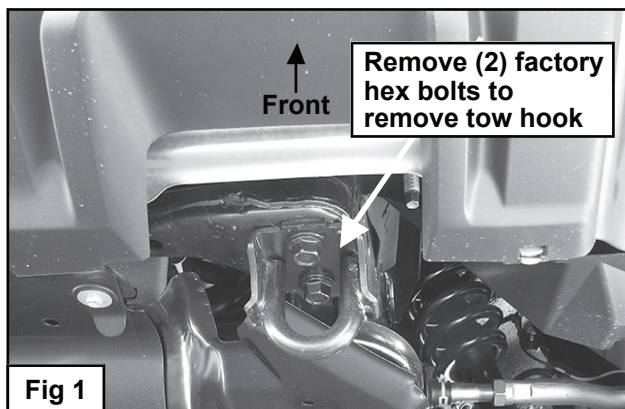

STEP 2


Select the driver side Frame Bracket (Fig 2). Check the fit between the tow hook and the Bracket for reinstallation over the Bracket.

NOTE: Some factory tow hooks may not clear the Bracket and cannot be reinstalled. Check for fit before bolting tow hook and Bracket in place.

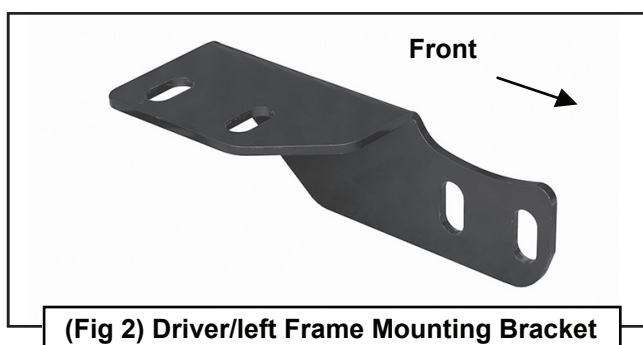

STEP 3

Reuse the factory tow hook bolts to attach the Bracket to the underside of the frame channel, either with or without the tow hook (Fig 3). DO NOT fully tighten hardware at this time.

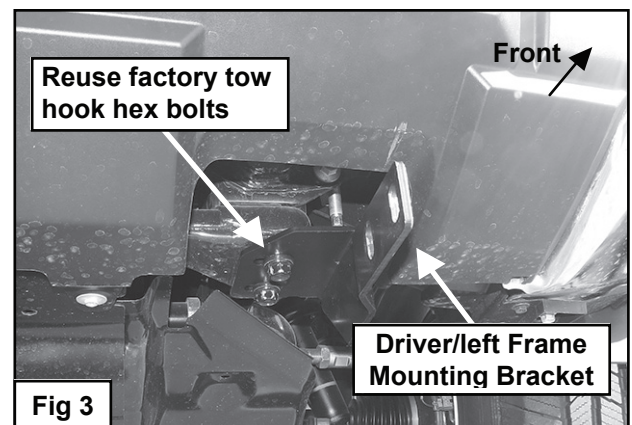

STEP 4



Repeat **STEPS 1-3** for passenger side Frame Mounting Bracket installation.

STEP 5

Carefully unwrap the Tyger Guard. Select (1) DS Tube Mounting Bracket. Attach the Bracket to the end of the Tyger Guard with (2) 8mm Flat Hex Bolts, (2) 8mm Lock Washers, (2) 8mm Flat Washers (Fig 4). DO NOT tighten hardware at this time.



TYGER®

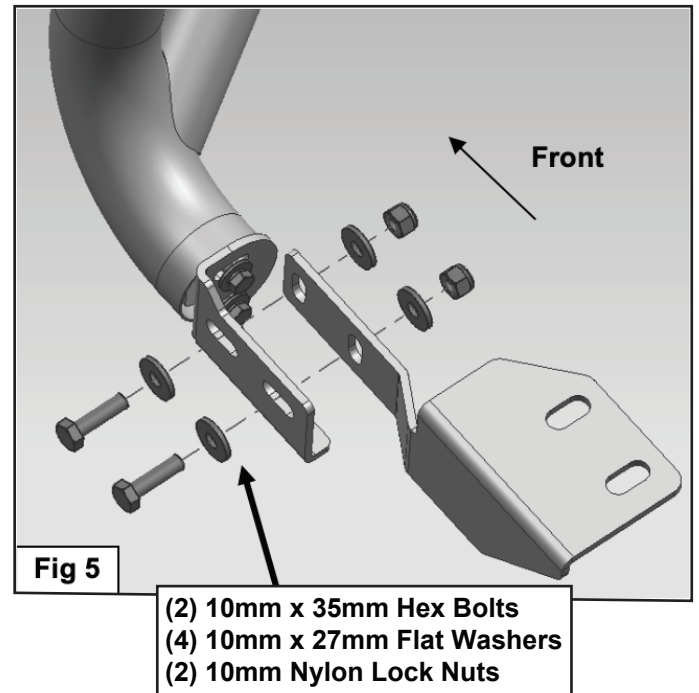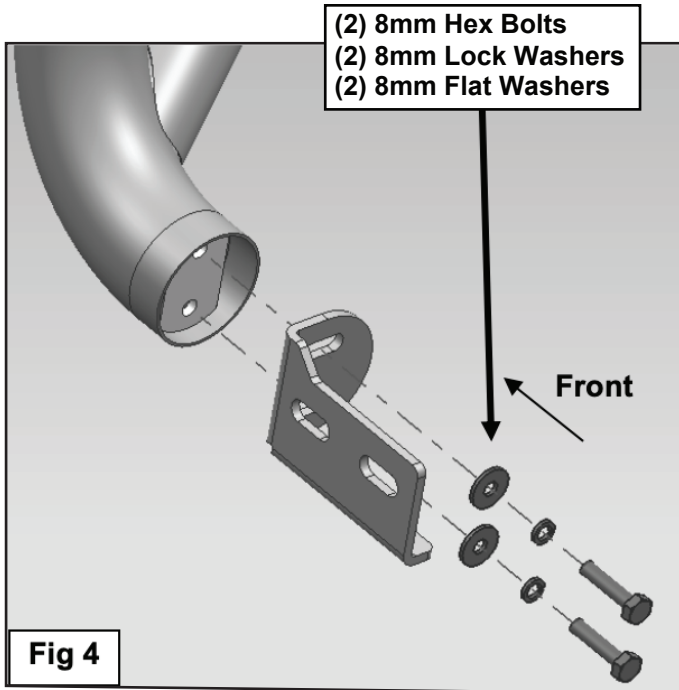

STEP 6

Repeat **STEP 5** to install the passenger side Tube Mounting Bracket.

STEP 7

With assistance, line up the Tube Mounting Brackets on the Tyger Guard with the outside of the Frame Brackets. Attach the Tyger Guard to the Frame Brackets with the included (4) 10-1.5mm Hex Bolts, (8) 10mm Flat Washers and (4) 10-1.5mm Nylon Lock Nuts (Figs 5 & 6). DO NOT tighten hardware.





TYGER[®]

STEP 8

Level and adjust the Tyger Guard properly and tighten all hardware.



STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.