



TYGER®

TYGER KOBRA

TG-KB2C25009

Scan to Download the
Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES



Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1** Driver/Left Tyger Kobra **[D]**
- x1** Passenger/Right Tyger Kobra **[P]**
- x3** Driver Side Front and Center Mounting Brackets **[A]**
- x3** Passenger Side Front and Center Mounting Brackets **[C]**
- x1** Driver Side Rear Mounting Bracket **[B]**
- x1** Passenger Side Rear Mounting Bracket **[D]**
- x16** 8mm Clip Nuts
- x16** 8-1.25mm x 30mm Hex Bolts
- x16** 8-1.25mm x 25mm Hex Combo Bolts
- x16** 8mm x 24mm OD x 2mm Flat Washers
- x16** 8mm Lock Washers

Parts List

Top View


ATTENTION: Refer to **[D]** and **[P]** labelling on the side of the tubes to determine Driver and Passenger TYGER Kobra

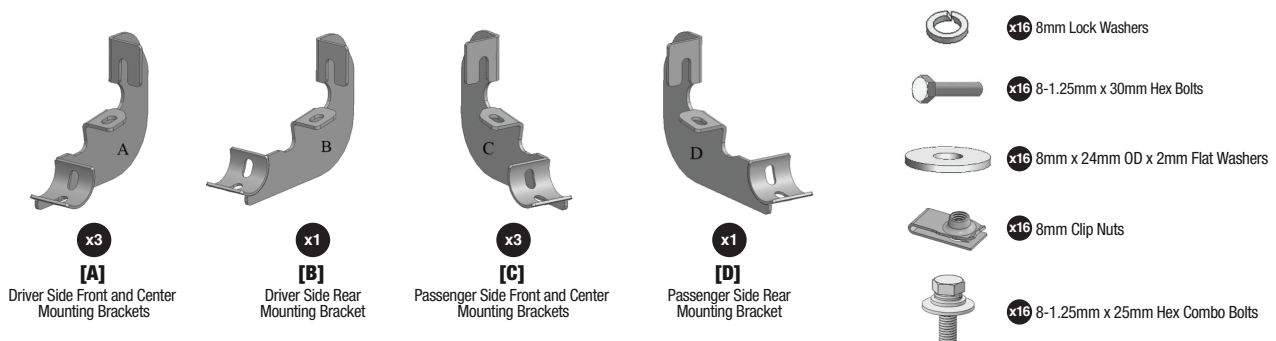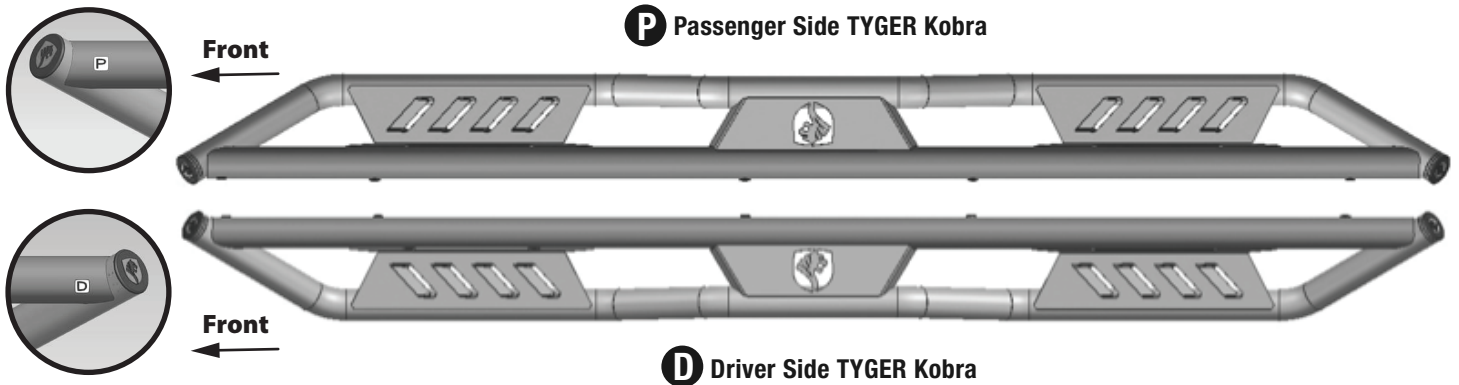

Reference the letters printed on the brackets to determine mounting locations

Top View


P Passenger Side TYGER KOBRA

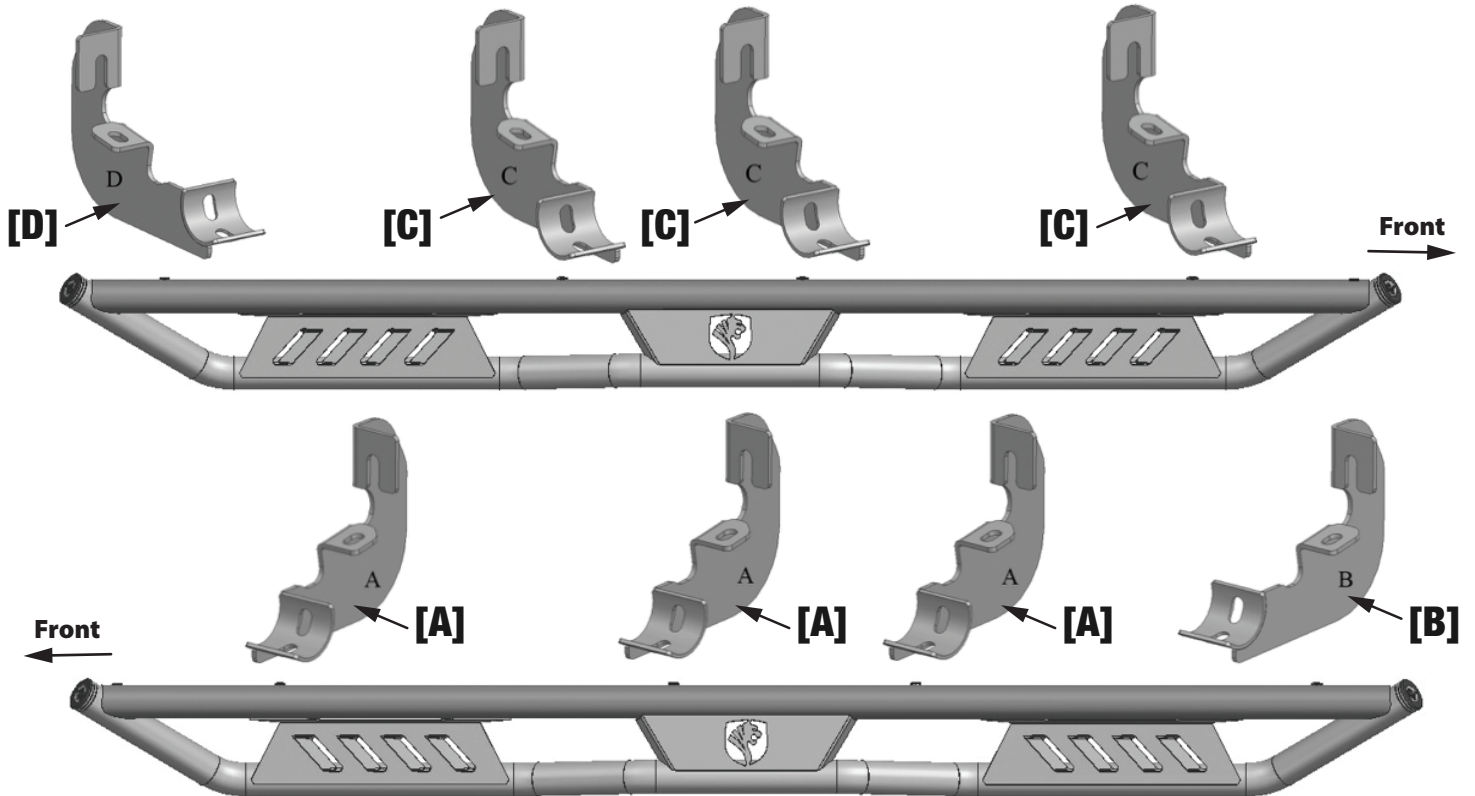

D Driver Side TYGER KOBRA





Bottom View

P Passenger Side TYGER KOBRA

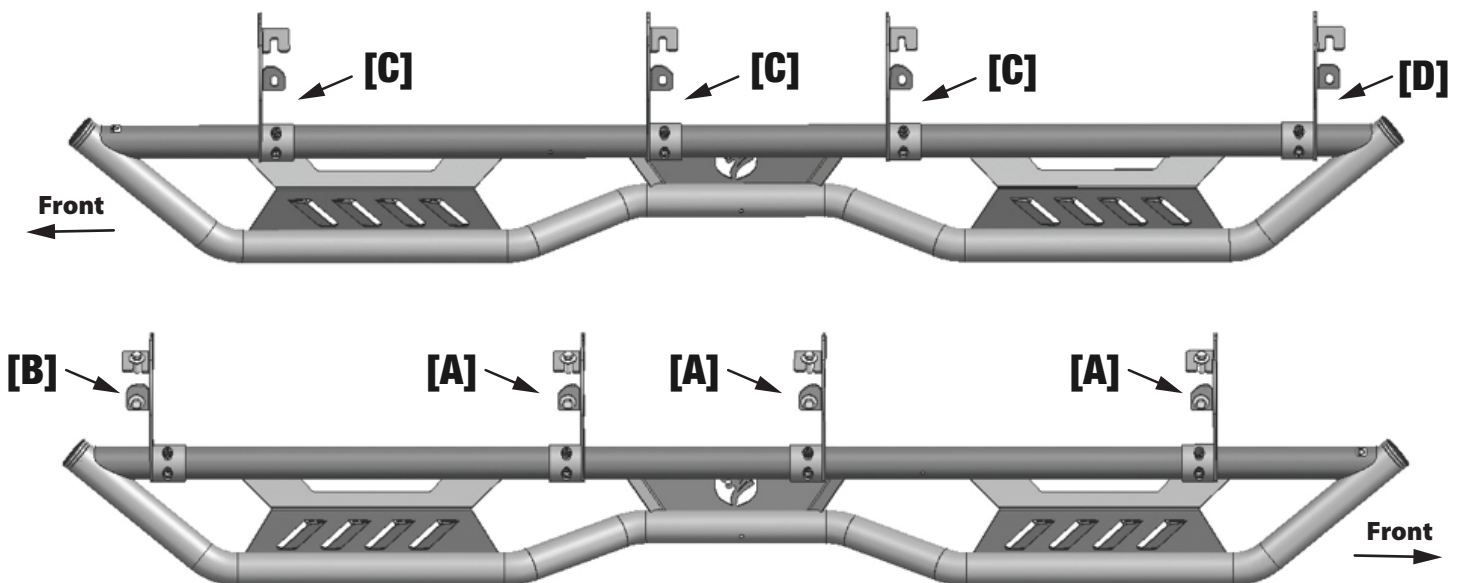


D Driver Side TYGER KOBRA

TOOLS REQUIRED

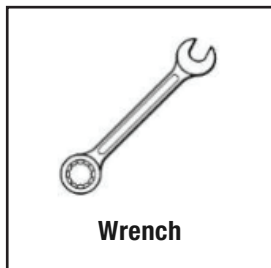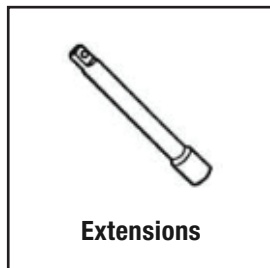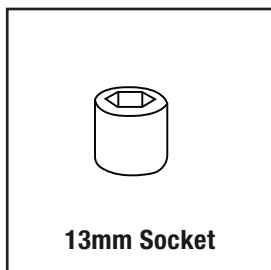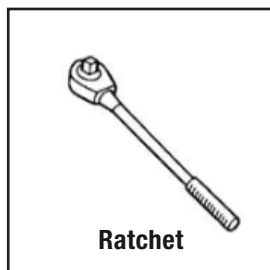


STEP 1 MOUNTING BRACKETS


Follow (Fig 1 – 17) to attach the brackets to the Driver/Left Side. **Ensure all hardware is hand tightened at this point.**

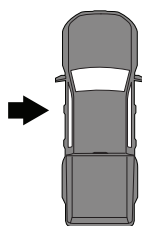


Driver-side **Front** Mounting Area

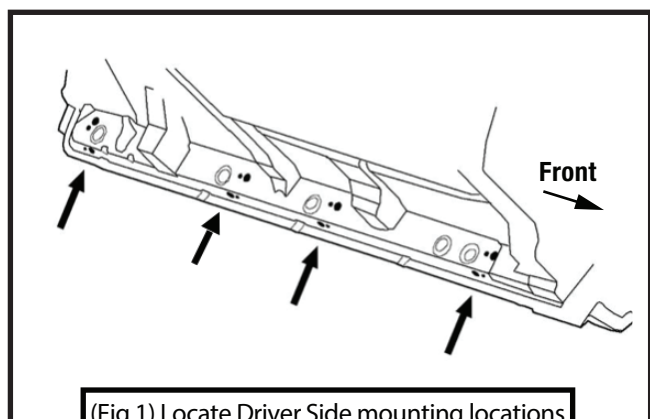

(Fig 1) Locate Driver Side mounting locations along the body panel illustrated

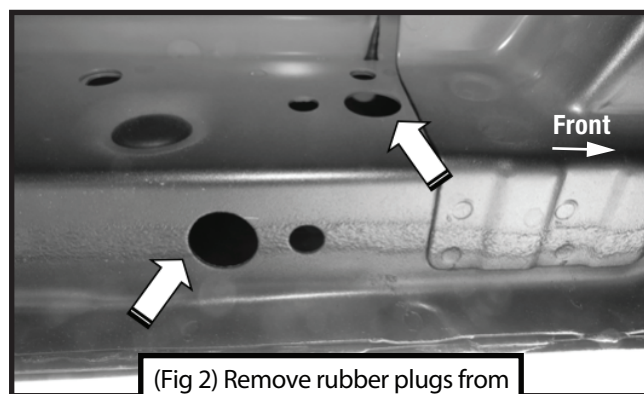


(Fig 2) Remove rubber plugs from front mounting location (arrows)

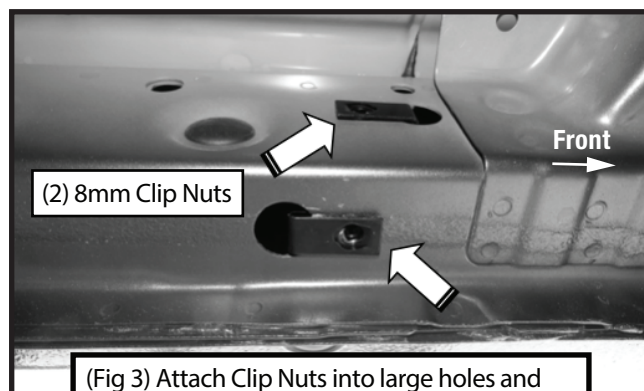


(Fig 3) Attach Clip Nuts into large holes and over small holes and attach mounting bracket

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm OD x 2mm Flat Washers

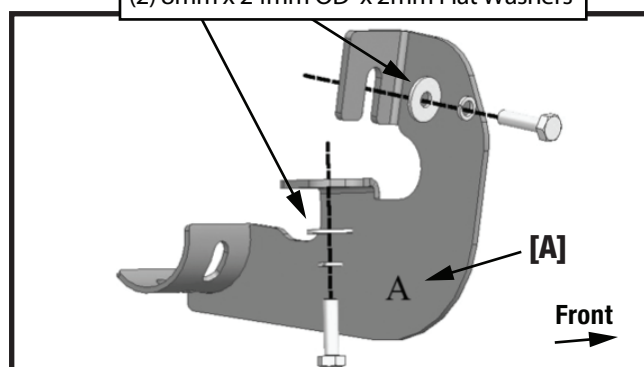


(Fig 4) Attach Driver/Left Front and Center Bracket **[A]** with indicated hardware. **DO NOT** fully tighten at this time

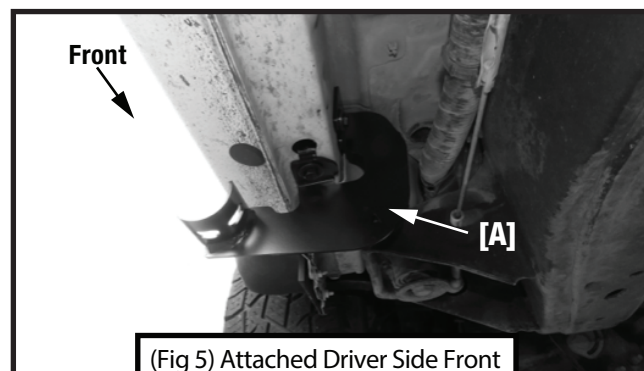


(Fig 5) Attached Driver Side Front and Center Mounting Bracket **[A]**

Driver-side 1st Center Mounting Area

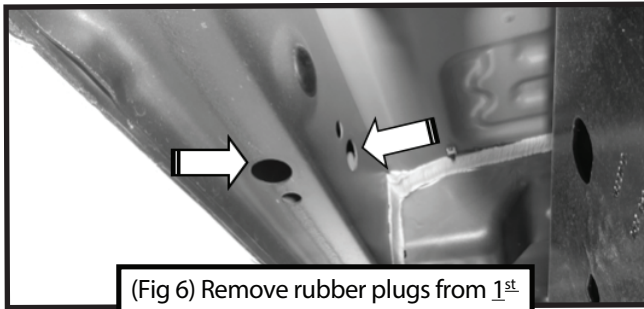


(Fig 6) Remove rubber plugs from 1st center mounting location (arrows)

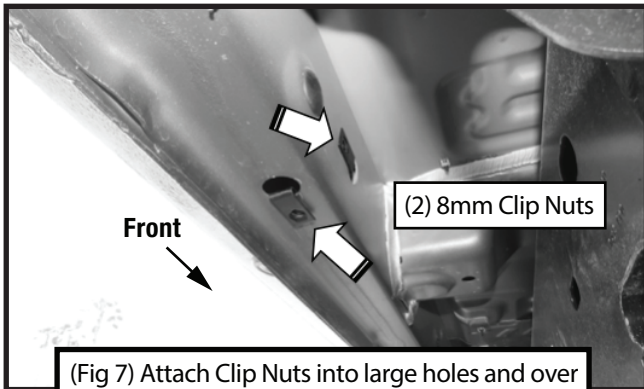


(Fig 7) Attach Clip Nuts into large holes and over small holes and attach mounting bracket

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm OD x 2mm Flat Washers

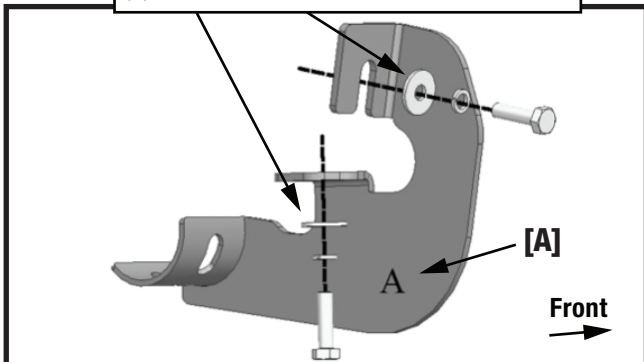


(Fig 8) Attach Driver/Left Front and Center Bracket (A) with indicated hardware. DO NOT fully tighten at this time

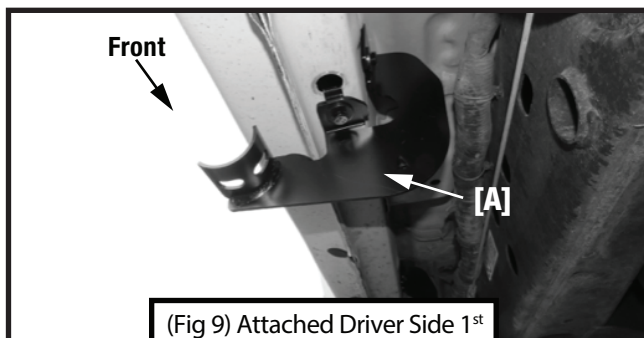


(Fig 9) Attached Driver Side 1st Center Mounting Bracket [A]

Driver-side 2nd Center Mounting Area

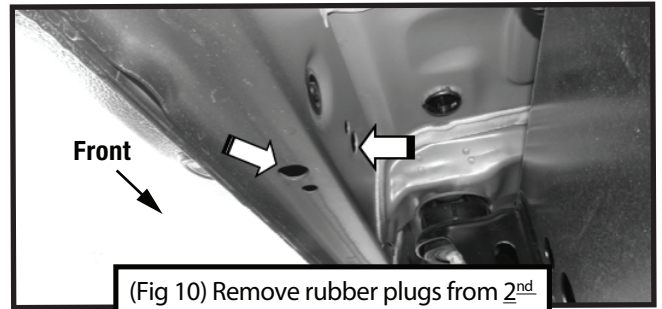


(Fig 10) Remove rubber plugs from 2nd center mounting location (arrows)

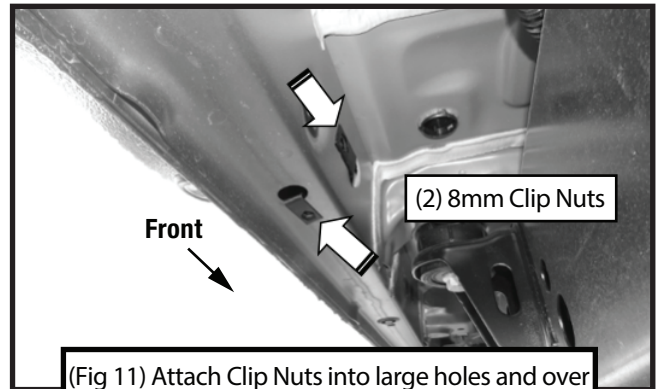


(Fig 11) Attach Clip Nuts into large holes and over small holes and attach mounting bracket

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm OD x 2mm Flat Washers

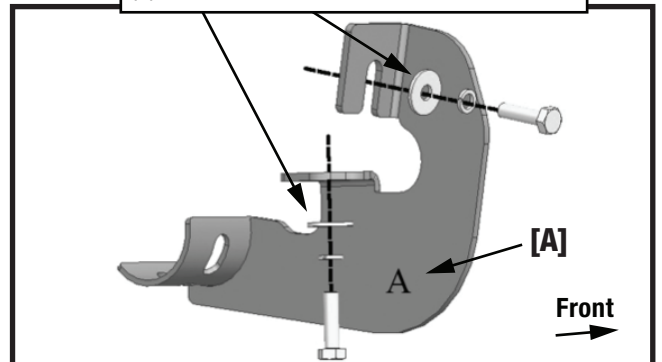


(Fig 12) Attach Driver/Left Front and Center Bracket (A) with indicated hardware. DO NOT fully tighten at this time

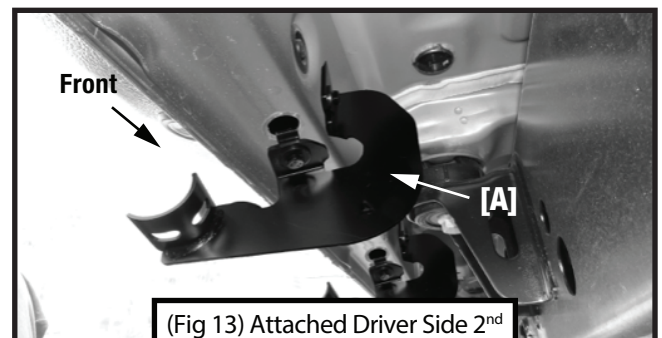


(Fig 13) Attached Driver Side 2nd Center Mounting Bracket [A]




Driver-side Rear Mounting Area

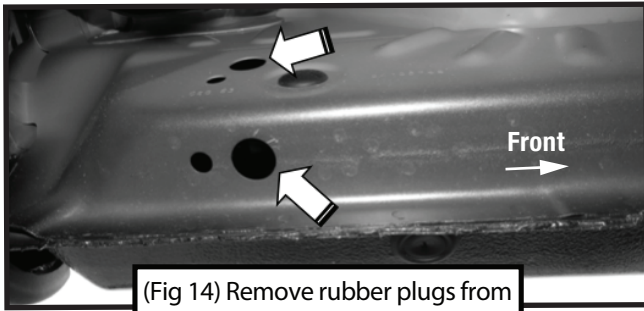


(Fig 14) Remove rubber plugs from rear mounting location (arrows)

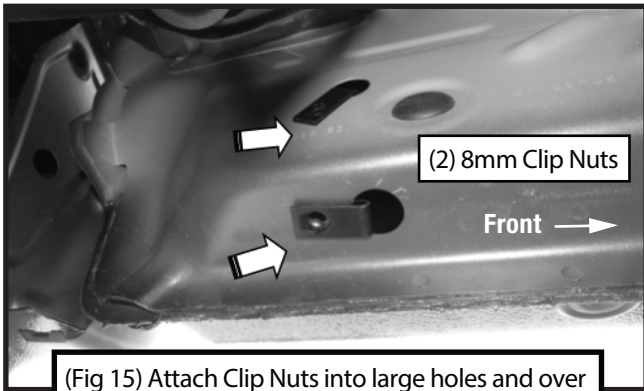

(Fig 15) Attach Clip Nuts into large holes and over small holes and attach mounting bracket

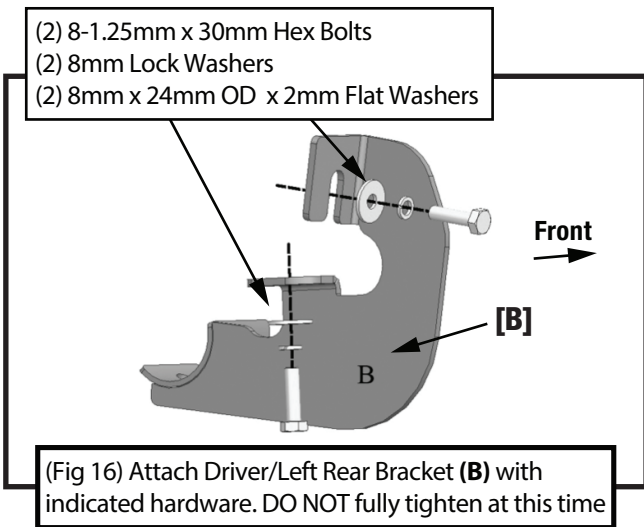


(Fig 16) Attach Driver/Left Rear Bracket (B) with indicated hardware. DO NOT fully tighten at this time

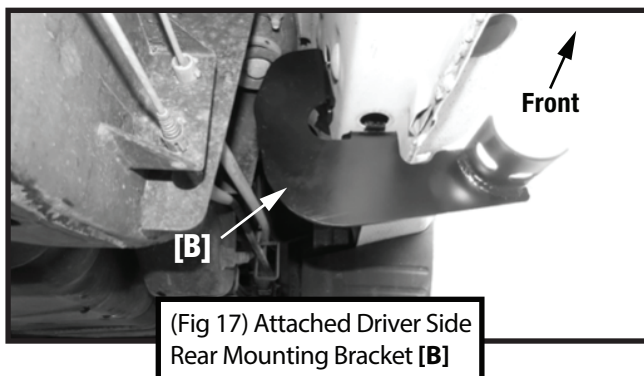

(Fig 17) Attached Driver Side Rear Mounting Bracket [B]

STEP 2 MOUNTING RUNNING BOARD


Follow (Fig 18) to install the TYGER Kobra Drop Step on the Driver/Left side. Ensure all hardware is hand tightened at this point.

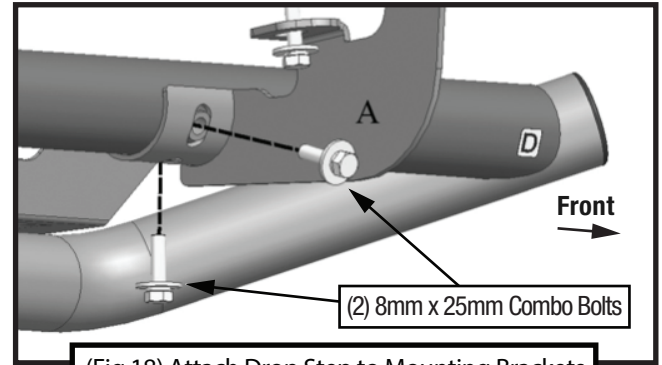

(Fig 18) Attach Drop Step to Mounting Brackets


STEP 3 PASSENGER SIDE

Repeat **STEPS 1-2** for passenger side installation. Use Front & Center Mounting Bracket [C] instead of [A]; Use Rear Mounting Bracket [D] instead of [B].

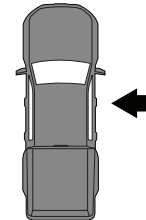

STEP 4

Ensure Tyger Kobra Drop Step is level and straightened, **then tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

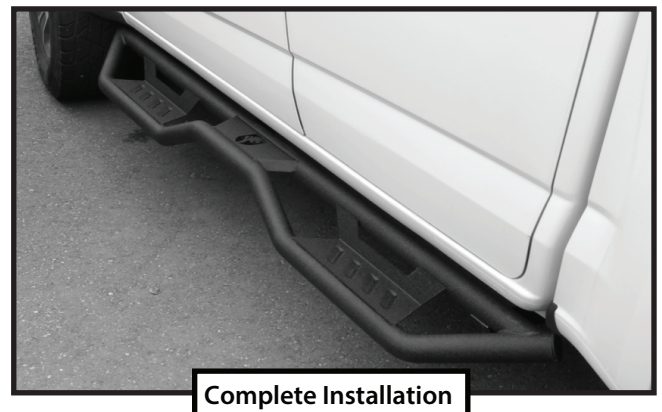

Complete Installation