



# TYGER®

## TYGER KOBRA

TG-KB2T25010

Scan to Download the  
Latest Digital Version



### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- |   |   |
|---|---|
| <b>x1</b> Driver/Left Tyger Kobra                       | <b>x3</b> Passenger/Right Center/Rear Mounting Brackets [D] |
| <b>x1</b> Passenger/Right Tyger Kobra                   | <b>x16</b> 8mm x 24mm x 2mm Flat Washers                    |
| <b>x1</b> Driver/Left Front Mounting Brackets [A]       | <b>x16</b> 8-1.25mm x 25mm Combination Bolts                |
| <b>x3</b> Driver/Left Center/Rear Mounting Brackets [B] | <b>x16</b> 8-1.25mm x 30mm Hex Bolts                        |
| <b>x1</b> Passenger/Right Front Mounting Bracket [C]    | <b>x16</b> 8mm Lock Washers                                 |

### Parts List


### Top View

**ATTENTION:** Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Kobra

#### **P** Passenger Side TYGER Kobra

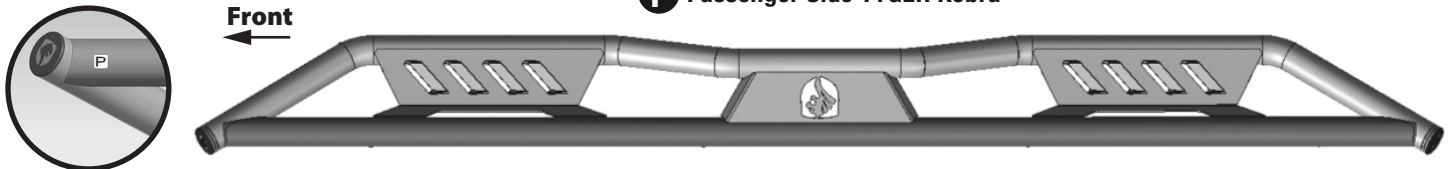



#### **D** Driver Side TYGER Kobra

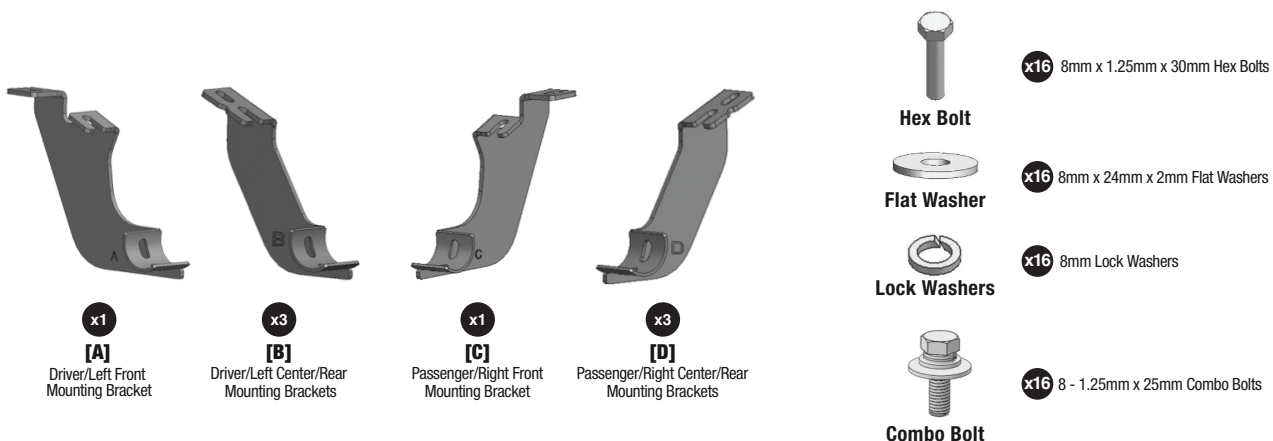

Reference the letters printed on the brackets to determine mounting locations

## Top View


**P** Passenger Side TYGER KOBRA

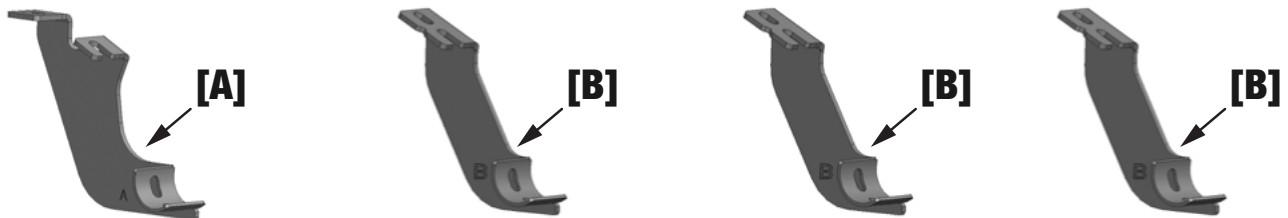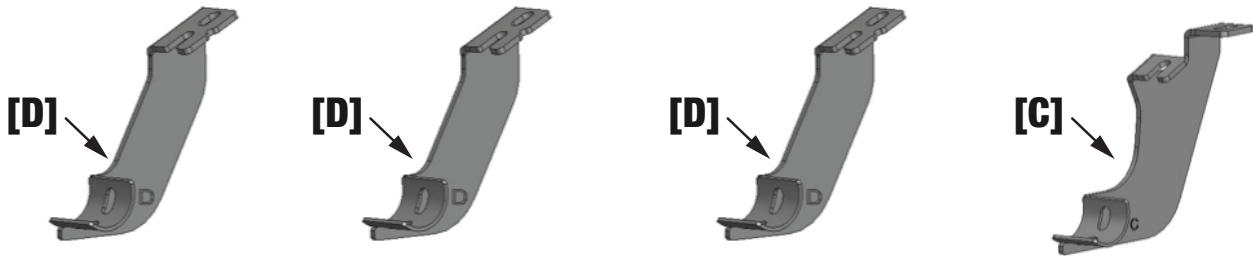


**D** Driver Side TYGER KOBRA

## Bottom View

**P** Passenger Side TYGER KOBRA

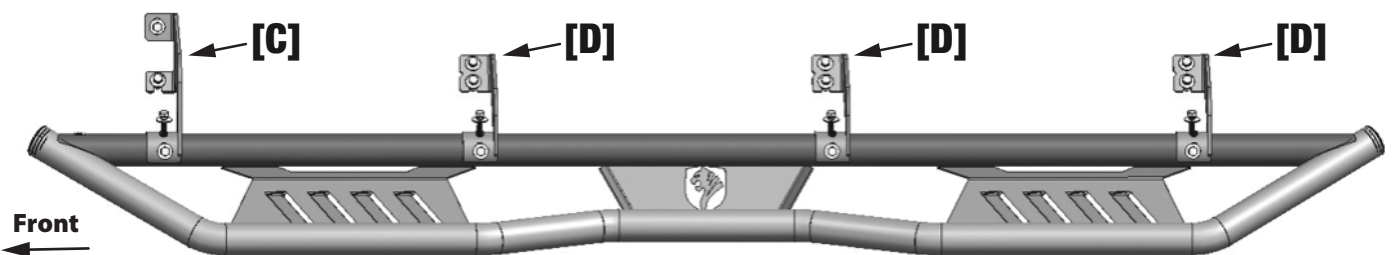


Front  
←

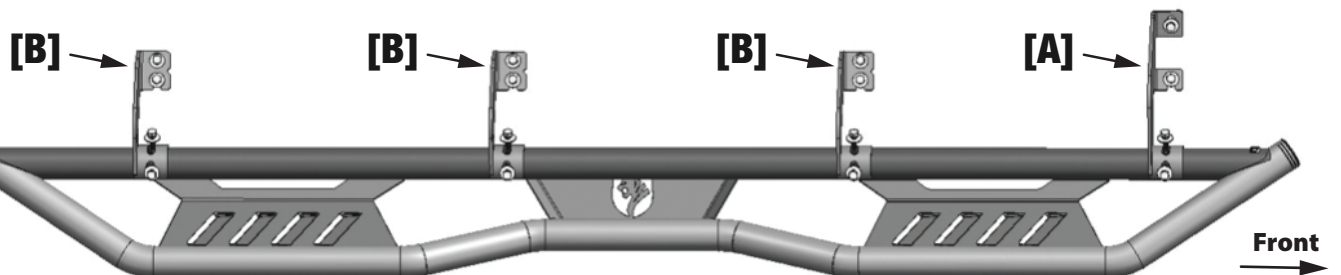

Front  
→


**D** Driver Side TYGER KOBRA

## TOOLS REQUIRED



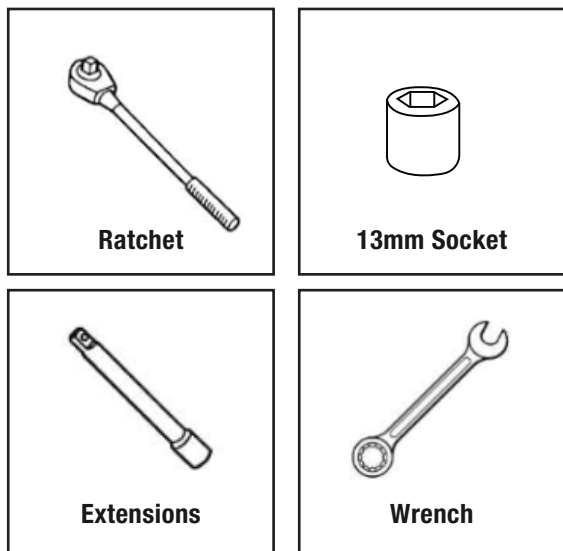


## STEP 1 MOUNTING BRACKETS


Follow (Fig 1 – 12) to attach Passenger/Right Mounting Brackets to the Passenger/Right side. **Ensure all hardware is hand tightened at this point.**




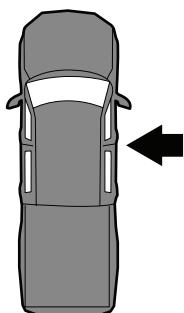


### Passenger-side **Front** Mounting Area

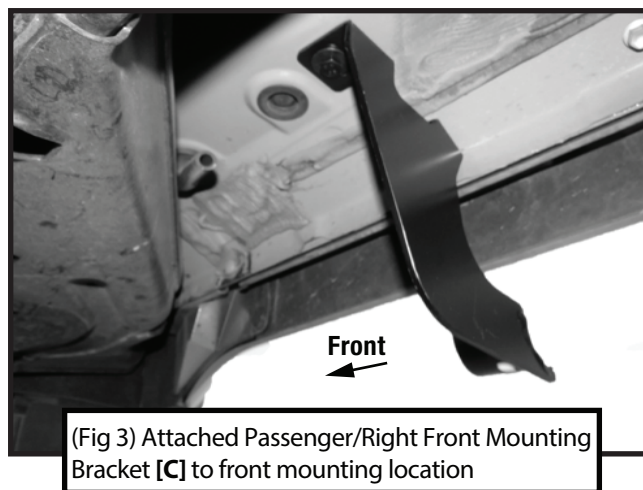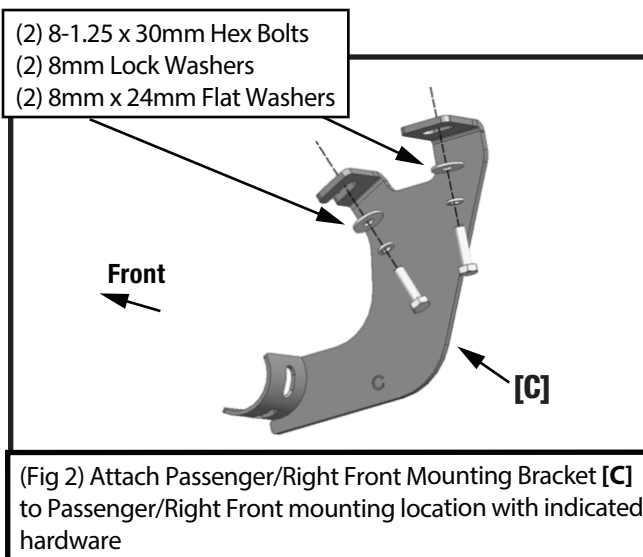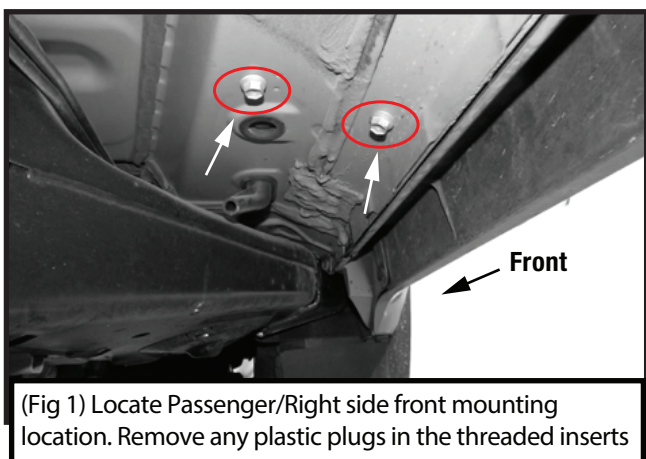


### Passenger-side **1st Center** Mounting Area

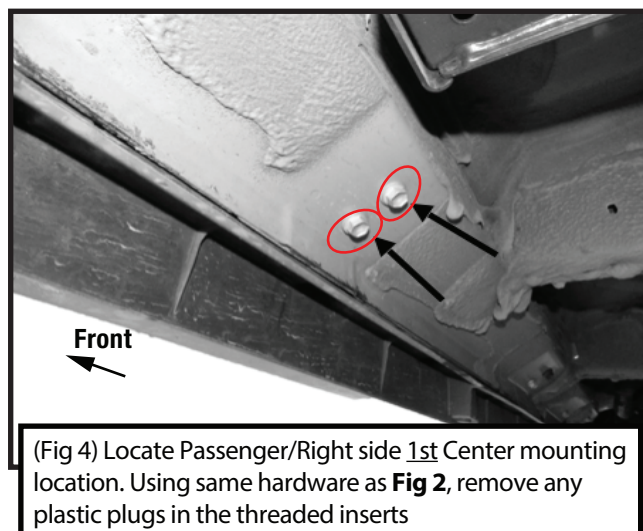


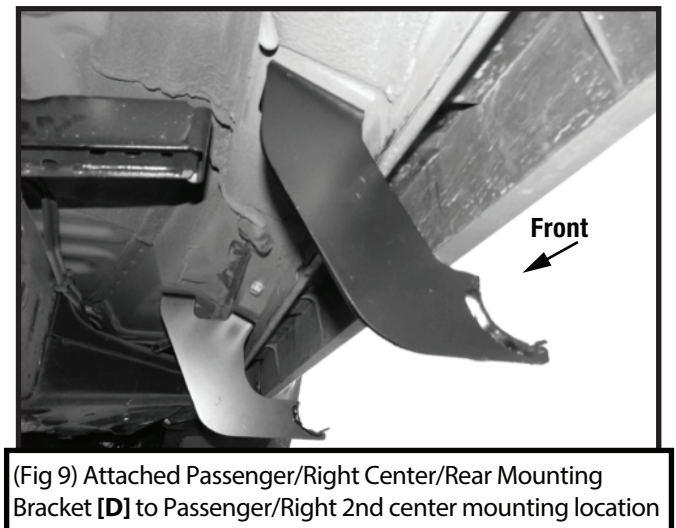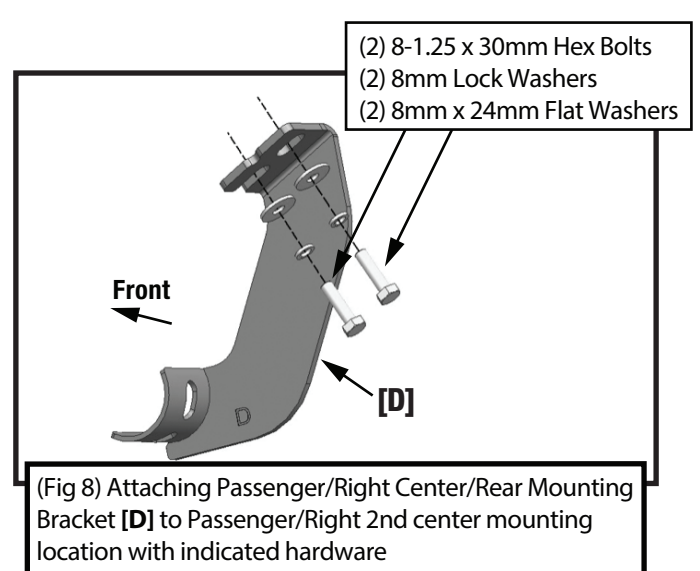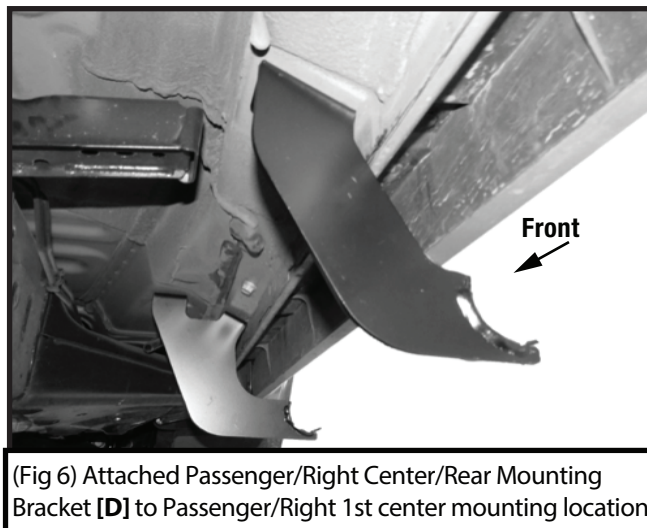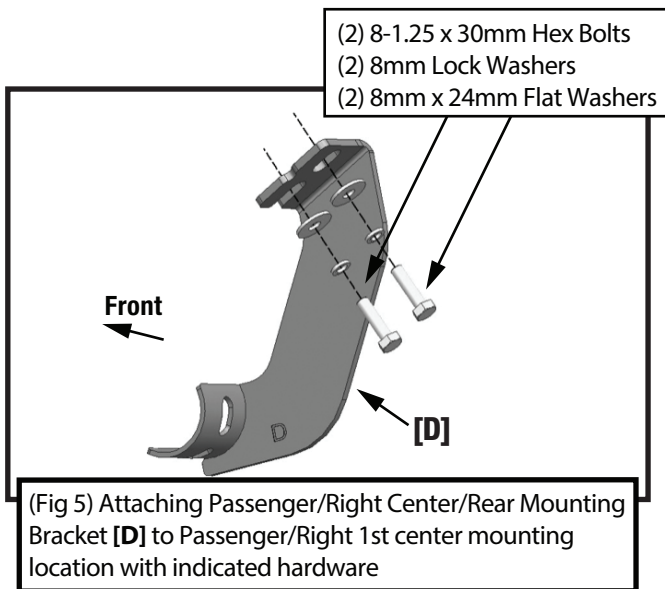



### Passenger-side **2nd Center** Mounting Area

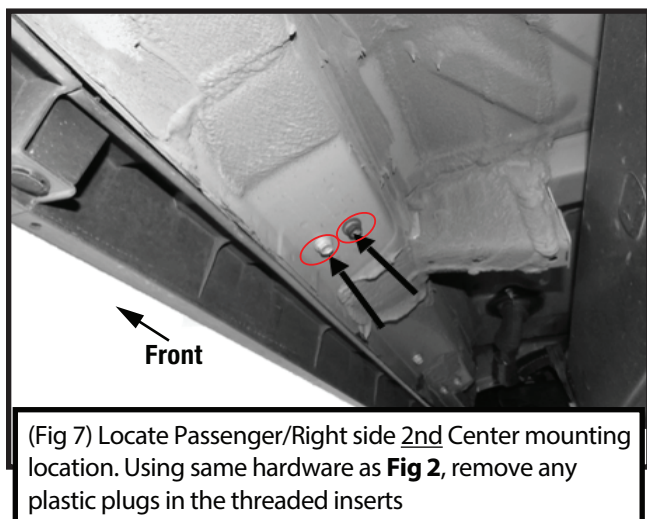

### Passenger-side **Rear** Mounting Area

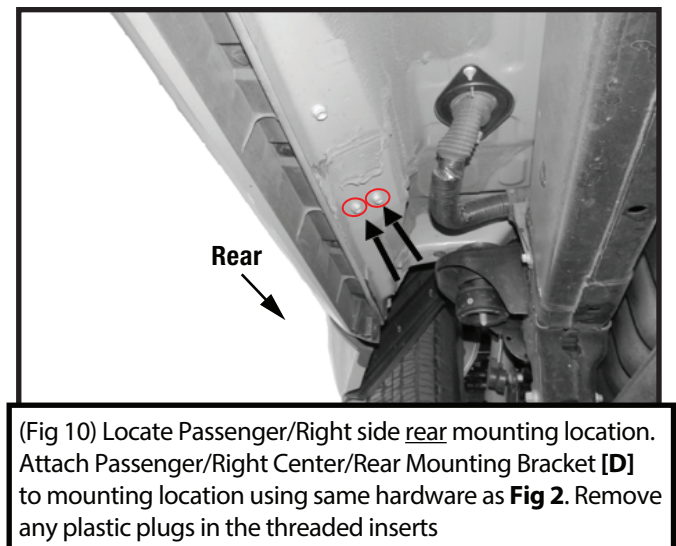




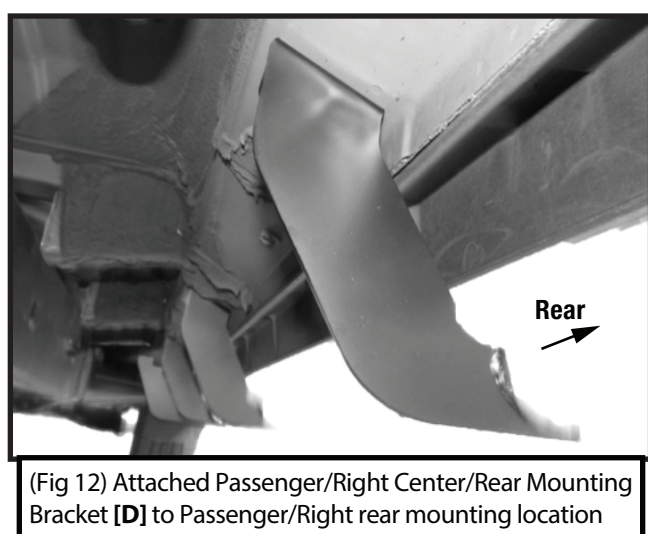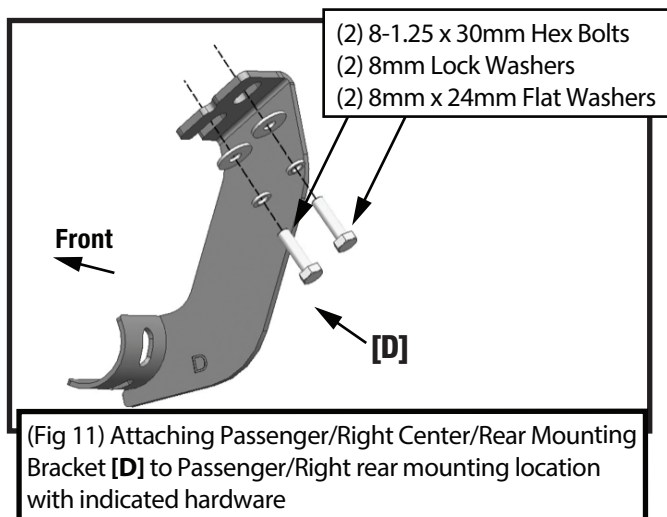


## STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 13) to install the Kobra Drop Step on the Passenger/Right Mounting Brackets. Ensure all hardware is hand tightened at this point.

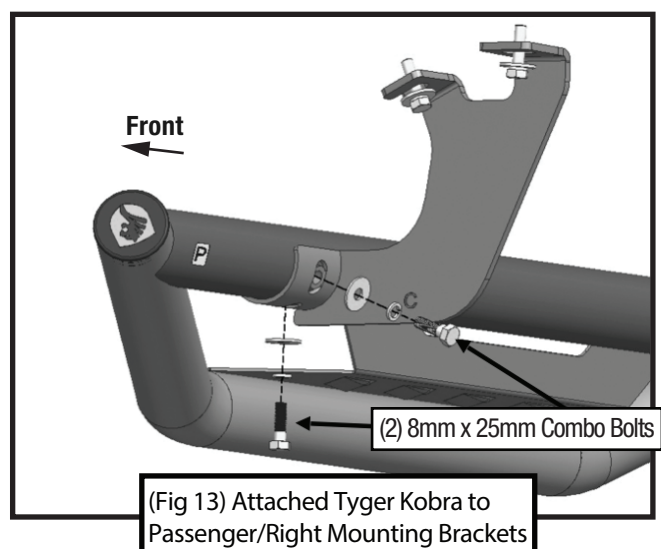

## STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation.  
Use Front Mounting Bracket [A] instead of [C];  
Use Center & Rear Mounting Brackets [B] instead of [D].

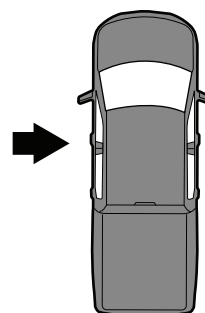

## STEP 4

Ensure Tyger Kobra Drop Step is level and straightened, **then tighten all fasteners**. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

