



TYGER®

TYGER LANDER™

TG-LD2C60238

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/Left Tyger Lander
- x1 Passenger/Right Tyger Lander
- x2 Driver/Left Front Mounting Bracket
- x2 Passenger/Right Front Mounting Brackets
- x1 Driver/Left 3rd Mounting Bracket
- x1 Passenger/Right 3rd Mounting Bracket
- x1 Driver/Left Rear Mounting Bracket
- x1 Passenger/Rear Mounting Bracket
- x14 10mm x 35mm Hex Bolts
- x28 10mm x 27mm OD x 3mm Flat Washers
- x14 10mm Nylon Lock Nuts
- x16 8mm x 30mm Hex Bolts
- x16 8mm Lock Washers
- x16 8mm x 24mm OD x 2mm Flat Washers

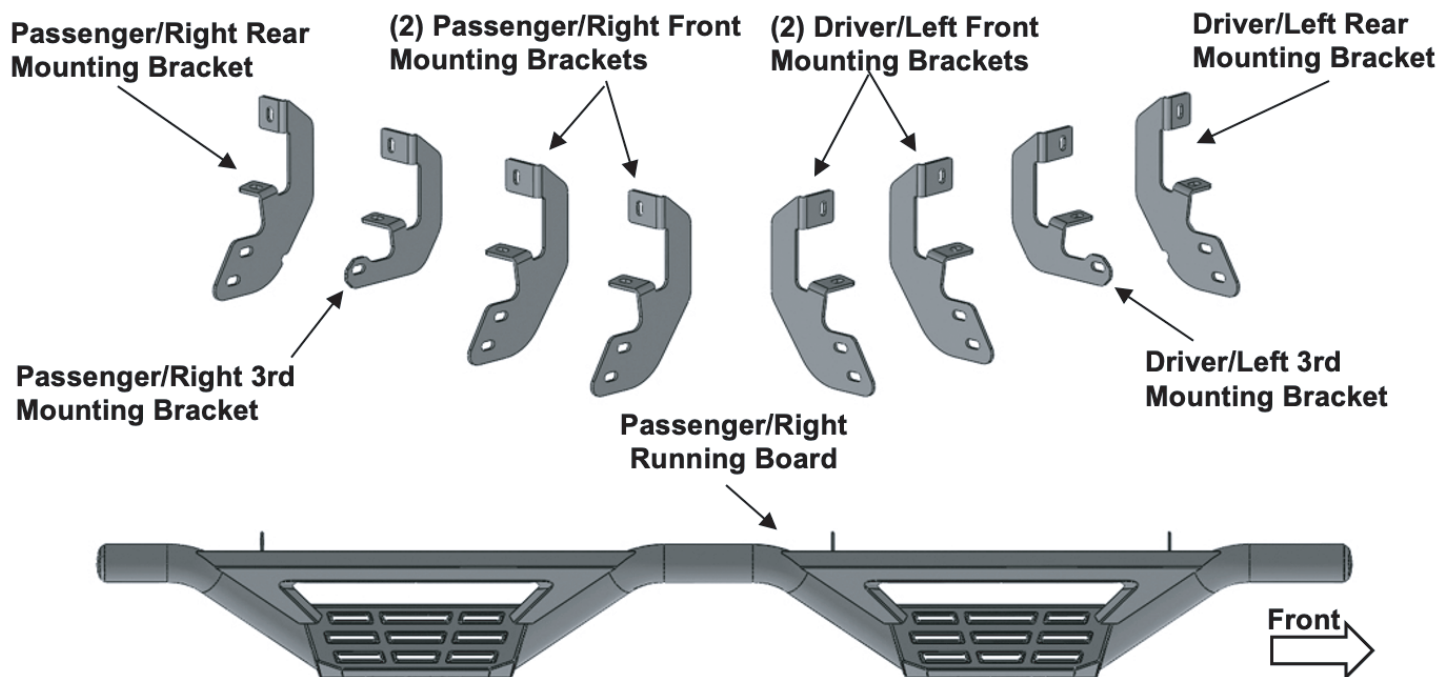



TYGER®

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

STEP 1

Start the installation under the Passenger/Right side of the vehicle. Locate the 4 plugs along the bottom edge of the body. Mounting Brackets will attach to all threaded mounting holes, (Fig 1). Remove the plastic plugs from each mounting location. Directly above each threaded hole is a top mounting location on the side of the body panel. Hold a Bracket up in place to help determine the mounting holes to use along the body.

NOTE: Thread an 8mm Hex Bolt into the threaded holes to clear paint as required.

Passenger/Right Side Installation Pictured




(Fig 1) Remove plastic plugs (arrows) to uncover threaded holes in floor

STEP 2

Select (1) Passenger/Right Front Mounting Bracket. Attach the Mounting Bracket to the factory threaded holes with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Fig 2). DO NOT tighten hardware.

Passenger/Right Side Installation Pictured

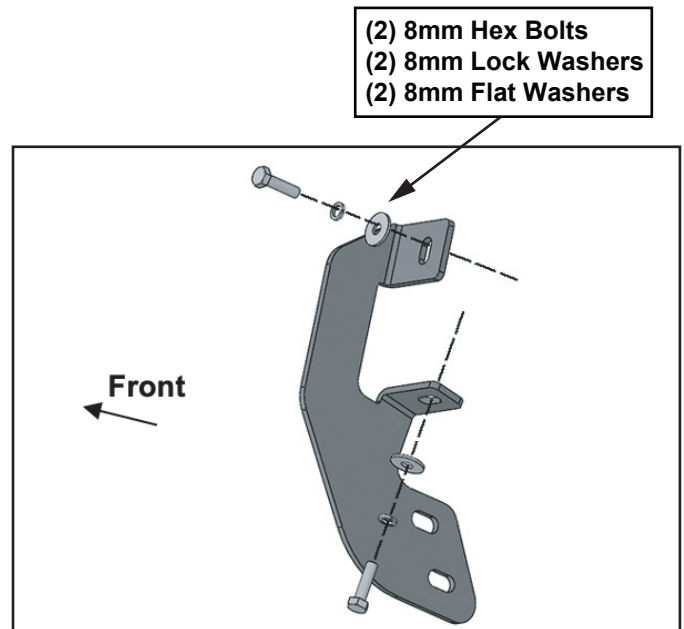

(Fig 2) Attach (1) Mounting Bracket to the Passenger/Right front location

STEP 3

Move along the body to the next mounting location. Repeat STEPS 1 & 2 to attach the remaining (3) Passenger/Right Mounting Bracket to the (3) remaining locations.

STEP 4


Select the Passenger/Right Tyger Lander. Attach the Tyger Lander to the rear faces of the Mounting Brackets with (7) 10mm Hex Nuts, (14) 10mm Flat Washers and (7) 10mm Nylon Lock Nuts (Figs 3 & 4). DO NOT tighten hardware.



TYGER®


Passenger/Right Side Installation Pictured

(2) 10mm Hex Bolts
(4) 10mm Flat Washers
(2) 10mm Nylon Lock Nuts

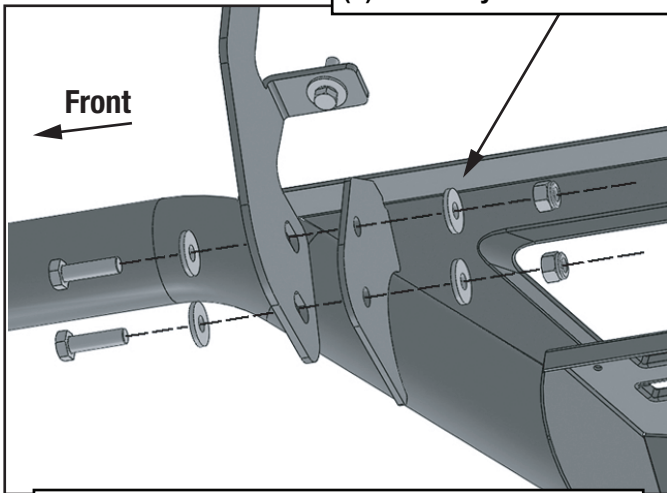

(Fig 3) Attach the Passenger/Right Tyger Lander to the Front, 2nd and Rear Mounting Brackets

(1) 10mm Hex Bolt
(2) 10mm Flat Washers
(1) 10mm Nylon Lock Nut

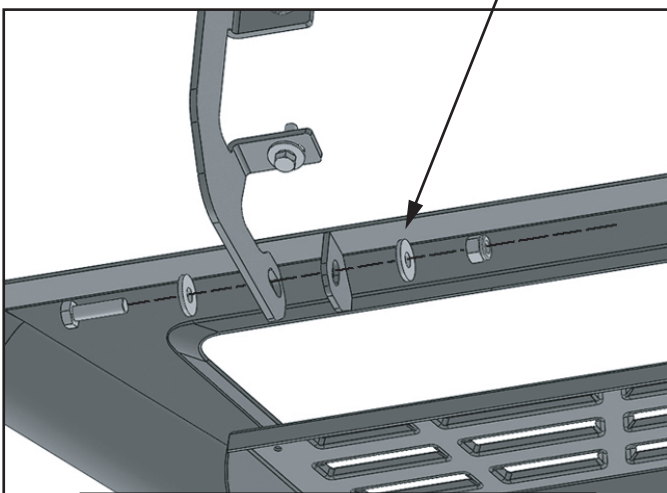

(Fig 4) Attach the Passenger/Right Tyger Lander to the 3rd Mounting Bracket

STEP 5

Level and adjust the Tyger Lander and fully tighten all hardware.

STEP 6

Repeat **STEPS 1-5** to attach the Driver/Left Tyger Lander.

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.