

# TYGER LANDER™

TG-LD2D60638

### **BEFORE INSTALLATION**


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

#### **TORQUE VALUES**

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

### **Parts List**

- Driver/Left Tyger Lander
- Passenger/Right Tyger Lander
- x2 Front Mounting Brackets
- Driver/Left Center Mounting Bracket
- Passenger/Right Center Mounting Bracket
- Driver/Left Rear Mounting Bracket
- Passenger/Right Rear Mounting Bracket
- 10mm x 35mm Hex Bolts
- 10mm x 27mm 0D x 3mm Flat Washers
- 10mm Nylon Lock Nuts
- 8mm x 24mm OD x 2mm Flat Washers
- 8mm Nylon Lock Nuts

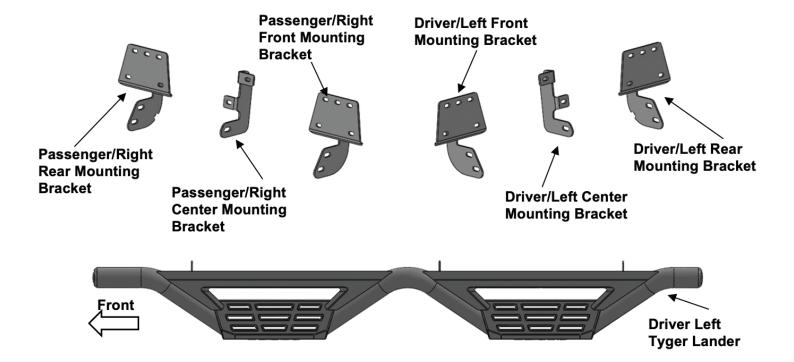




### STEP1

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. USE WIRE BRUSH TO CLEAN MOUNTING STUDS OF PAINT AND DEBRIS.

### STEP 2

Start the installation under the Driver/Left side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel (Fig 1).

#### **Driver/Left Side Installation Pictured**

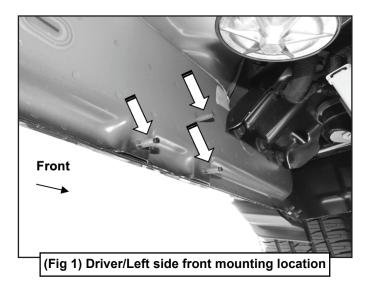



### STEP 3

Select (1) Front Mounting Bracket.

**NOTE:** The Front and Rear Mounting Brackets are similar but are unique. The Front Mounting Brackets have the mounting tab in dead center of the mounting plate and the Rear Mounting Brackets have the mounting tab offset towards the front of the mounting plate (Fig 2). Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts (Fig 3). DO NOT tighten hardware at this time.

#### **Driver/Left Side Installation Pictured**

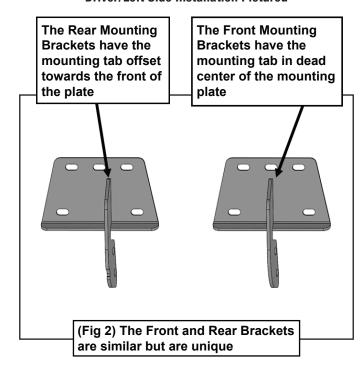

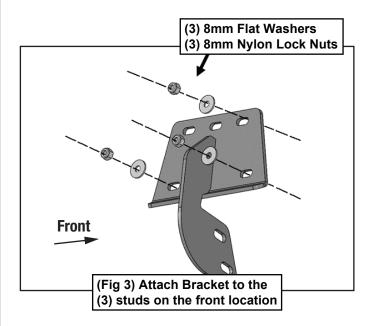





Select the Driver/Left Center Mounting Bracket. Attach the Bracket to the center location with (2) 8mm Flat Washers and (2) 8mm Nylon Lock Nuts (Figes 4 & 5). DO NOT tighten hardware.




#### **Driver/Left Side Installation Pictured**

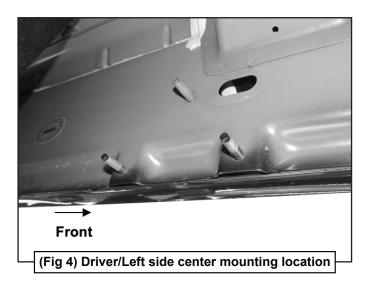

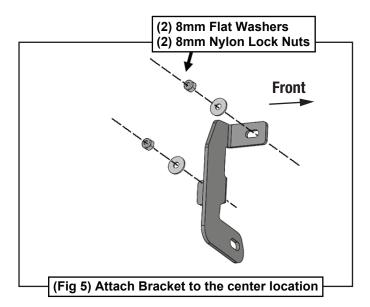

Repeat STEPS 1-3 to attach the Driver/Left Rear Mounting Bracket rear mounting location on the body panel (Fig 6).

#### **Driver/Left Side Installation Pictured**

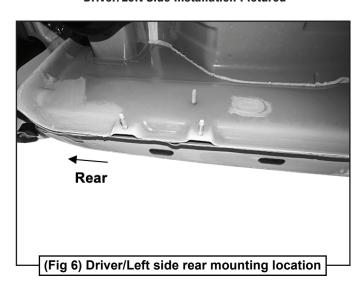


### STEP 6


Select the Driver/Left Tyger Lander. Attach the Tyger Lander to the rear faces of the Mounting Brackets with (10) 10mm Hex Bolts, (20) 10mm Flat Washers and (10) 10mm Nylon Lock Nuts (Figs 7 & 8). DO NOT tighten hardware.

#### **Driver/Left Side Installation Pictured**

- (2) 10mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

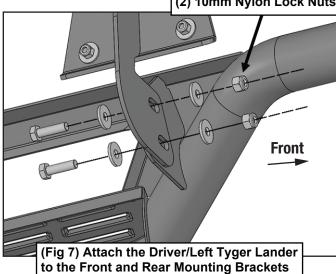

Customer Support: www.TygerAuto.com/contact-us.html

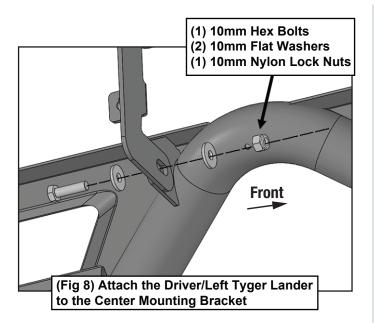



Level and adjust the Tyger Lander as necessary and fully tighten all hardware.

## STEP 8

Repeat **STEPS 1-6** to attach the Passenger/Right Tyger Lander to the vehicle.

## STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.