



TYGER®

TYGER LANDER™

TG-LD2F60548

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT


TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


Parts List

- x1 Driver/Left Tyger Lander
- x1 Passenger/Right Tyger Lander
- x2 Front Mounting Brackets
- x2 Driver/Left Rear/Center Mounting Brackets
- x2 Passenger/Right Rear/Center Mounting Brackets
- x12 10mm x 35mm Hex Bolts
- x24 10mm x 27mm OD x 3mm Flat Washers
- x12 10mm Nylon Lock Nuts
- x18 8mm x 24mm OD x 2mm Flat Washers
- x18 8mm Nylon Lock Nuts
- x18 8mm Plastic Retainers


(2) Passenger/Right Rear/Center Mounting Brackets

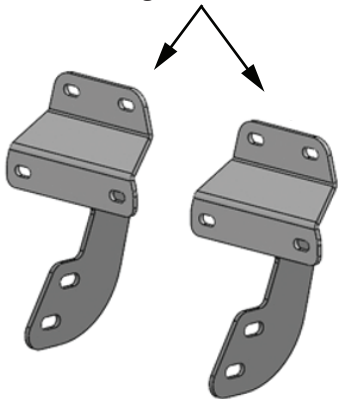

(2) Front Mounting Brackets

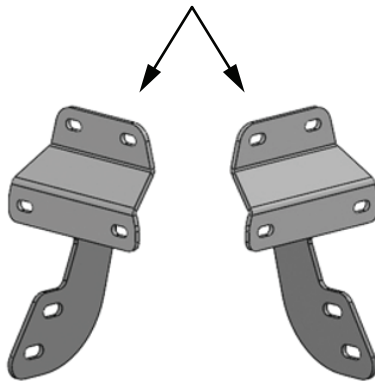

(2) Driver/Left Rear/Center Mounting Brackets

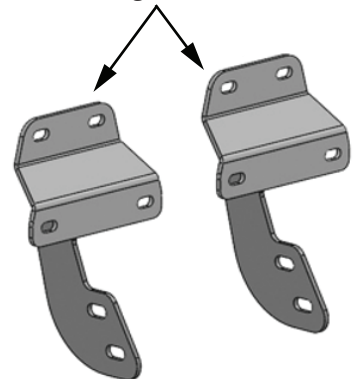

Passenger/Right Tyger Lander





TYGER®


PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.
READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.


STEP 1

Start the installation under the Passenger/Right side of the vehicle. Locate the front factory mounting location along the inner side of the body (Fig 1). Use a wire brush or thread chaser die to remove excess paint and/or undercoating from all studs.


Passenger/Right Side Installation Pictured

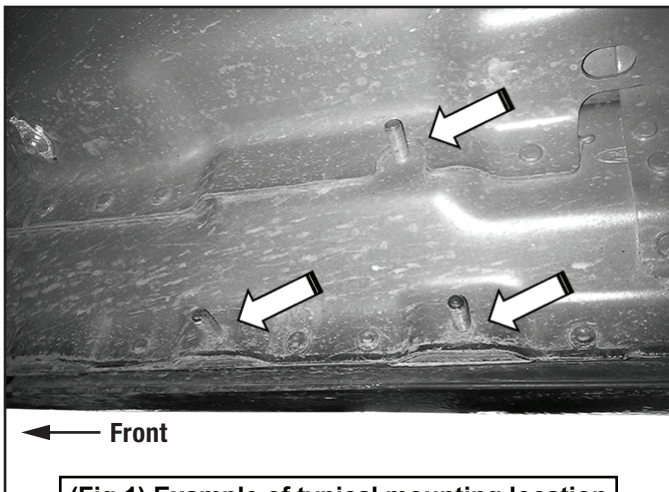


(Fig 1) Example of typical mounting location

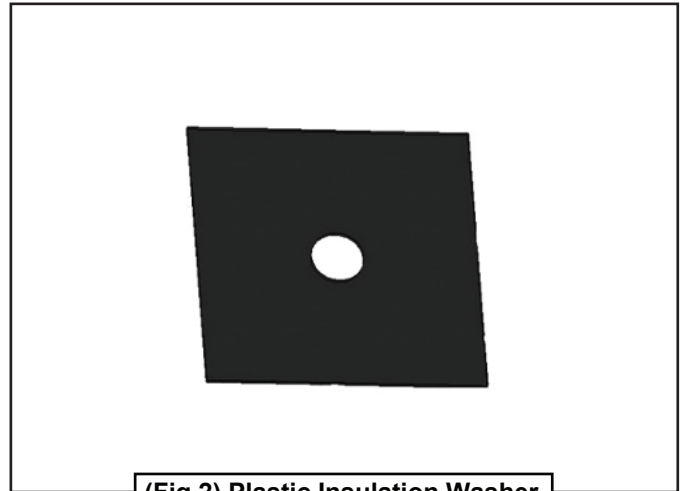

(Fig 2) Plastic Insulation Washer

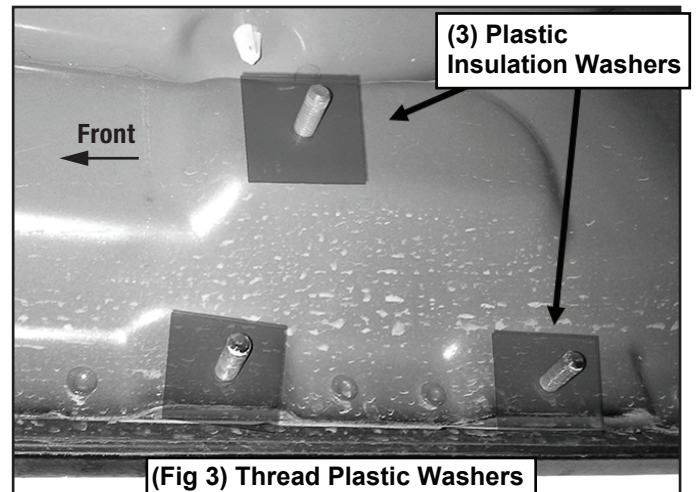

(Fig 3) Thread Plastic Washers onto all mounting studs

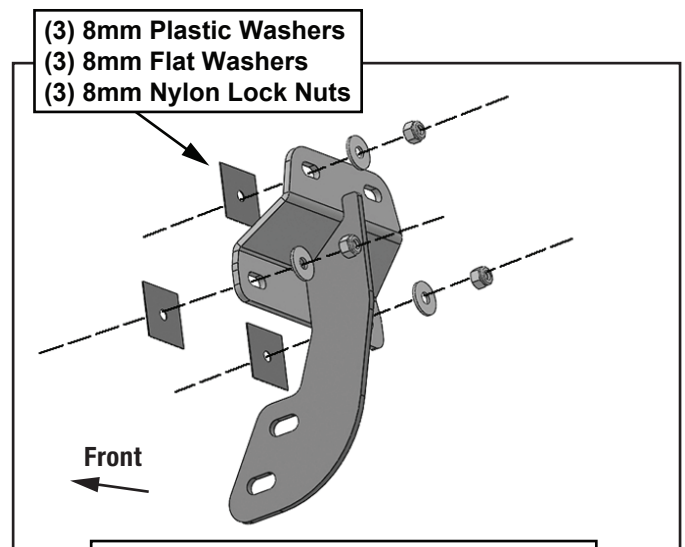

(Fig 4) Attach Bracket to mounting studs

STEP 2

Slide (1) Plastic Washer over each of the (3) factory mounting studs in the body panel (Figs 2-4).


IMPORTANT: The Plastic Washers are designed to prevent corrosion between the aluminum body panel and the steel mounting brackets. DO NOT install the Brackets without the Plastic Washers.



TYGER®

STEP 3

Select (1) Front Mounting Bracket (Fig 5). Attach the Bracket to the studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts (Fig 4). DO NOT tighten hardware.

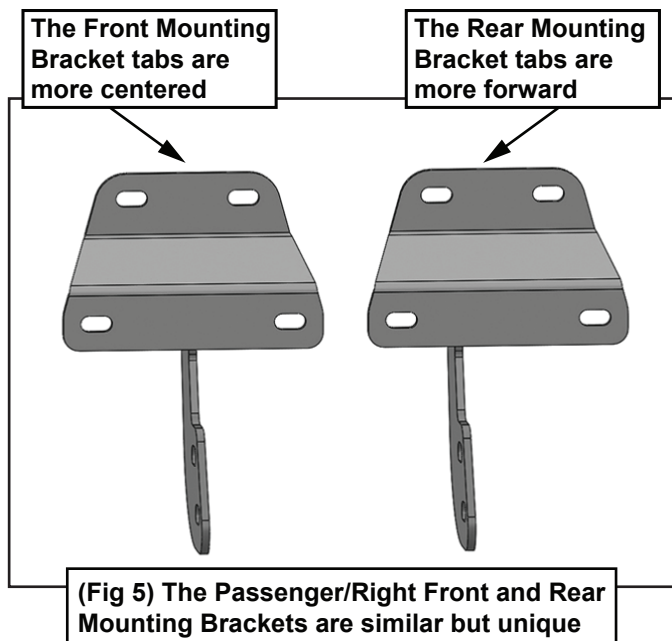


STEP 4

Repeat **STEP 3** to attach the (2) Passenger/Right Rear Mounting Brackets to the center and rear mounting locations.

STEP 5

Select the Passenger/Right Tyger Lander. Attach the Tyger Lander to the rear face of the Mounting Brackets with (6) 10mm Hex Bolts, (12) 10mm Flat Washers and (6) 10mm Nylon Lock Nuts (Fig 6). DO NOT tighten hardware.

- (2) 10mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon lock Nuts

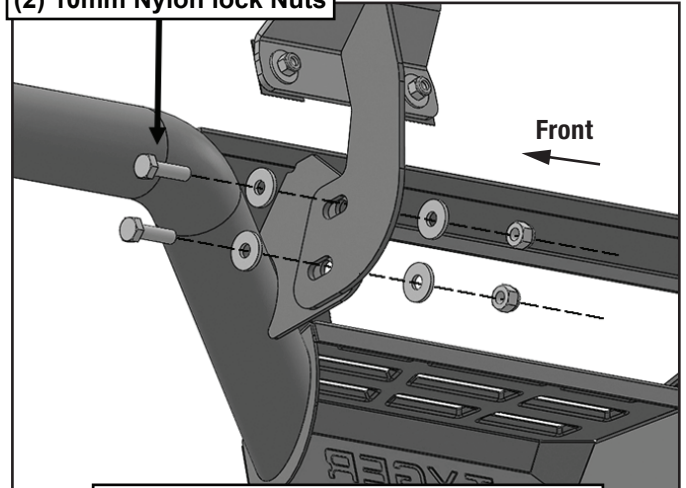

STEP 6

Level and adjust the Tyger Lander and tighten all hardware.

STEP 7

Repeat **STEPS 1-6** to attach Driver/Left Tyger Lander.

STEP 8

Do periodic inspections to the installation to make sure that all hardware is secure and tight.