

TYGER LANDER[™]


TG-LD2T60048


BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: <u>WWW.TYGERAUTO.COM/CONTACT</u>

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

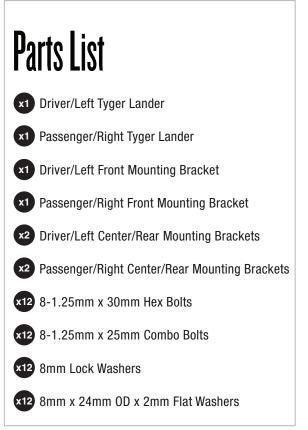

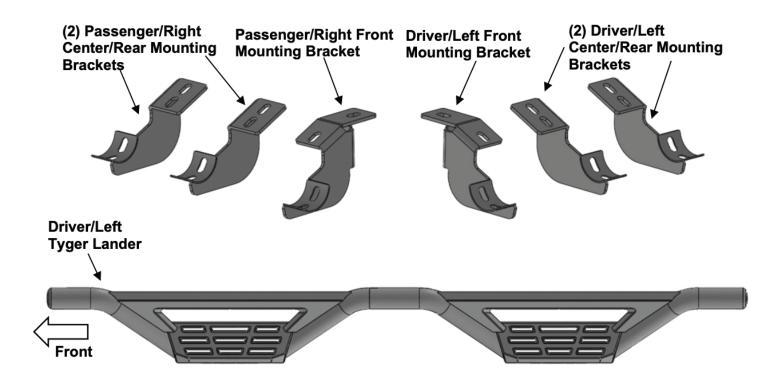

Customer Support: www.TygerAuto.com/Contact




STEP I

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.



Starting on the Driver/Left side of the vehicle, remove any plastic plugs or hex bolts from the factory mounting locations along the bottom of the panel (Fig 1).


Driver/Left Side Installation Pictured

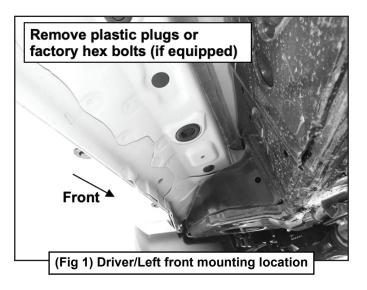




Select the Driver/Left Front Mounting Bracket. Attach the Mounting Bracket to the front location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Figs 2 & 3). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

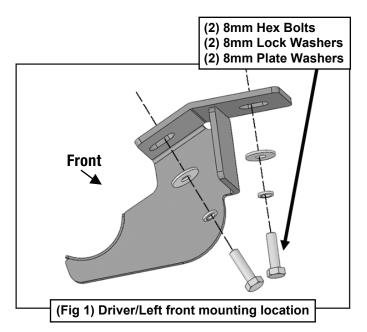

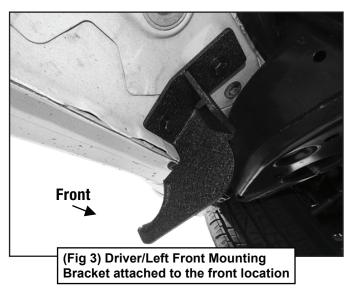




Move to the center location, (Figure 4). Select (1) Driver/Left Center/Rear Mounting Bracket. Attach the Mounting Bracket to the center location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Figs 5 & 6). DO NOT tighten hardware.




Driver/Left Side Installation Pictured

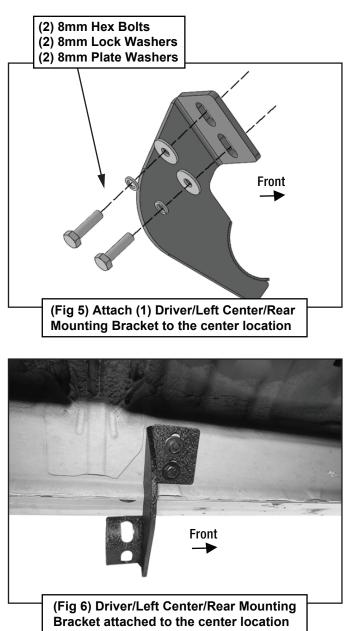


STEP 5

Move to the rear location (Fig 7). Repeat STEP 4 to attach (1) Driver/Left Center/Rear Mounting Bracket to the rear location (Figs 5 & 8)

Driver/Left Side Installation Pictured

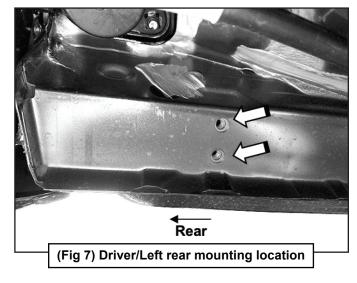

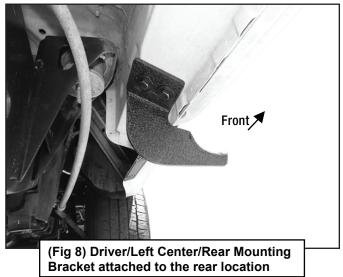


STEP 6


Select the Driver/left Tyger Lander. Carefully place Tyger Lander on the Mounting Brackets.

IMPORTANT: DO NOT slide or rotate Tyger Lander on cradles, or damage to the finish may result. Attach the Tyger Lander to the Mounting Brackets with (6) 8mm Combo Bolts (Figs 9-12). DO NOT tighten hardware.



Driver/Left Side Installation Pictured

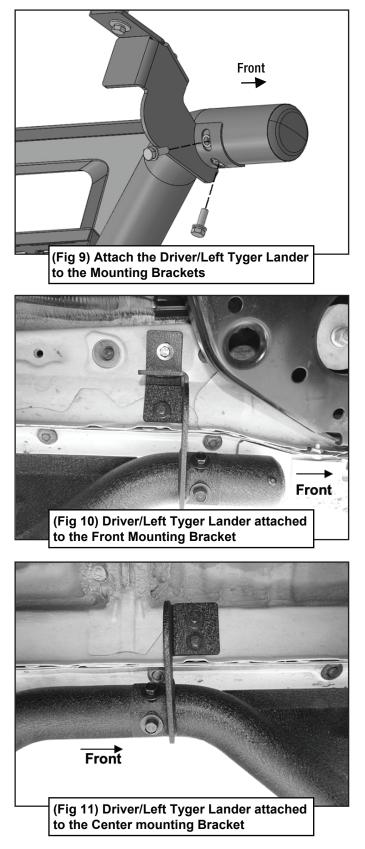

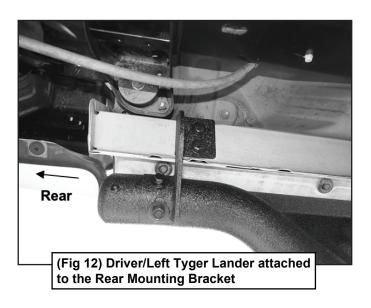



Level and adjust the Tyger Lander and fully tighten all hardware.



Repeat **STEPS 2-7** to attach the Passenger/Right Tyger Lander.



Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Customer Support: www.TygerAuto.com/Contact