



TYGER®

TYGER LANDER™

TG-LD2T60188

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/Left Tyger Lander
- x1 Passenger/Right Tyger Lander
- x1 Driver/Left Front Mounting Bracket
- x1 Passenger/Right Front Mounting Brackets
- x1 Driver/Left Center Mounting Bracket
- x1 Passenger/Right Center Mounting Bracket
- x1 Driver/Left Rear Mounting Bracket
- x1 Passenger/Right Rear Mounting Bracket
- x12 10mm x 35mm Hex Bolts
- x24 10mm x 27mm OD x 3mm Flat Washers
- x12 10mm Nylon Lock Nuts
- x12 8mm x 30mm Hex Bolts
- x12 8mm Lock Washers
- x12 8mm x 24mm OD x 2mm Flat Washers

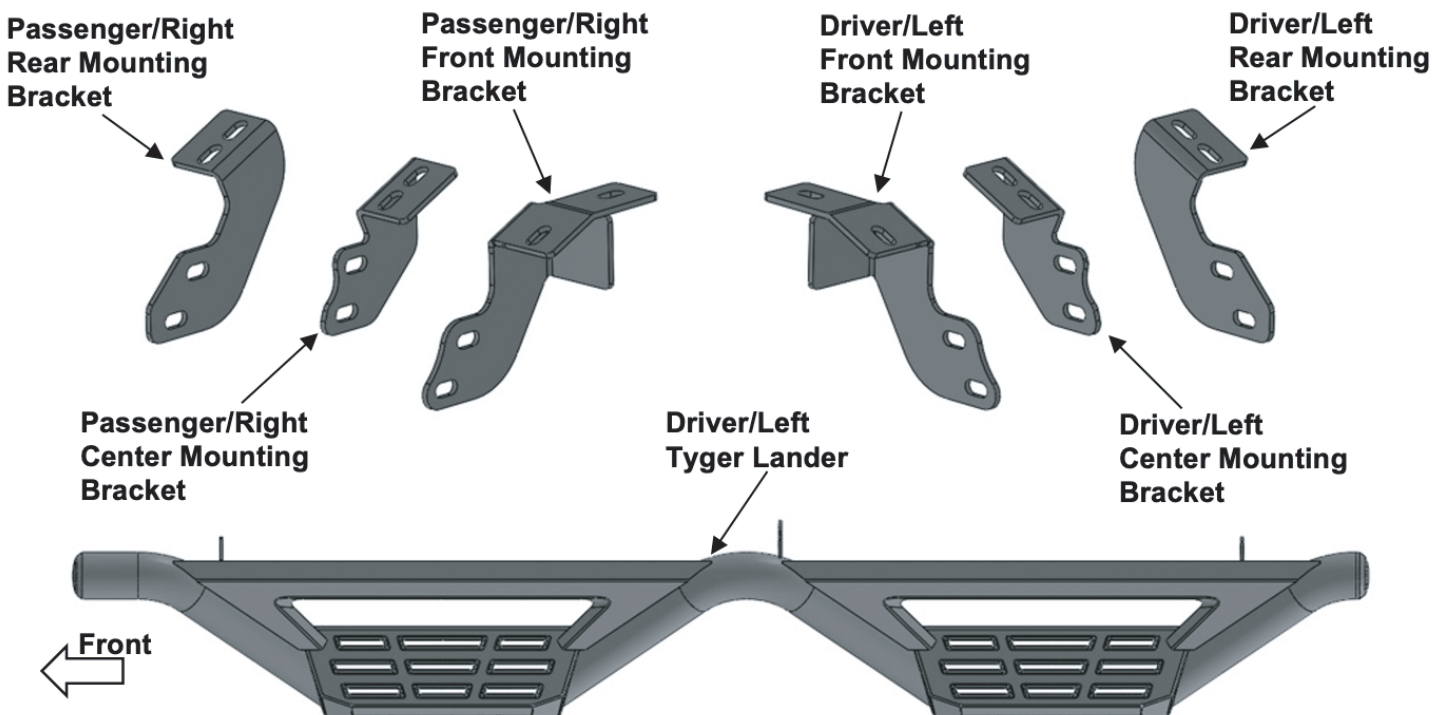



TYGER[®]


STEP 1

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

STEP 2

Starting on the Driver/Left side of the vehicle, remove any plastic plugs or hex bolts from the factory mounting locations along the bottom of the floor (Figs 1, 2 & 3).


Driver/Left Side Installation Pictured

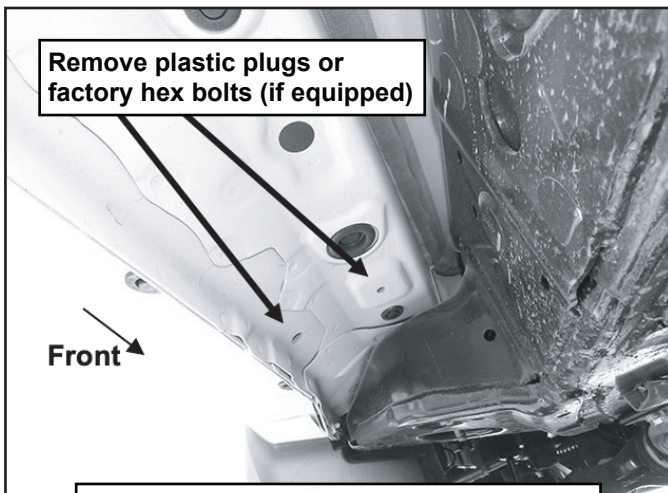

(Fig 1) Driver/Left front mounting location



(Fig 2) Driver/Left center mounting location

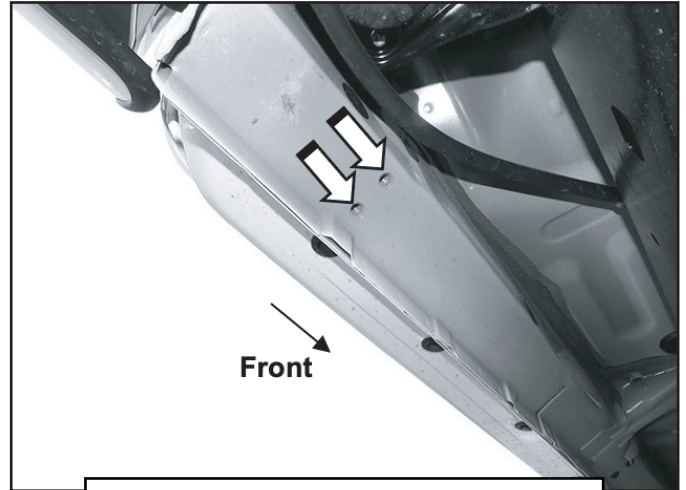


(Fig 3) Driver/Left rear mounting location

STEP 3

Select the Driver/Left Front Mounting Bracket. Attach the bracket to the front location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Fig 4). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

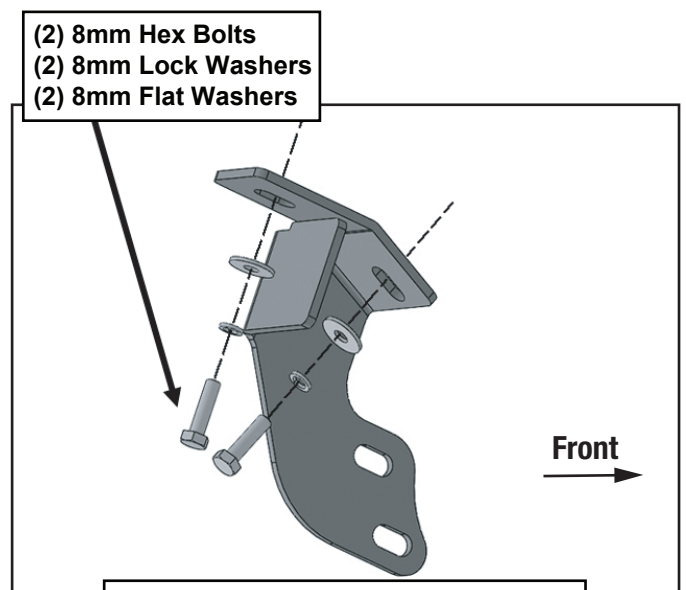

(Fig 4) Attach the Driver/Left Front Mounting Bracket to the front location




TYGER[®]

STEP 4

Move to the center location (Figs 2 & 5). Select the Driver/Left Center Mounting Bracket. Repeat **STEP 3** to attach the Bracket to the center location.

Driver/Left Side Installation Pictured

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Flat Washers

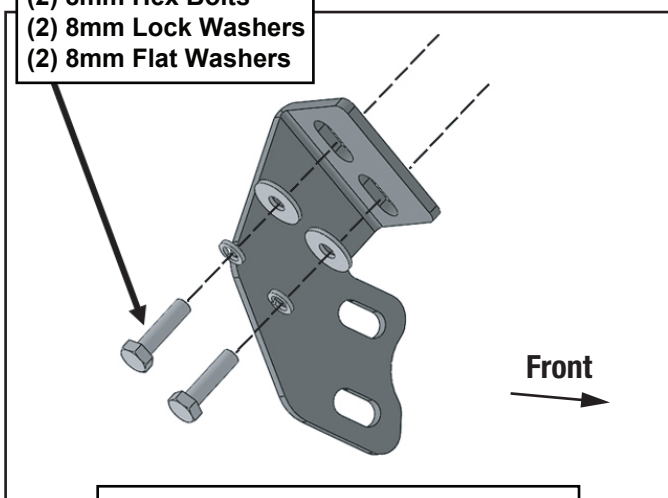

(Fig 5) Attach the Driver/Left Rear Mounting Bracket to the front location

STEP 5


Move to the rear location. Select the Driver/Left Rear Mounting Bracket. Repeat **STEP 3** to attach the Bracket to the rear location (Figs 3 & 5).

STEP 6

Select the Driver/Left Tyger Lander. Attach the Tyger Lander to the rear faces of the Mounting Brackets with (6) 10mm Hex Bolts, (12) 10mm Flat Washers and (6) 10mm Nylon Lock Nuts (Fig 6). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

(2) 10mm Hex Bolts
(4) 10mm Flat Washers
(2) 10mm Nylon Lock Nuts

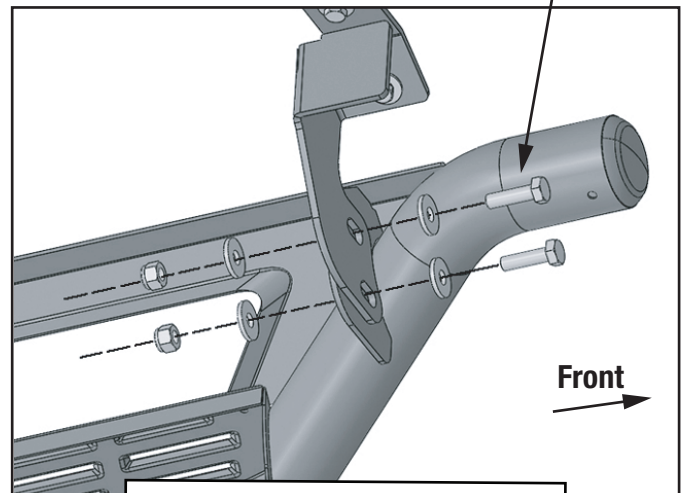

(Fig 6) Attach the Driver/Left Tyger Lander to the Mounting Brackets

STEP 7

Level and adjust the Tyger Lander and tighten all hardware.

STEP 8

Repeat **STEPS 1-7** to attach the Passenger/Right Tyger Lander.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.