



# TYGER®

## TYGER LANDER®

TG-LD2T60208

### BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

## Parts List

- x1 Driver/Left Tyger Lander
- x1 Passenger/Right Tyger Lander
- x1 Driver/Left Front Mounting Bracket
- x1 Passenger/Right Front Mounting Bracket
- x1 Driver/Left 2nd Mounting Bracket
- x1 Passenger/Right 2nd Mounting Bracket
- x1 Driver/Left 3rd Mounting Bracket
- x1 Passenger/Right 3rd Mounting Bracket
- x1 Driver/Left Rear Mounting Bracket
- x1 Passenger/Right Rear Mounting Bracket
- x8 10-1.5mm x 35mm Hex Bolts
- x16 10mm x 27mm OD x 3mm Flat Washers
- x8 10mm Nylon Lock Nuts
- x16 8-1.25mm x 30mm Hex Bolts
- x8 8-1.25mm x 25mm Combo Bolts
- x16 8mm Lock Washers
- x16 8mm x 24mm OD x 2mm Flat Washers

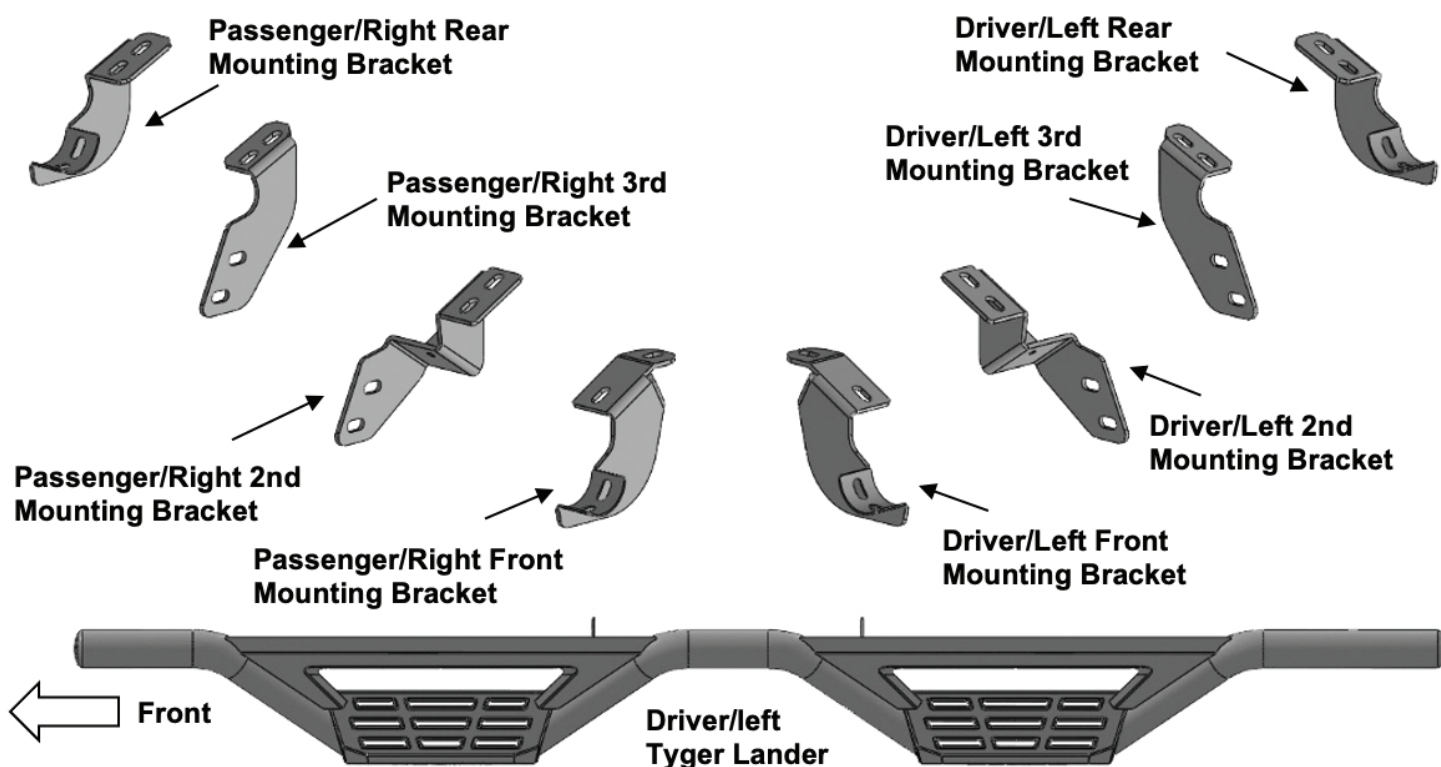



# TYGER®


## STEP 1

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. USE ILLUSTRATION TO IDENTIFY BRACKETS AND RUNNING BOARDS.

## STEP 2

Open the box containing the Brackets. Separate and carefully identify all Brackets before starting installation (Fig 1). Brackets may look similar but each Bracket is unique and must be installed in the correct location.

Driver/left Side Installation Pictured

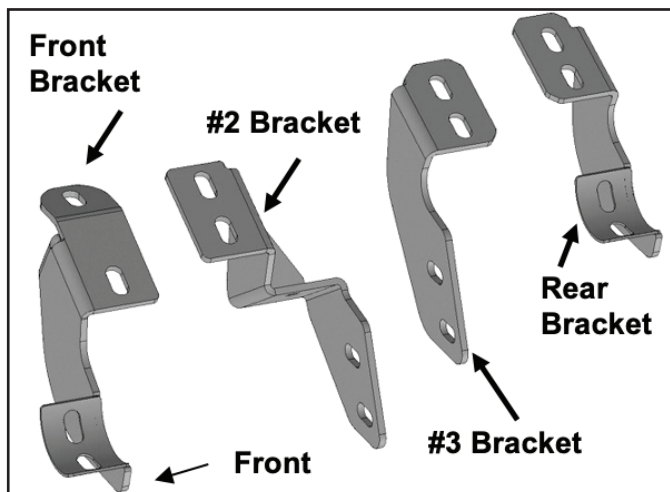


(Fig 1) Driver/left side Mounting Brackets

## STEP 3

Move to the driver/left side of the vehicle and remove the plastic plugs or hex bolts covering the (2) threaded holes in the body panel toward the front wheel opening (Fig 2). Select the driver/left Front Mounting Bracket (Fig 3). Attach the Bracket to the vehicle using the included (2) 8mm x 30mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Figs 3 & 4). DO NOT fully tighten hardware.


Driver/left Side Installation Pictured

Remove plastic plugs or factory hex bolts (if equipped)

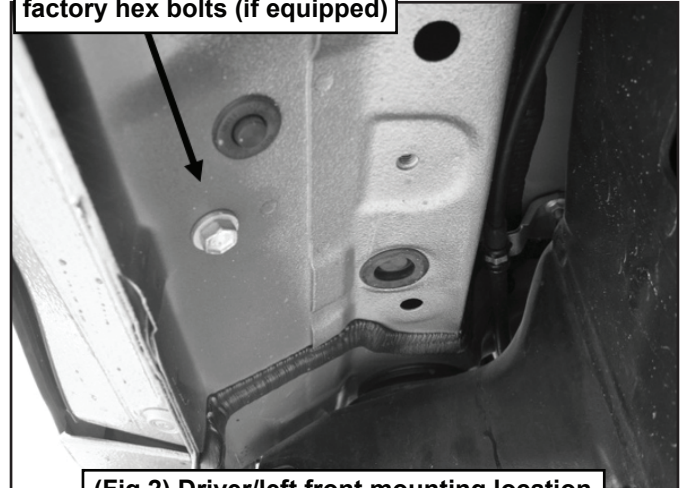

(Fig 2) Driver/left front mounting location


(2) 8mm x 30mm Hex Bolts  
(2) 8mm Lock Washers  
(2) 8mm Flat Washers

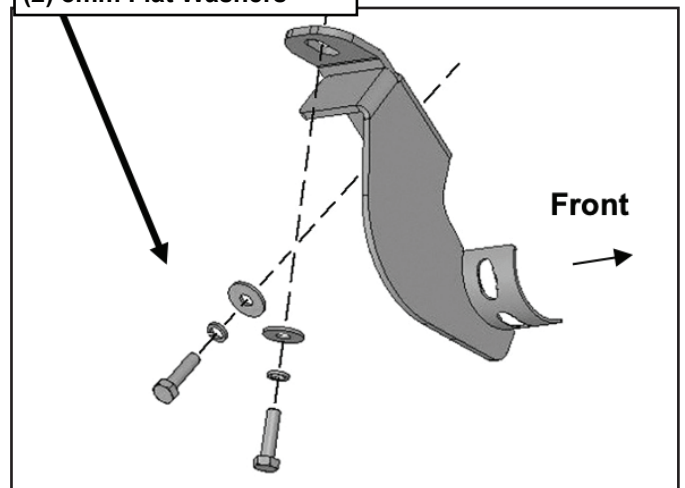


(Fig 3) Attach driver/left Front Mounting Bracket to the front location



# TYGER<sup>®</sup>

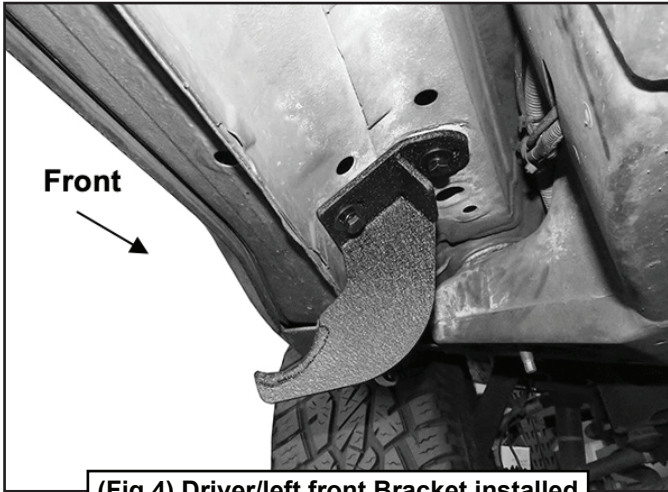

(Fig 4) Driver/left front Bracket installed

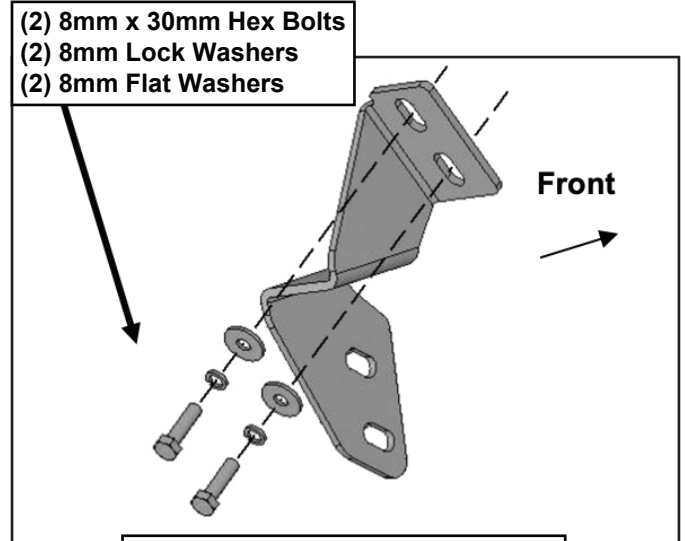


(Fig 6) Attach driver/left #2 Bracket to #2 mounting location

## STEP 4


Next, move to the next (#2) mounting location (Fig 5). Select the Driver/Left #2 Mounting Bracket (Figs 1 & 6). Repeat **STEP 3** to attach the #2 Mounting Bracket (Figs 6 & 7).

Driver/left Side Installation Pictured

Remove plastic plugs or factory hex bolts (if equipped)

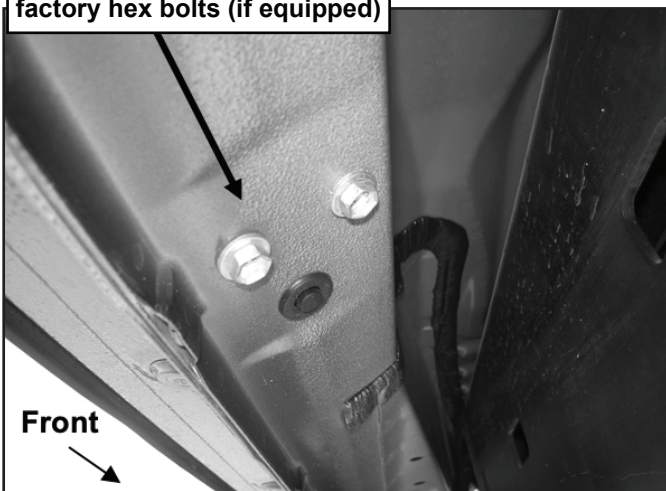

(Fig 5) Driver/left #2 mounting location

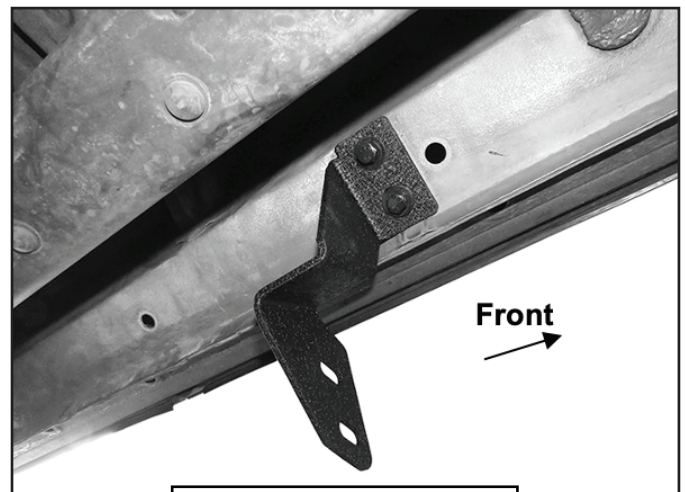

(Fig 7) Driver/left #2 Mounting Bracket installed

## STEP 5

Continue to the 3rd mounting location. Repeat **STEPS 3 & 4** to attach the Driver/Left #3 Mounting Bracket (Figs 8 & 9).







# TYGER<sup>®</sup>

Driver/left Side Installation Pictured

(2) 8mm x 30mm Hex Bolts  
(2) 8mm Lock Washers  
(2) 8mm Flat Washers

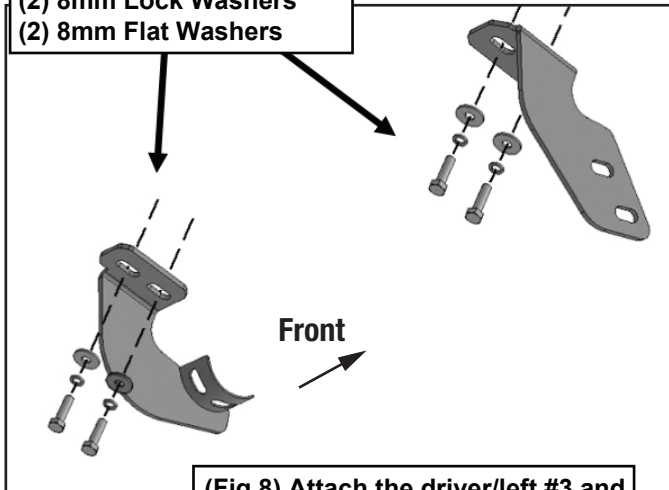

(Fig 8) Attach the driver/left #3 and Rear Mounting Brackets

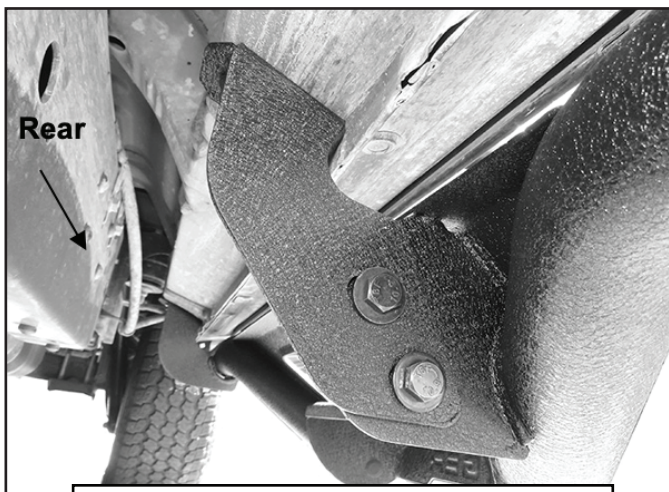

(Fig 9) Attach the driver/left Tyger Lander to the #3 and rear Mounting Brackets


## STEP 6

Continue to the last mounting location at the rear of the cab. **Repeat the previous STEPS** to attach the Driver/Left Rear Mounting Bracket (Figs 8 & 9).

## STEP 7

Once all (4) Mounting Brackets have been fully installed, carefully unwrap the Driver/Left Tyger Lander side step. Place the Tyger Lander on top of the Front and Rear Mounting Brackets. Attach the Tyger Lander to the front Mounting Bracket with (2) 8mm Combo Bolts (Fig 10). DO NOT tighten hardware.

Driver/left Side Installation Pictured

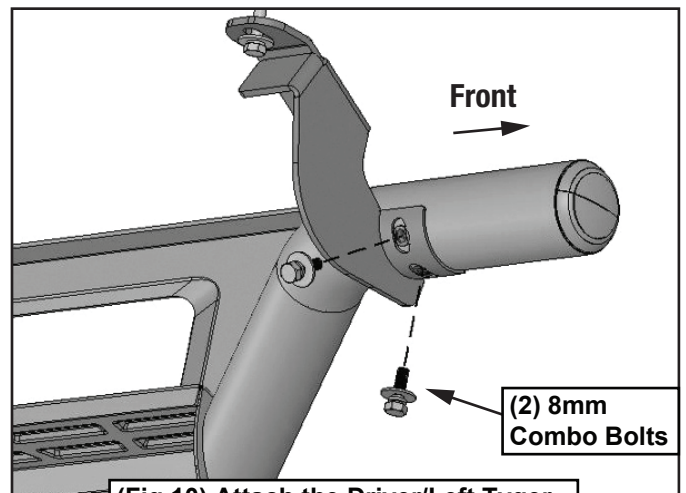

(Fig 10) Attach the Driver/Left Tyger Lander to the front Mounting Bracket

## STEP 8


Attach the Tyger Lander to the back of the center #2 and #3 Mounting Brackets with (4) 10mm Hex Bolts, (8) 10mm Flat Washers and (4) 10mm Nylon Lock Nuts (Figs 9-12). Attach the Tyger Lander to the rear Bracket with (2) 8mm Combo Bolts (Fig 13). DO NOT tighten hardware.




# TYGER®

Driver/left Side Installation Pictured

(2) 10mm Hex Bolts  
(4) 10mm Flat Washers  
(2) 10mm Nylon Lock Nuts

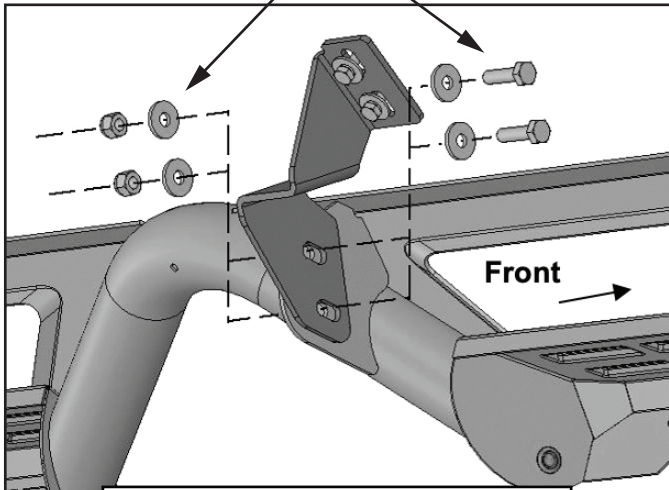


(Fig 11) Attach the Driver/Left Tyger Lander to the #2 Mounting Bracket

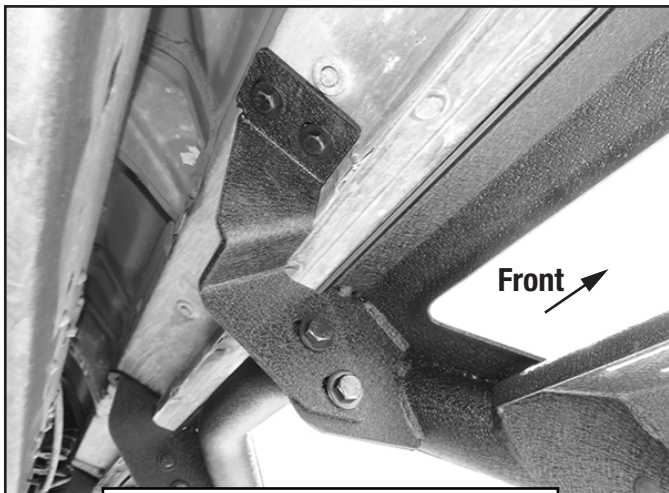

(Fig 12) Attach the Driver/Left Tyger Lander to the #2 Mounting Bracket

(2) 8mm  
Combo Bolts

(2) 10mm Hex Bolts  
(4) 10mm Flat Washers  
(2) 10mm Nylon Lock Nuts

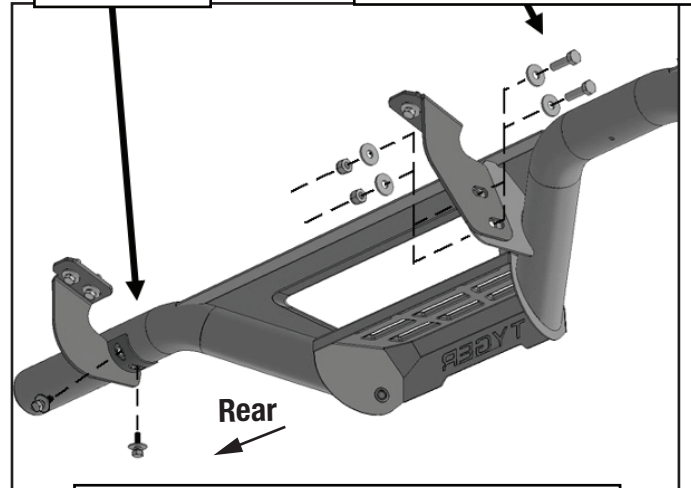

(Fig 13) Attach the Driver/Left Tyger Lander to the #3 and rear Mounting Brackets

## STEP 9

Level and adjust the Tyger Lander as desired and tighten all hardware.

## STEP 10

Repeat **STEPS 2-9** to attach the Passenger/Right Tyger Lander side step.

## STEP 11

Do periodic inspections to the installation to make sure that all hardware is secure and tight.