



RISER®

TG-RS5C50017
TG-RS5C50018

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUE

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/left Side Step
- x1 Passenger/right Side Step
- x6 Sidebar Brackets (use for left or right)
- x12 8-1.25mm Clip-On Nuts
- x6 Plastic Covers
- x12 Plastic Clips
- x12 8-1.25mm x 25mm Hex Bolts
- x12 8mm x 24mm x 2mm Flat Washers
- x12 8mm Lock Washers
- x12 8-1.25mm x 25mm Combo Bolts

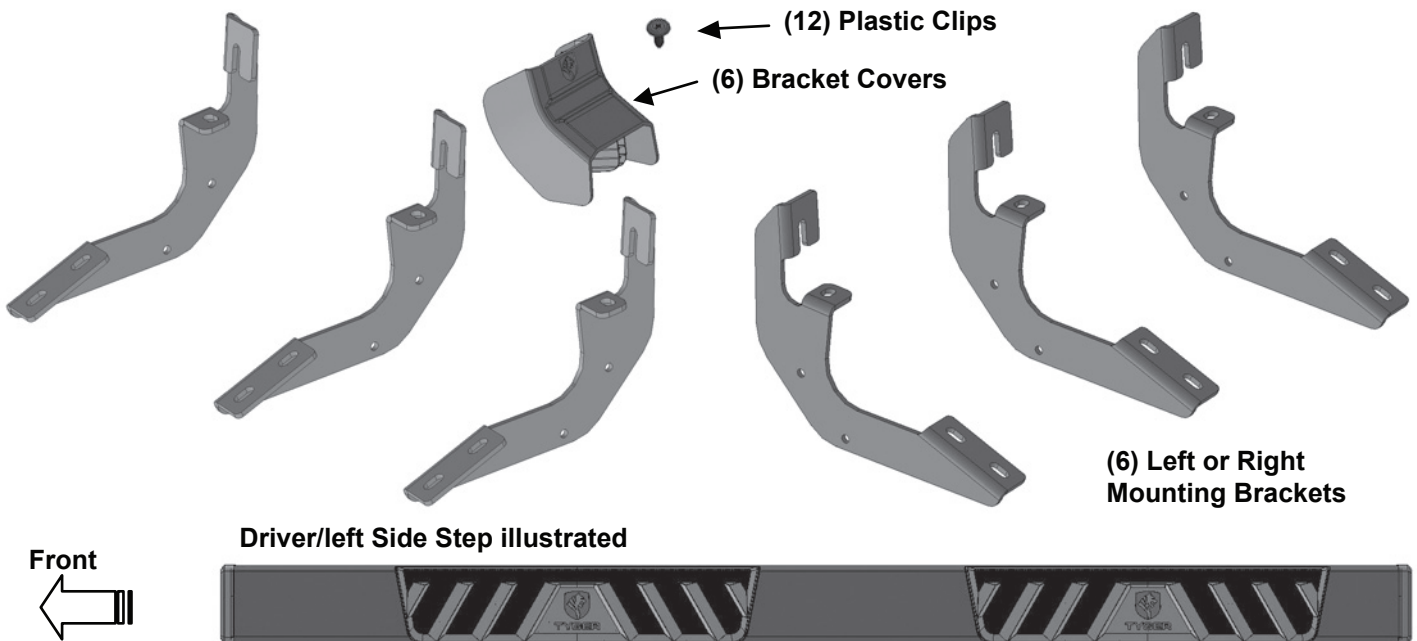



TYGER[®]


NOTE

Assistance is recommended.

STEP 1

Start the installation under the driver/left side of the vehicle. Locate the 4 factory running board mounting locations along the bottom and inner side of the body, (Fig 1). Mounting Brackets will attach to the 1st, 2nd and 4th mounting locations.


NOTE: Hold a Bracket up in place to help determine the mounting holes to use along the bottom and inner side of the body.

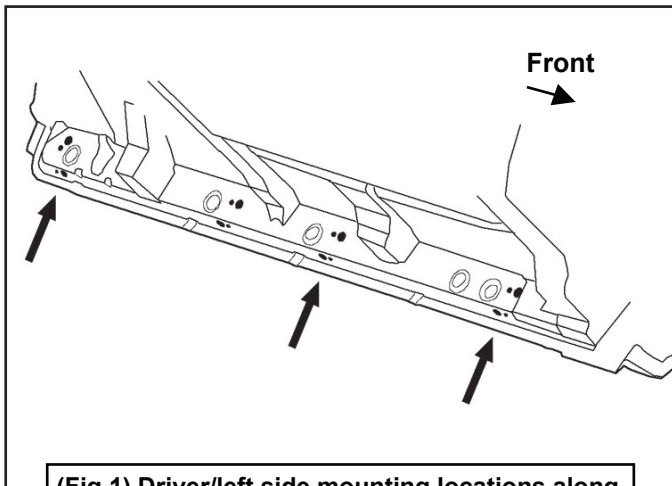


(Fig 1) Driver/left side mounting locations along bottom and back of body panel illustrated

STEP 2

Remove rubber plugs as necessary from the (2) front mounting holes, (Fig 2). Select (1) 8mm Clip Nut. Slide the Clip Nut into the large hole and over the smaller hole next to it in the side of the body panel. Line up threaded nut on the Clip Nut with smaller hole in body panel, (Fig 3). Repeat to install a 2nd Clip Nut in the remaining front mounting hole in the bottom of the body panel

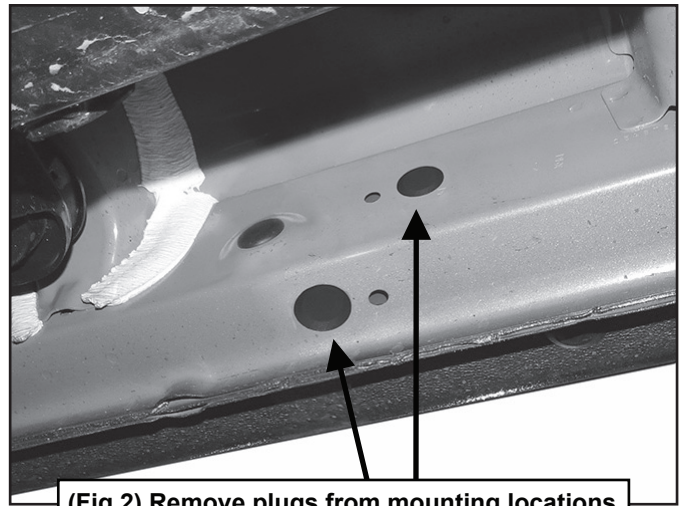

(Fig 2) Remove plugs from mounting locations as necessary

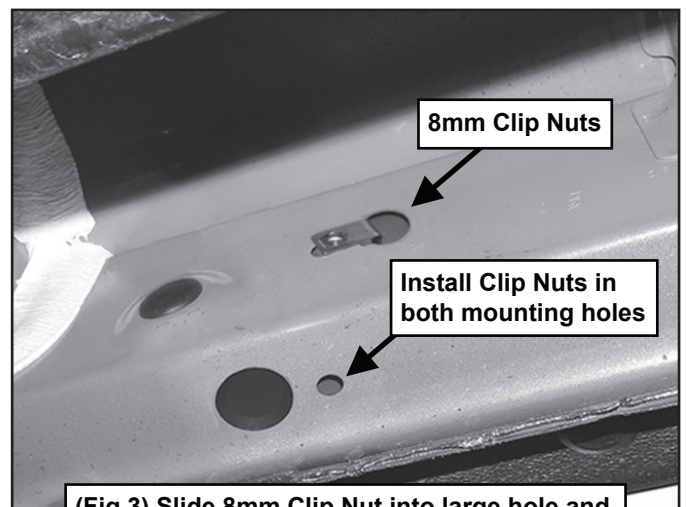



(Fig 3) Slide 8mm Clip Nut into large hole and over small hole



STEP 3



Select (1) Mounting Bracket.

NOTE: All (6) Brackets are universal and will fit left or right side. Attach the Bracket to the (2) Clip Nuts with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Fig 4). Snug but do not fully tighten the hardware.

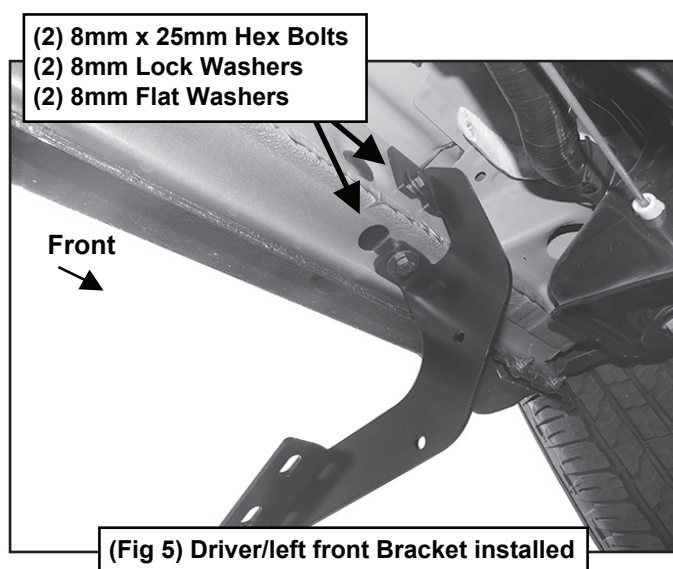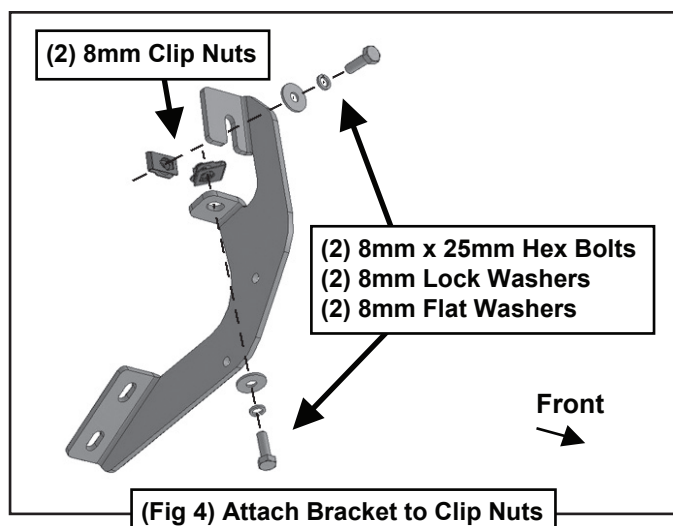

STEP 4

Repeat Steps 1-3 for Center and rear Mounting Bracket installation, (Figs 4-7).

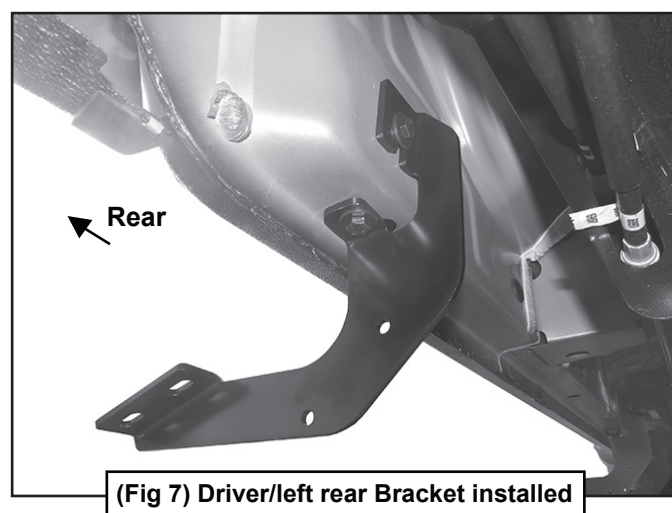
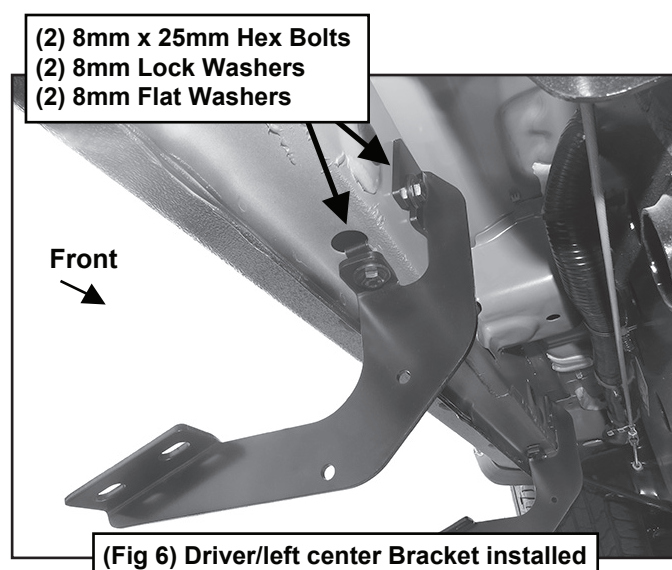




TYGER[®]

STEP 5

Select (1) Plastic Bracket Cover and (2) Retaining Clips, (Fig 8). Slide the Cover over the front Bracket. Line up the mounting holes in the Cover with the holes in the Bracket. Insert (1) Clip into each hole and push center pin to expand Clip, (Figs 8-9). Repeat this Step for all Cover installations. Notes pls install all plastic covers onto the brackets before installing the side bar.

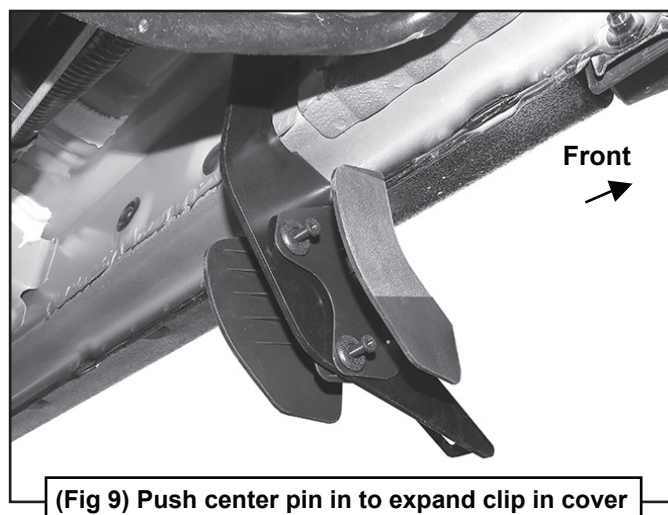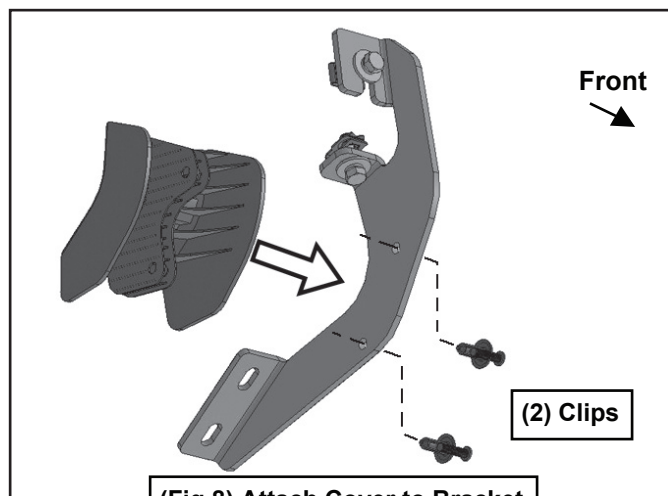






TYGER[®]

STEP 6

Select the driver/left Side Step. Carefully position the Side Step onto the (3) Brackets.

IMPORTANT: Do not slide, (front to back or rotate), the Side Step on the Brackets or damage to the finish may result. Attach the Side Step to the Brackets with (6) 8mm x 25mm Combo Hex Bolt assemblies, (Figs 10-12). Do not tighten hardware.

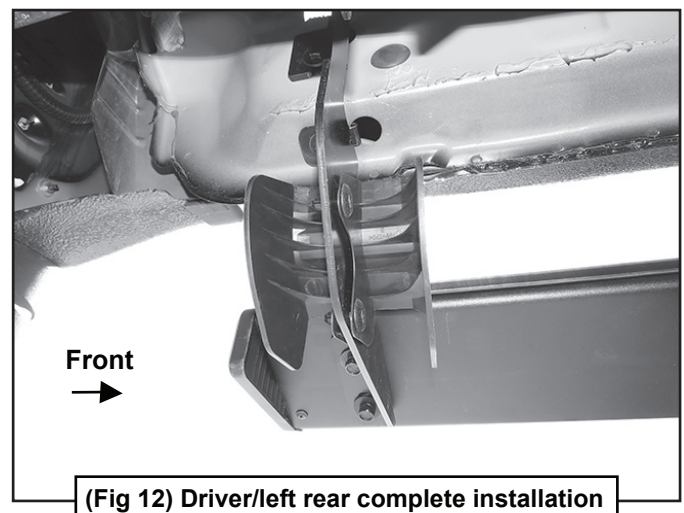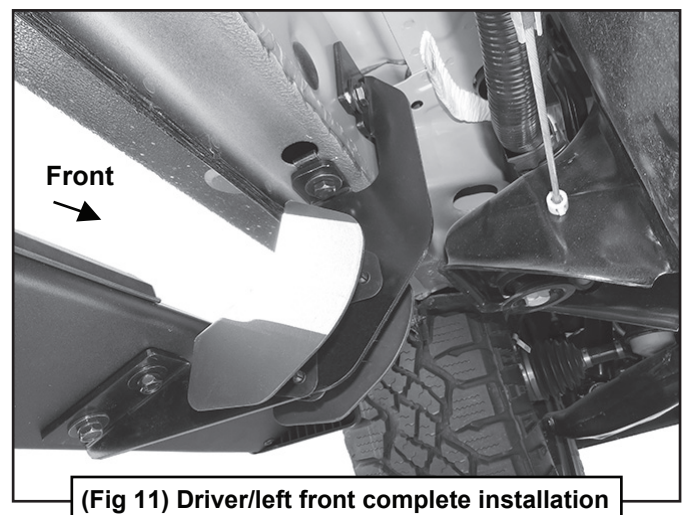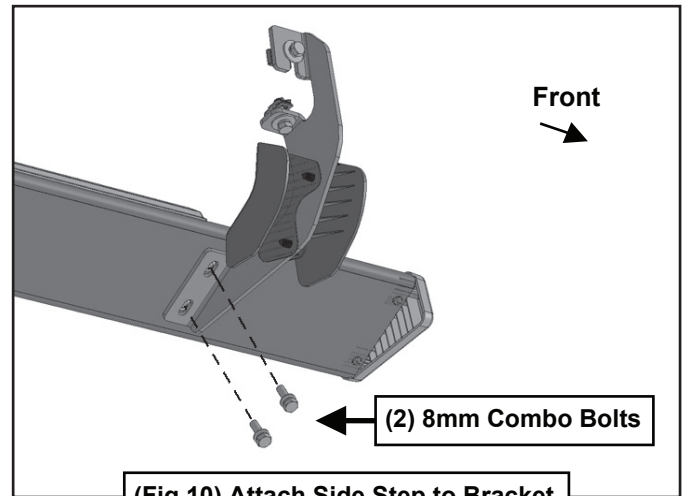



TYGER®

STEP 7

Level and adjust the Side Step and tighten all hardware.

STEP 8

Repeat Steps 1-7 to install the passenger/right Side Step.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

