

RISER®


TG-RS5C50248 / TG-RS5C50247


BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLAESE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

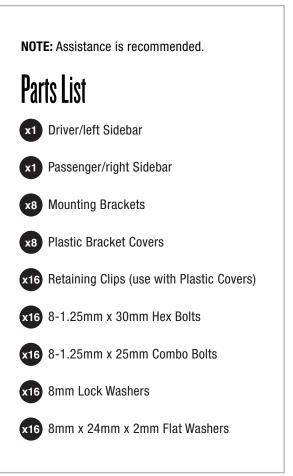


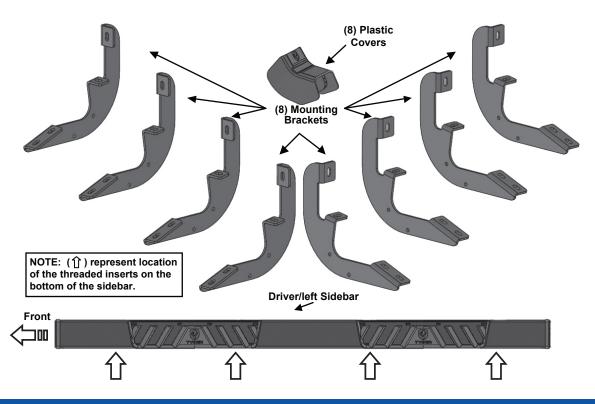




STEP |


Start the installation under the driver side of the vehicle. Locate the 6 plugs along the bottom edge of the body. Mounting Brackets will bolt to the 1st, 3rd, 4th and 6th threaded mounting holes, (Figs 1-6).

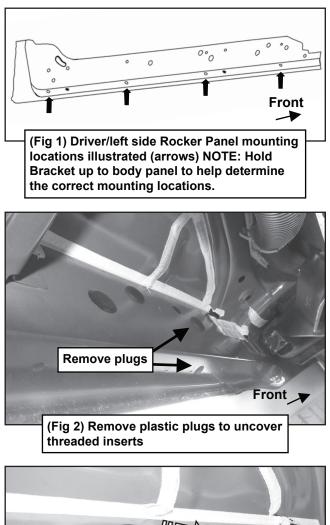


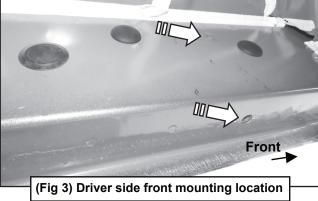


Remove the plastic plugs from each mounting location. Directly above each threaded insert is a top mounting location on the side of the body panel. Hold a Bracket up in place to help determine the correct mounting holes to use along the body.

NOTE: Thread an 8mm Hex Bolt into the threaded inserts to clear paint as required.

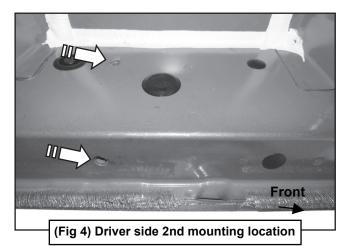

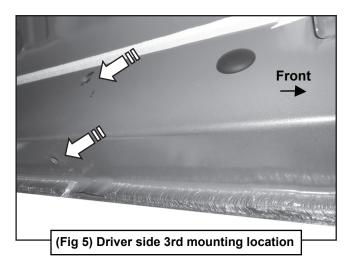

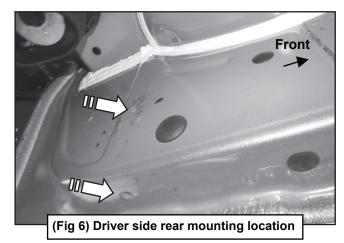





STEP 2

Select (1) Mounting Bracket. Starting at the front of the driver/left side, bolt the Mounting Bracket to the factory threaded holes with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Figs 7-8). Do not tighten hardware at this time.



Repeat Steps 1-2 to install (3) Mounting Brackets on the remaining driver/left side mounting locations along the body panel.

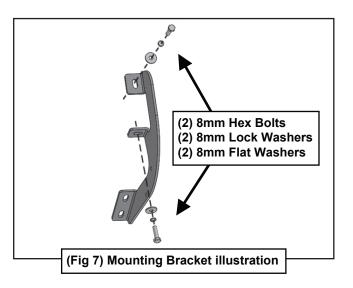


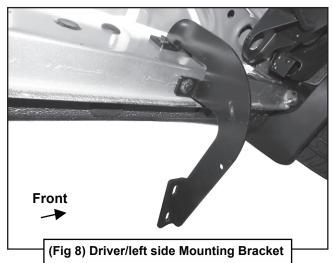






STEP 4


Select (1) Plastic Bracket Cover. Slide Plastic Cover over Bracket, (Figs 9-10). Line up the (2) mounting holes in the Cover with the side holes in the Bracket. Insert (1) Plastic Clip into each hole and push center pin to expand Clip. Repeat this Step for all Brackets, (Figs 11-13). Notes please install plastic covers onto the bracket before installing the side bar.

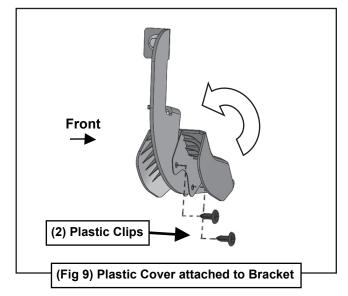

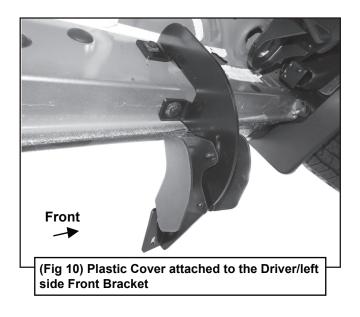

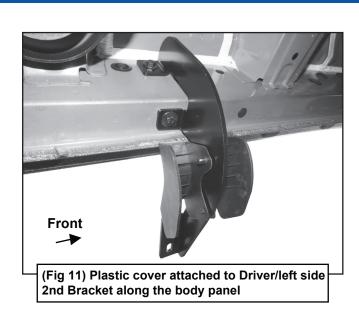

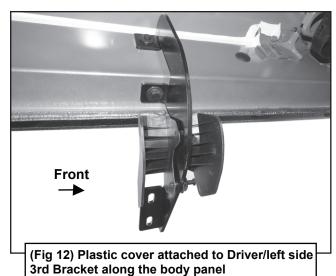

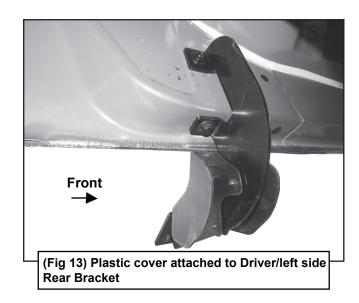



STEP 5


Select the Driver/left Sidebar. Use the illustration above to help determine the correct Sidebar.


NOTE: The front stepping pad is farther away from the front end of the Sidebar. Place the Sidebar on top of the Brackets.

IMPORTANT: Do not slide, (front to back), the Sidebar on the Brackets or damage to the finish may result.




Attach the Sidebar to the Brackets with (8) 8mm Combo Bolts, (Figs 14-16).

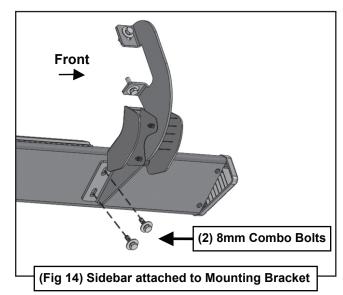

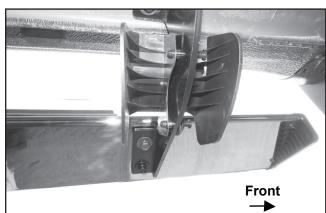

(Fig 15) Sidebar attached to the Driver/left side Front Bracket pictured

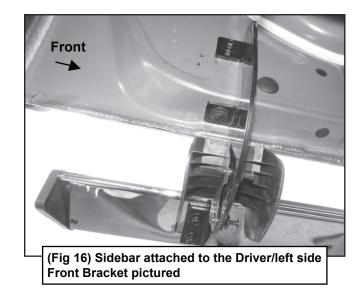





Level and adjust the Sidebar and fully tighten all hardware.

STEP 8

Repeat Steps 1-7 to install the Passenger/right Sidebar.



Do periodic inspections to the installation to make sure that all hardware is secure and tight.

