



TYGER®

RISER®

TG-RS5D50207
TG-RS5D50208

NOTE

Assistance is recommended.

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUE

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/left Sidebar
- x1 Passenger/right Sidebar
- x6 Universal Brackets
- x6 Plastic Bracket Covers
- x12 Plastic Clips for Covers
- x12 8-1.25mm x 25mm Combo Bolts
- x18 8mm x 24mm x 2mm Flat Washers
- x18 8-1.25mm Nylon Lock Nuts

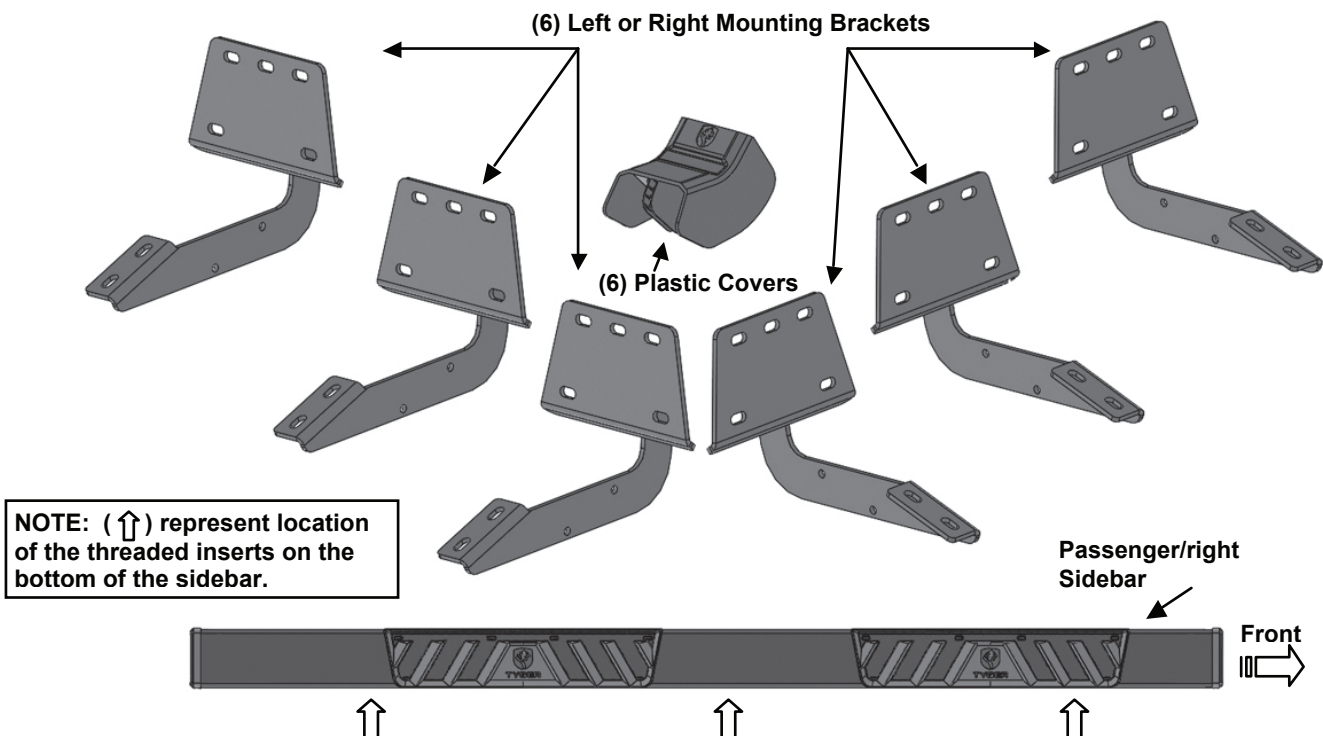



TYGER[®]

STEP 1


Start the installation under the passenger side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel, (Fig 1).

NOTE: Use a wire brush or die to remove paint buildup on the threaded studs.


STEP 2

Select (1) Mounting Bracket.


NOTE: All (6) Brackets are universal and will fit left or right side. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts, (Figs 2-3). Leave brackets loose at this time.

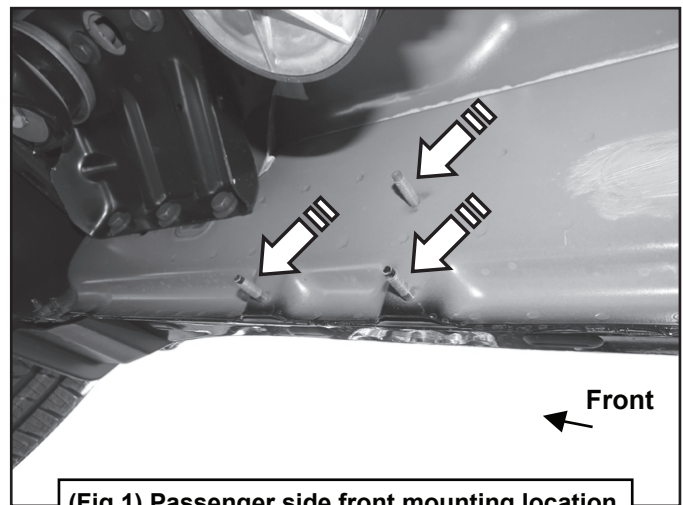

(Fig 1) Passenger side front mounting location

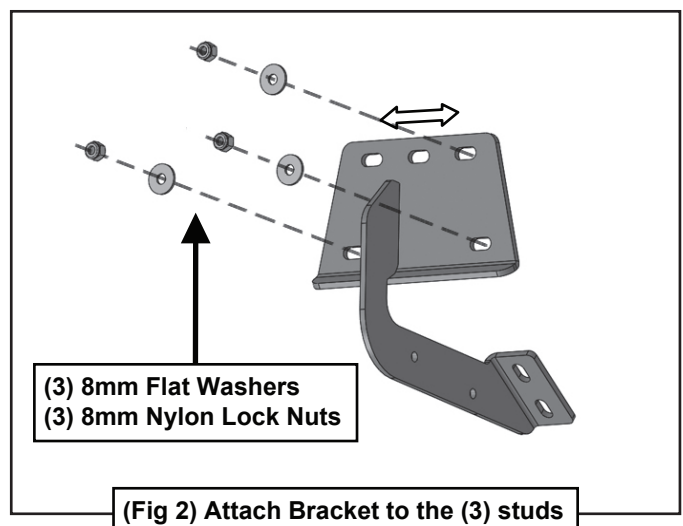

(Fig 2) Attach Bracket to the (3) studs

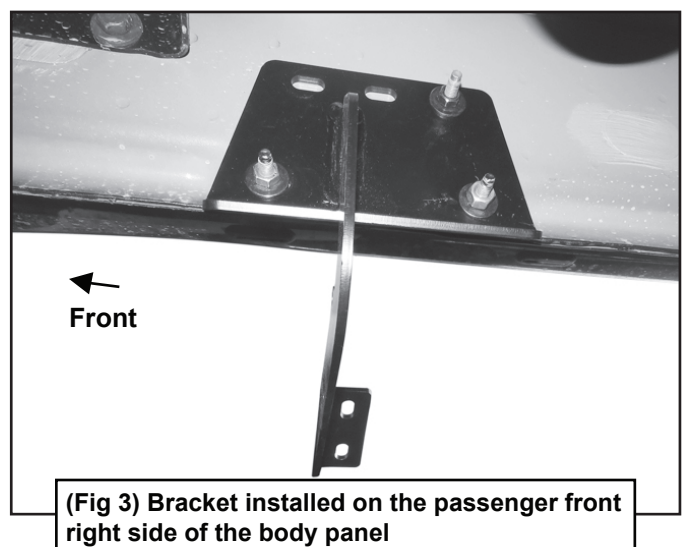


(Fig 3) Bracket installed on the passenger front right side of the body panel




TYGER®

STEP 3

Select (1) Plastic Bracket Cover and (2) Retaining Clips. Slide the Cover over the Front Bracket. Line up the (2) mounting holes in the Cover with the holes in the Bracket. Insert the Clip into the holes and push the center pin to expand Clip, (Figs 4-5). Repeat Step for all Cover installations.

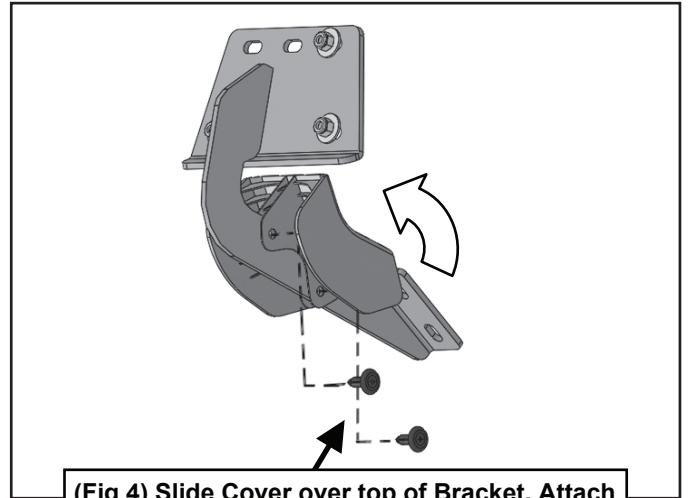

(Fig 4) Slide Cover over top of Bracket. Attach Cover to Bracket with (2) Retaining Clips

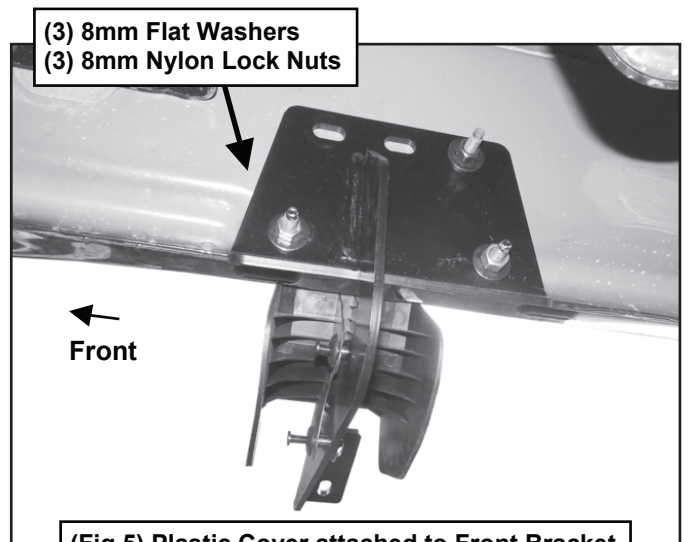


(Fig 5) Plastic Cover attached to Front Bracket




TYGER®

STEP 4

Repeat Steps 1-3 to install the Universal Brackets and Plastic Covers in the center and rear mounting locations along the body panel, (Figs 6-9).

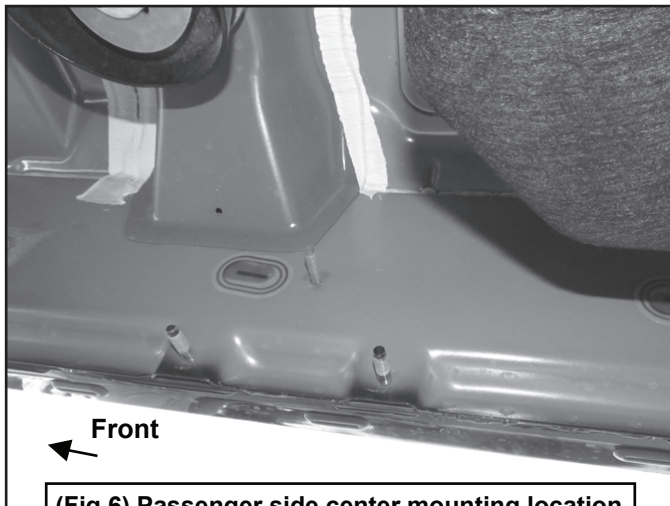

(Fig 6) Passenger side center mounting location

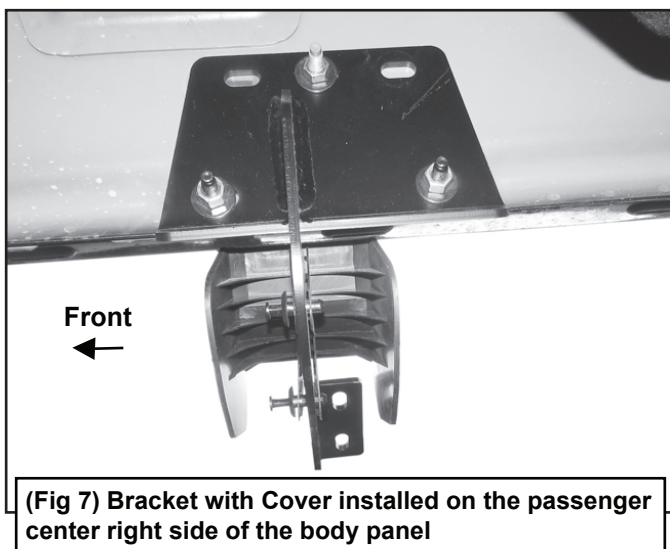


(Fig 7) Bracket with Cover installed on the passenger center right side of the body panel


STEP 5

Carefully unwrap and select the Passenger/right Sidebar. Use the illustration above to help identify the correct Sidebar. Place the Sidebar on top of the Brackets.

IMPORTANT: Do not slide, (front to back), the Sidebar on the Brackets or damage to the finish may result.

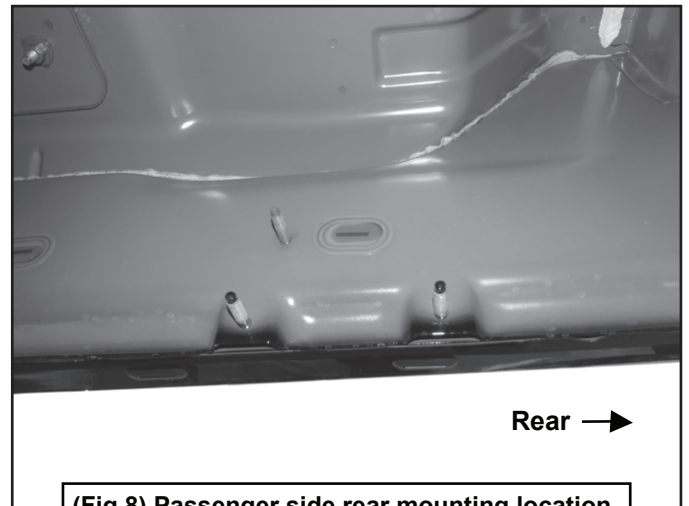

(Fig 8) Passenger side rear mounting location

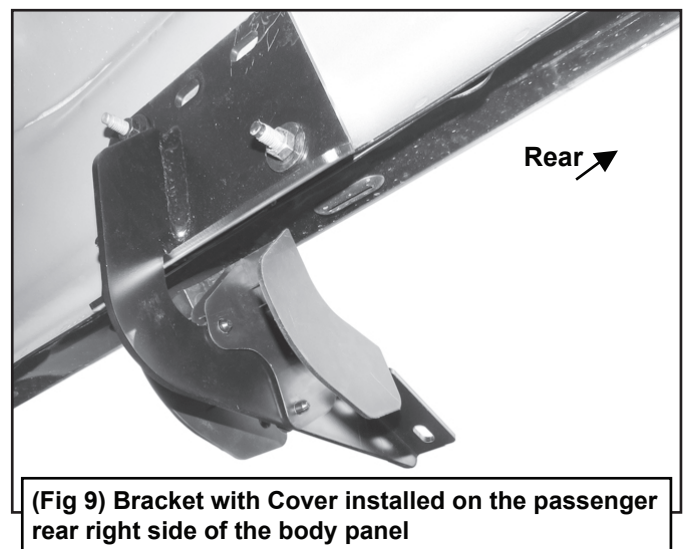


(Fig 9) Bracket with Cover installed on the passenger rear right side of the body panel




TYGER[®]

STEP 6

Attach the Sidebar to the Brackets with (6) 8mm Combo Hex Bolts, (Figs 10-13). Do not tighten hardware at this time.

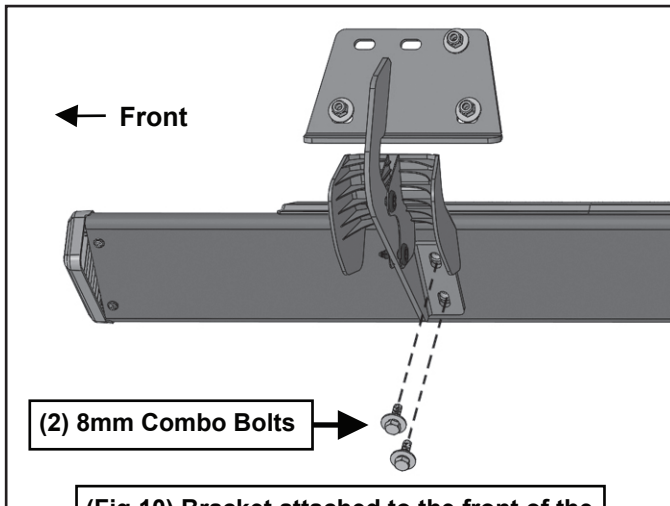


(Fig 10) Bracket attached to the front of the Passenger/right Sidebar

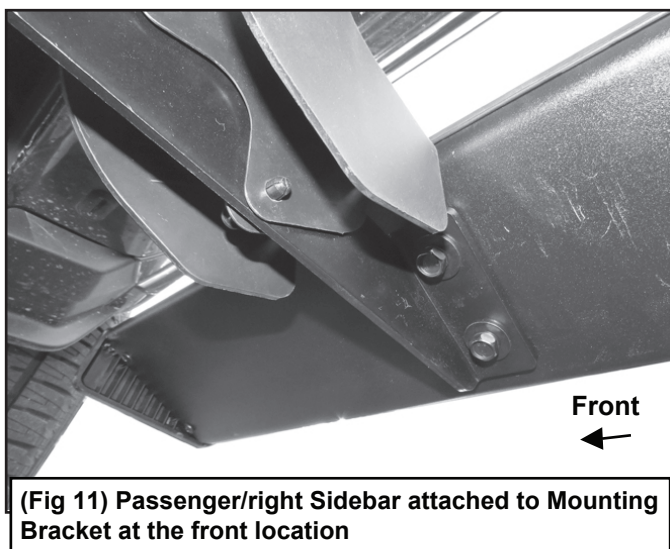


(Fig 11) Passenger/right Sidebar attached to Mounting Bracket at the front location

STEP 7

Level and adjust the Sidebar as necessary and fully tighten all hardware.

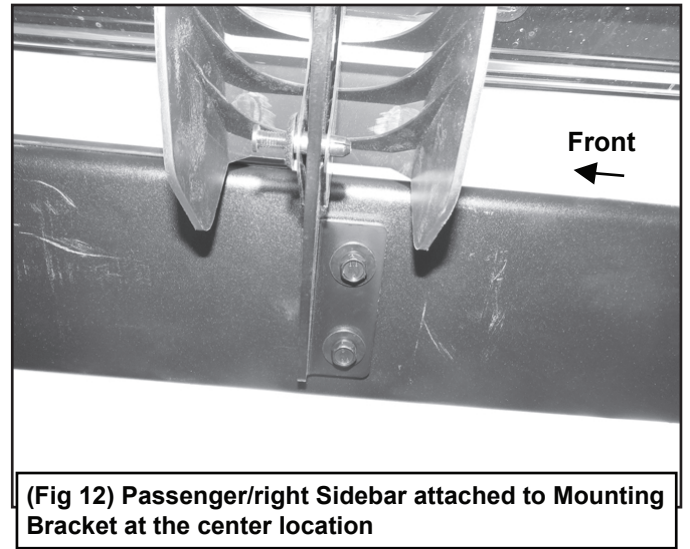

(Fig 12) Passenger/right Sidebar attached to Mounting Bracket at the center location

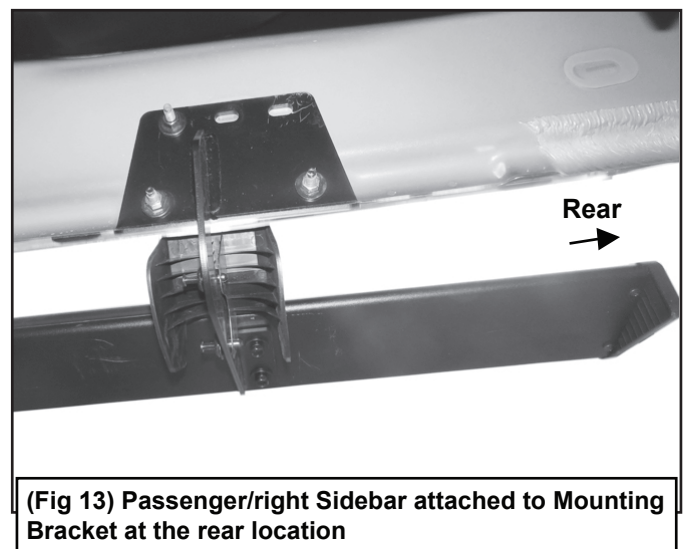

(Fig 13) Passenger/right Sidebar attached to Mounting Bracket at the rear location



TYGER[®]

STEP 8

Repeat Steps 1-7 for Driver/left Sidebar installation.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

