

RISER

TG-RS5T50157 TG-RS5T50158

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLAESE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUE

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


Parts List


- x1 Driver/left Sidebar
- x1 Passenger/right Sidebar
- Driver/left Front Bracket
- Passenger/right side Front Bracket
- x2 Driver/left side Center & Rear Brackets
- x2 Passenger/right side Center & Rear Brackets
- x6 Plastic Bracket Covers
- x12 Plastic Retainer Clips
- x12 8-1.25mm x 30mm Hex Bolts
- 8mm x 24mm x 2mm Flat Washers
- 8mm Lock Washers
- 8-1.25mm x 25mm Combo Hex Bolts

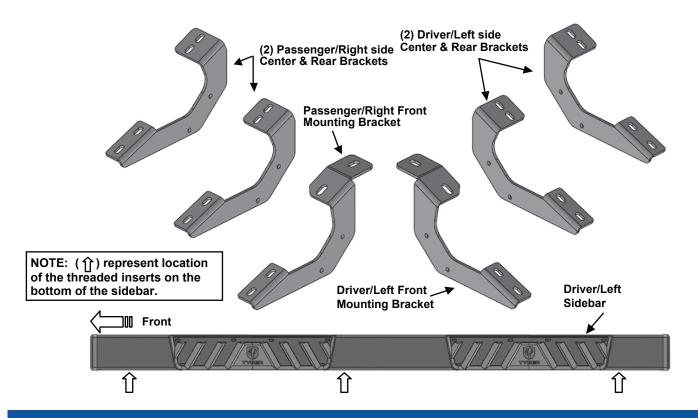



Customer Support: www.TygerAuto.com/Contact

Starting on the Driver/left side front of the vehicle, remove the plastic plugs or bolts covering the threaded holes in the body panel, (Figs 1-2). Select the Driver/left side Front Mounting Bracket, (Fig 3). Attach the Bracket to the vehicle using the included (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Fig 4). Do not tighten hardware at this time.

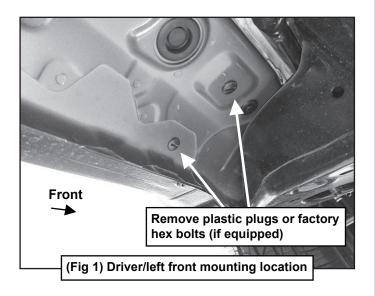


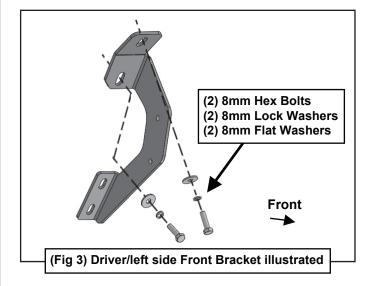


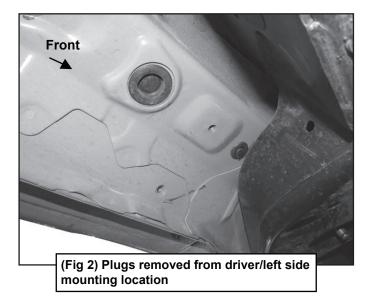

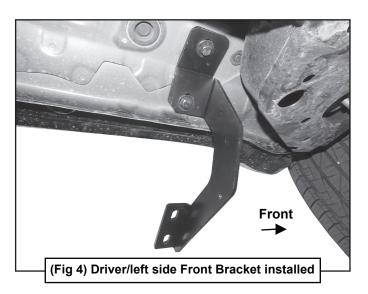


Select (1) Plastic Bracket Cover and (2) Retaining Clips. Slide the Cover over the Front Bracket. Line up the (2) mounting holes in the Cover with the holes in the Bracket. Insert the Clip into the holes and push the center pin to expand Clip, (Figs 5-6). Repeat Step for all Cover installations. Notes please install all the plastic covers onto the brackets before installing the side bar.

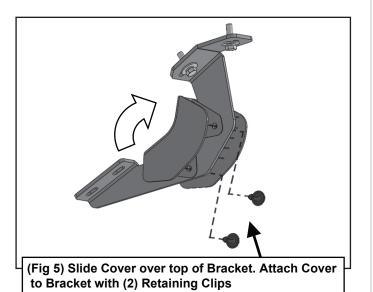


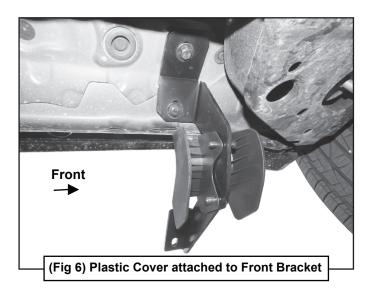


STEP 3


Move along the body panel to the center mounting location, (Fig 7). Repeat Steps 1-2 for Driver/left side Center Bracket installation, (Fig 8).

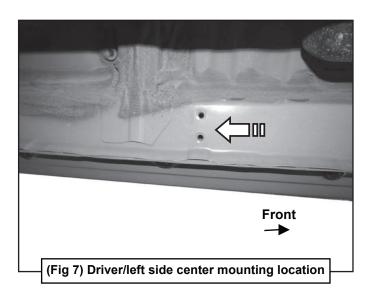

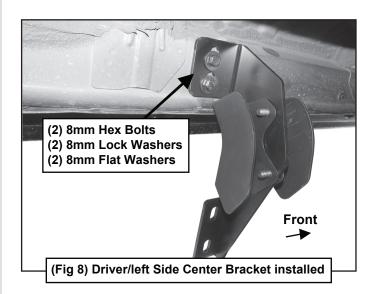

Continue to the last, rear, mounting location, (Fig 9). Repeat Step 2 for Driver/left side Rear Bracket installation, (Fig 10).

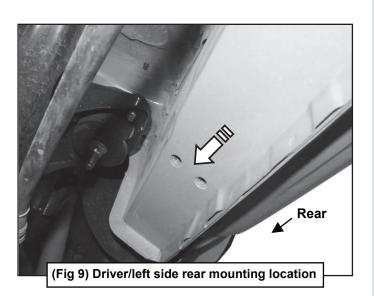

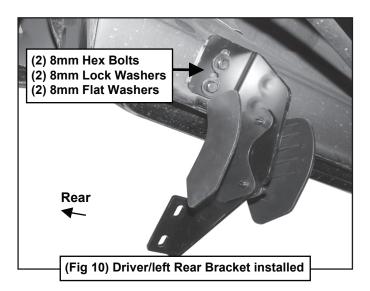


STEP 5


Once all (3) Brackets have been fully installed, carefully unwrap the Driver/left Sidebar.


NOTE: The front stepping pad is farther away from the front end of the Sidebar. Place the Sidebar on top of the (3) Brackets.


IMPORTANT: Do not slide the Sidebar on the Brackets, (front to back), or the finish on the Sidebar may result in damage.

Attach the Sidebar to the Brackets with (6) 8mm Combo Bolts, (Figs 11-14). Do not tighten hardware at this time.

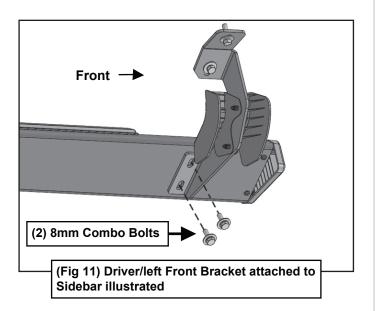

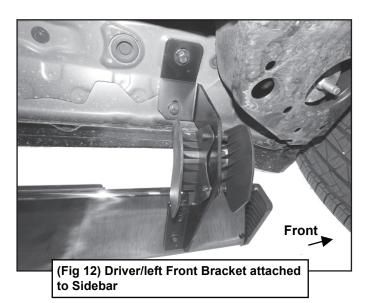

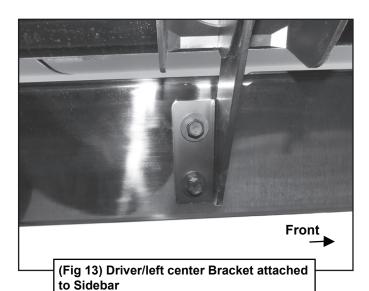

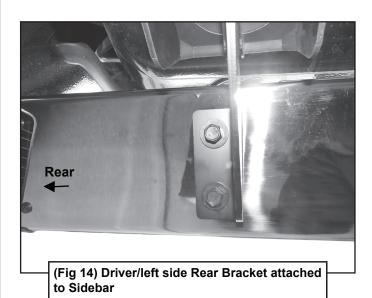





Properly level and adjust the Sidebar and fully tighten all hardware.

STEP 8

Repeat Steps 2-7 for Passenger/right Sidebar Installation.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

