



TYGER®

RISER®

TG-RS6D60208

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES


Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/Left 6inch Tyger Sidebar **D**
- x1 Passenger/Right 6inch Tyger Sidebar **P**
- x2 Front Upper Mounting Brackets **B**
- x2 Front Lower Mounting Brackets **A**
- x2 Center Mounting Brackets **C**
- x2 Rear Mounting Brackets **E**
- x4 Center/Rear Support Brackets **D**
- x12 8mm x 25mm Combo Bolts
- x4 8mm x 25mm Hex Bolts
- x22 8mm x 24mm OD x 2mm Flat Washers
- x8 8mm x 16mm OD x 1.6mm Flat Washers
- x26 8mm Nylon Lock Nuts

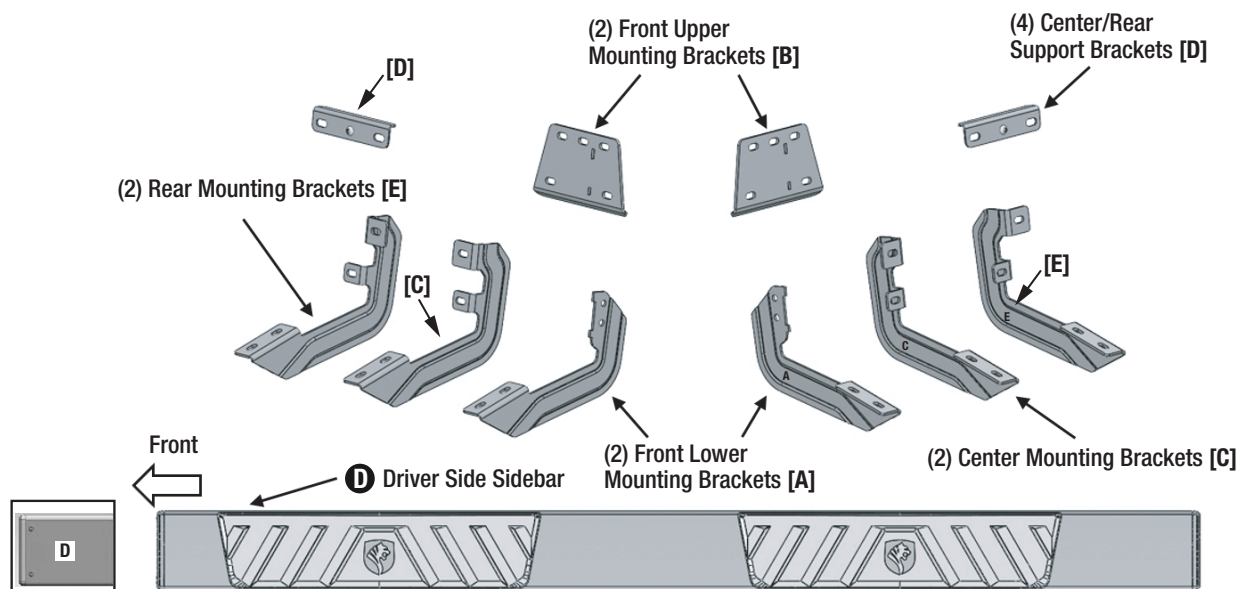

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger Riser

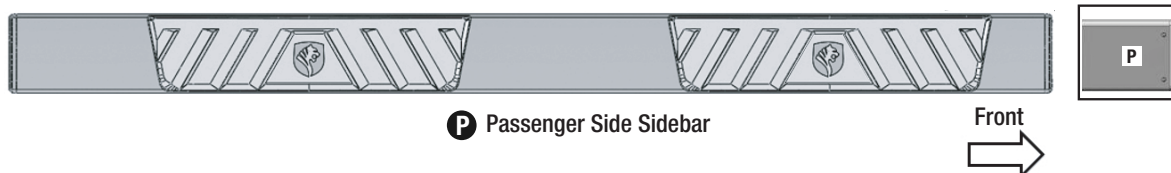



TYGER®


PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. USE WIRE BRUSH TO CLEAN MOUNTING STUDS OF PAINT AND DEBRIS.

STEP 1

Start the installation under the Driver/Left side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel (Fig 1).


Driver/Left Side Installation Pictured

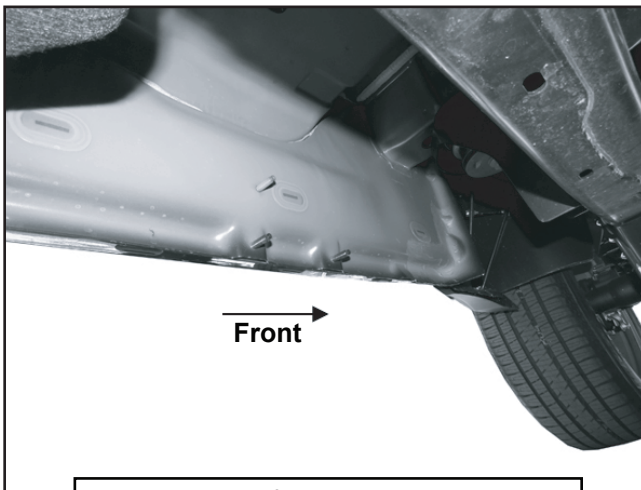

(Fig 1) Driver/Left Front mounting location


STEP 2

Select (1) Front Upper Mounting Bracket [B]. Attach the Mounting Bracket [B] to the (3) factory studs with (3) 8mm x 24mm Flat Washers and (3) 8mm Nylon Lock Nuts (Fig 2). DO NOT tighten hardware.

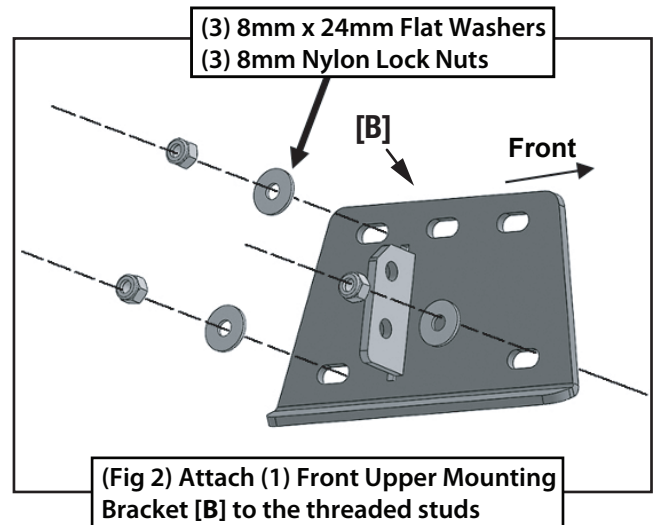

STEP 3

Select (1) Front Lower Mounting Bracket [A]. Attach the Lower Bracket [A] to the rear facing side of vertical tab on the Upper Bracket [B] with (2) 8mm Hex Bolts, (4) 8mm x 16mm Flat Washers and (2) 8mm Nylon Lock Nuts (Fig 3). DO NOT tighten hardware.

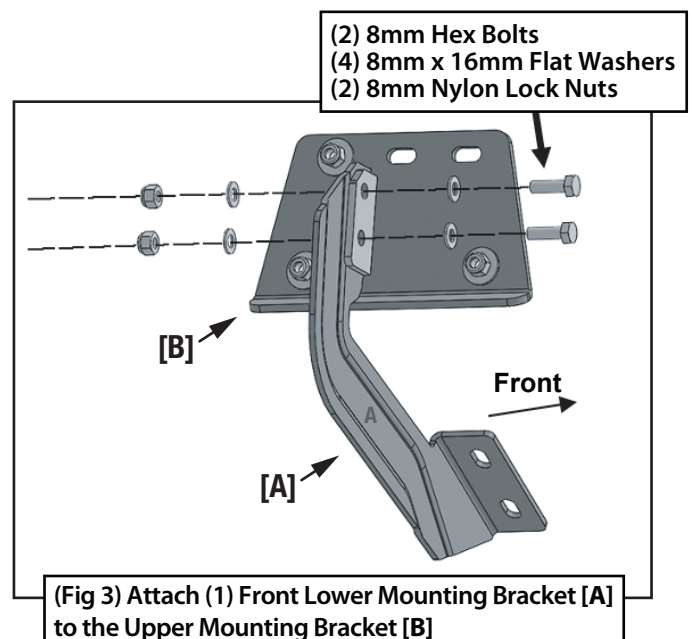






STEP 4

Move to the center location (Fig 4). Select (1) Support Bracket **[D]**. Attach the Support Bracket **[D]** to the (2) lower threaded studs with (2) 8mm x 24mm Flat Washers and (2) 8mm Nylon Lock Nuts (Fig 5). Select (1) Center Mounting Bracket **[C]** and attach to the Support Bracket **[D]** and upper threaded stud with (2) 8mm x 24mm Flat Washers and (2) 8mm Nylon Lock Nuts (Fig 6). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

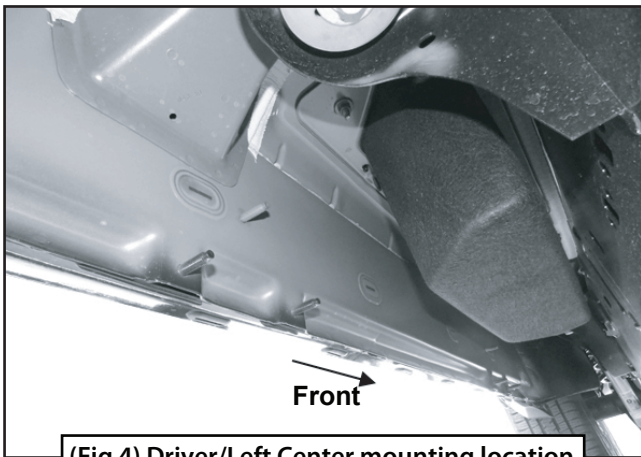


(Fig 4) Driver/Left Center mounting location

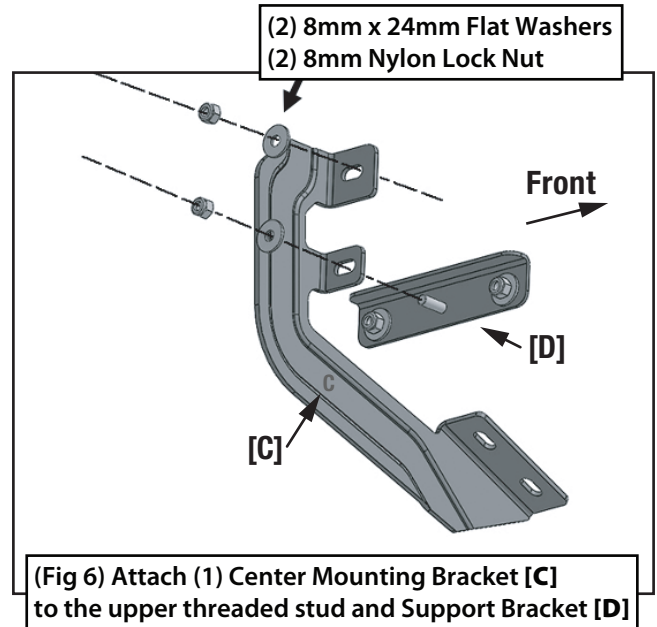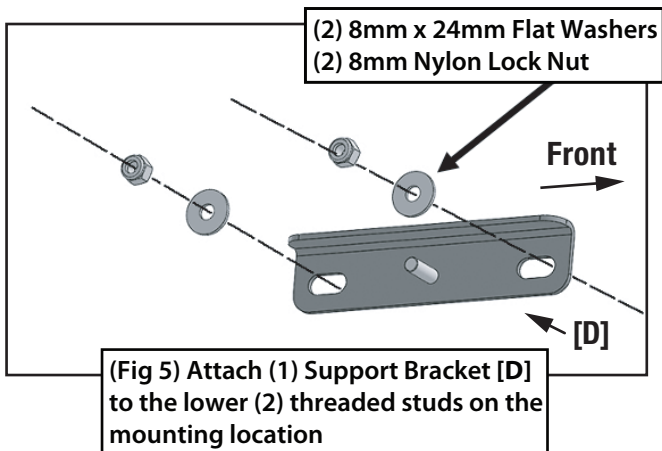

STEP 5

Repeat **STEP 4** to attach (1) Rear Mounting Bracket **[E]** and (1) Support Bracket **[D]** to the rear mounting location (Fig 7). DO NOT tighten hardware.

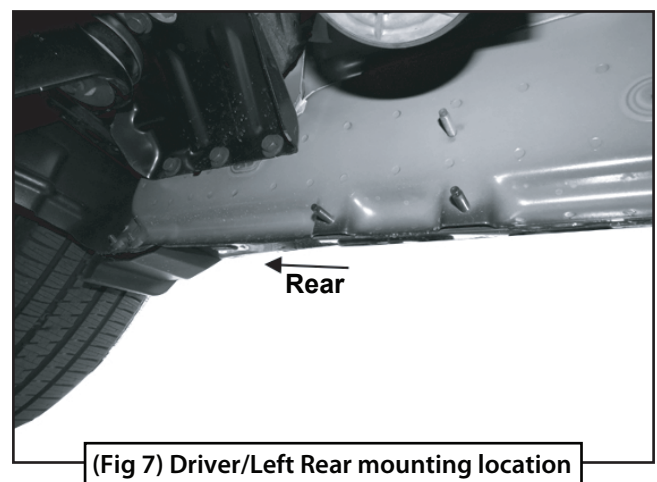




TYGER®

STEP 6

Select the Driver/Left 6inch Tyger Sidebar. Attach the Running Board to the Mounting Brackets with (6) 8mm Combo Bolts (Fig 8). DO NOT tighten hardware.

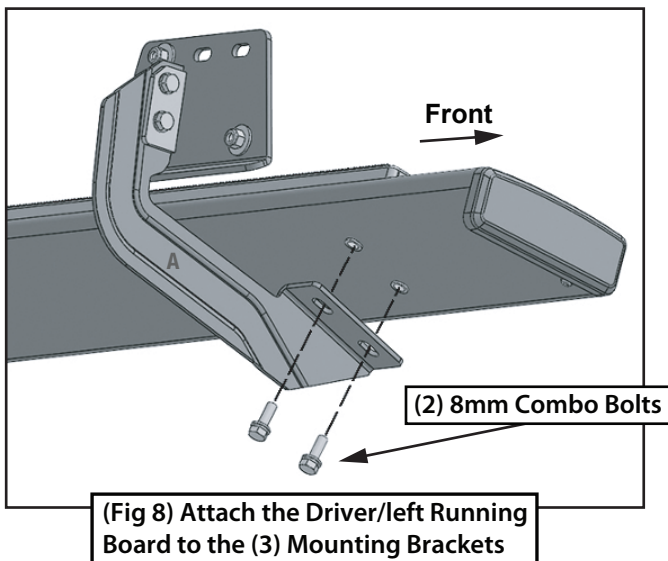

STEP 7

Level and adjust the Running Board as necessary and fully tighten all hardware.

STEP 8

Repeat **STEPS 1-6** to attach the Passenger/Right 6inch Tyger Sidebar to the vehicle.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.