



TYGER®

RISER®

TG-RS6F60118

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT


TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

NOTE: Assistance is recommended.


- x1 Driver/Left 6inch TYGER Riser **D**
- x1 Passenger/Right 6inch TYGER Riser **P**
- x2 Front Mounting Brackets **[A]**
- x4 Rear Mounting Brackets **[B]**
- x6 Support Brackets **[D]**
- x12 8mm x 25mm Combo Bolts
- x24 8mm x 24mm OD x 2mm Flat Washers
- x24 8mm Nylon Lock Nuts
- x18 8mm Plastic Retainers

Parts List

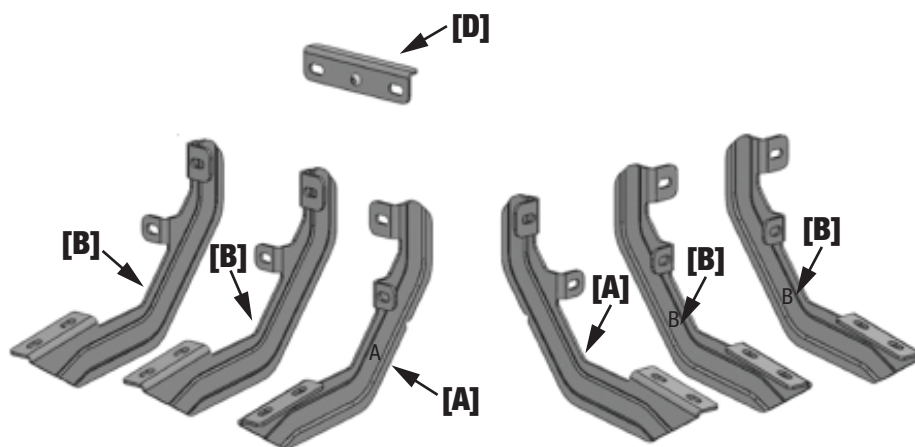

Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger Riser



P Passenger Side Riser

Front
→



Front
←

D Driver Side Riser




TYGER®

STEP 1

Start the installation under the Driver/Left side of the vehicle. Locate the front factory running board mounting location along the inner side of the body (Fig 1). Use a wire brush or thread chaser die to remove excess paint or undercoating from all studs.

Driver/Left Side Installation Pictured

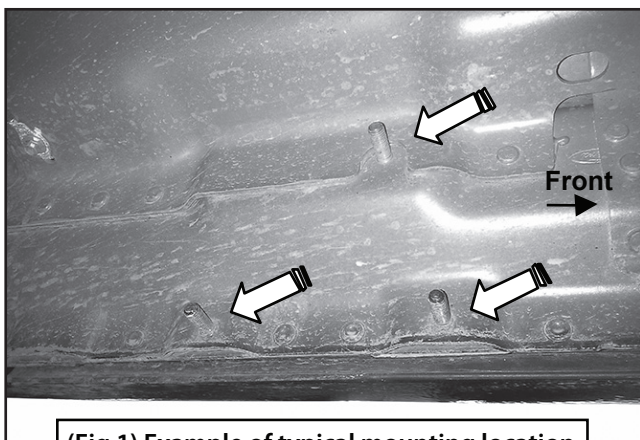


(Fig 1) Example of typical mounting location


STEP 2

Slide (1) Plastic Retainer over each of the (3) factory mounting studs in the body panel (Figs 2 & 3).

IMPORTANT: The Plastic Retainers are designed to prevent corrosion between the aluminum body panel and the steel mounting brackets. **DO NOT** install the Brackets without the Plastic Retainers.

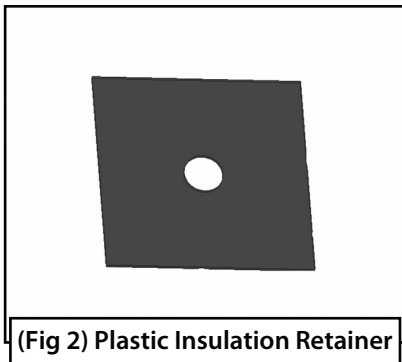


(Fig 2) Plastic Insulation Retainer

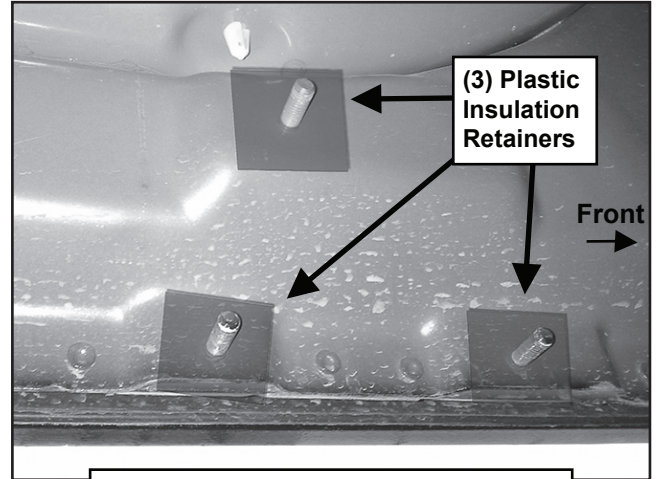

(Fig 3) Thread Plastic Retainers onto all mounting studs. (Center/Rear mounting location shown)

STEP 3


Select (1) Support Bracket **[D]** (Fig 4). Attach the Brackets to the (2) studs on the pinch trim with (2) 8mm Nylon Lock Nuts (Fig 4 & 5). **DO NOT** tighten hardware.

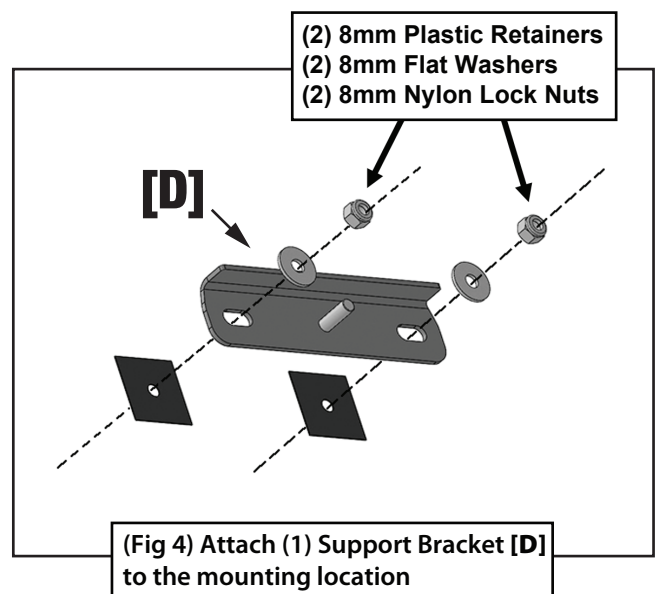


(Fig 4) Attach (1) Support Bracket **[D]** to the mounting location



TYGER®

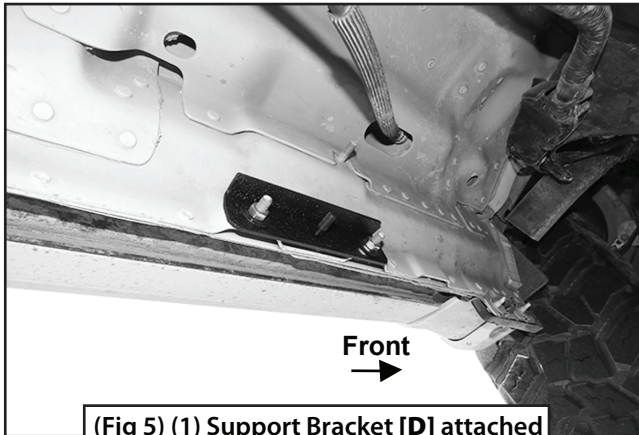

(Fig 5) (1) Support Bracket [D] attached to the front mounting location

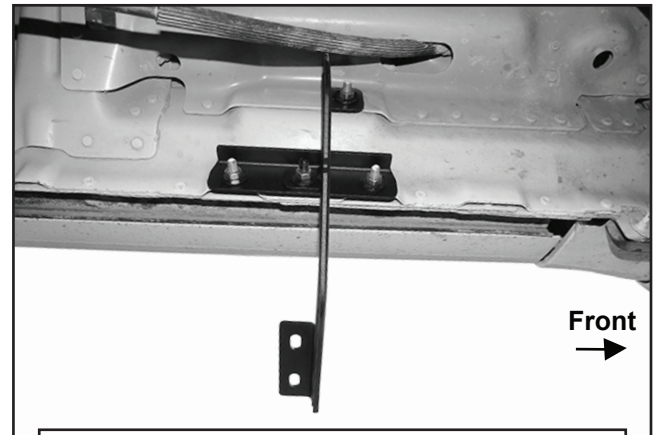


(Fig 7) (1) Front Mounting Bracket [A] attached to the upper mounting stud and Support Bracket

STEP 4

Select (1) Front Mounting Bracket [A] (Fig 6). Attach the Bracket to the upper stud in the rocker panel and Support Bracket [D] with (2) 8mm Flat Washers and (2) 8mm Nylon Lock Nuts (Fig 6 & 7). DO NOT tighten hardware.

Passenger/Right Side Installation Pictured

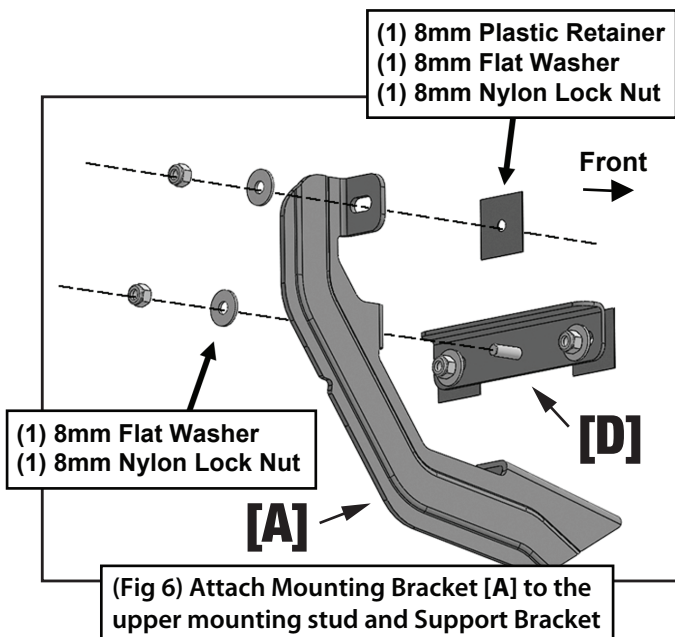

(Fig 6) Attach Mounting Bracket [A] to the upper mounting stud and Support Bracket


STEP 5

Repeat **STEPS 3 & 4** to attach (2) Rear Mounting Brackets [B] and (2) Support Brackets to the center and rear mounting locations.

STEP 6

Select the Driver/Left Tyger Riser Side Step. Place the Side Step onto the Mounting Brackets.

IMPORTANT: DO NOT slide front to back or damage to the finish may result. Attach the Side Step to the Mounting Brackets with (6) 8mm Combo Bolts (Fig 8). DO NOT tighten hardware.

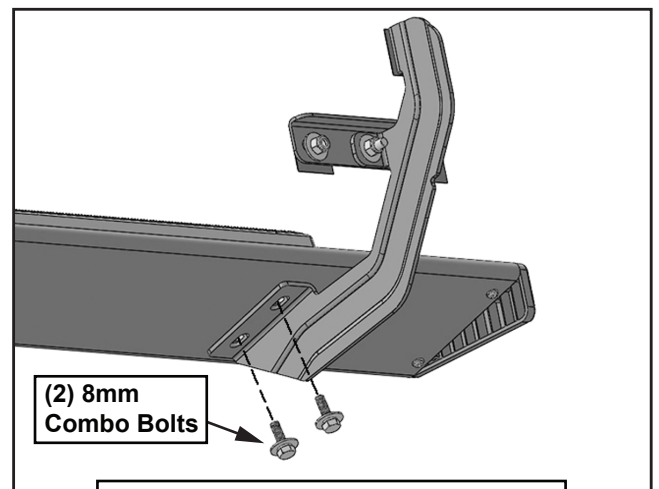

(Fig 8) Attach the Driver/Left Side Step to the Mounting Brackets



TYGER[®]

STEP 7

Level and adjust the Side Step and tighten all hardware.

STEP 8

Repeat **STEPS 1-7** to attach the Passenger/Right Side Step

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.