



SKID PLATE

TG-SP6J70008

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Skid Plate
- x1 Driver/Left Support Bracket
- x1 Passenger/Right Support Bracket
- x2 5mm Spacers
- x2 8mm x 35mm Bolt Plates
- x6 8mm x 30mm Button Head Bolts
- x14 8mm x 22mm OD x 2mm Flat Washers
- x8 8mm Lock Washers
- x8 8mm Hex Nuts

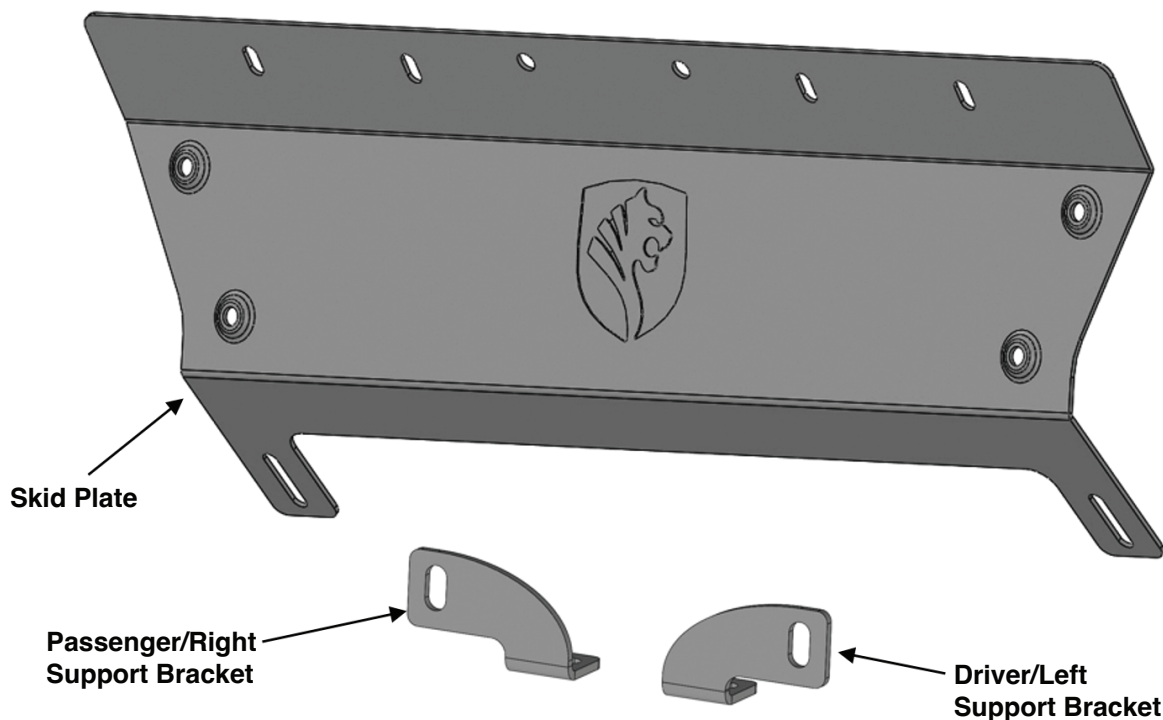



TYGER®

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.


ONLY COMPATIBLE WITH INSTALLED TYGER SHORT STUBBY BUMPER FOR WRANGLER JK/JL & GLADIATOR

STEP 1


For JK models, Attach the Skid Plate to the bottom of the Bumper (Sold separately):

- Select the Driver/Left Support Bracket.
- Attach the Bracket to the outer hole with the bottom tab towards the center in the back of the crossbar on the bottom of the frame with (1) 8mm Bolt Plate, (1) 8mm Flat Washer, (1) 8mm Lock Washer and (1) 8mm Hex Nut (Figs 1, 2 & 3). Repeat this STEP to attach the Passenger/Right Support Bracket.


Driver/Left Side Installation Pictured

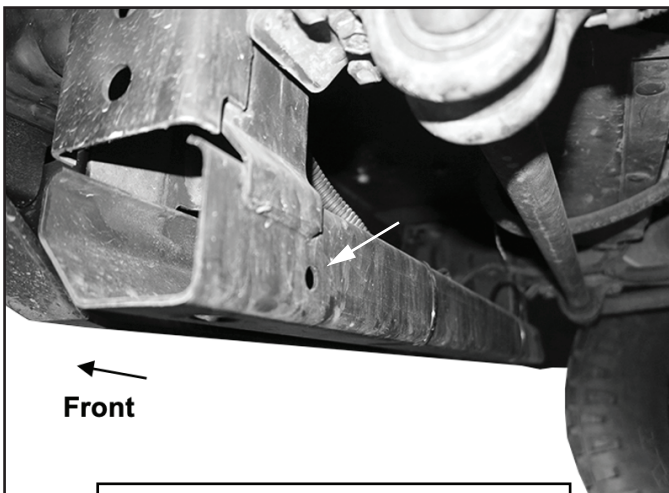

(Fig 1) For JK models, Locate the outer hole in the back of the crossbar

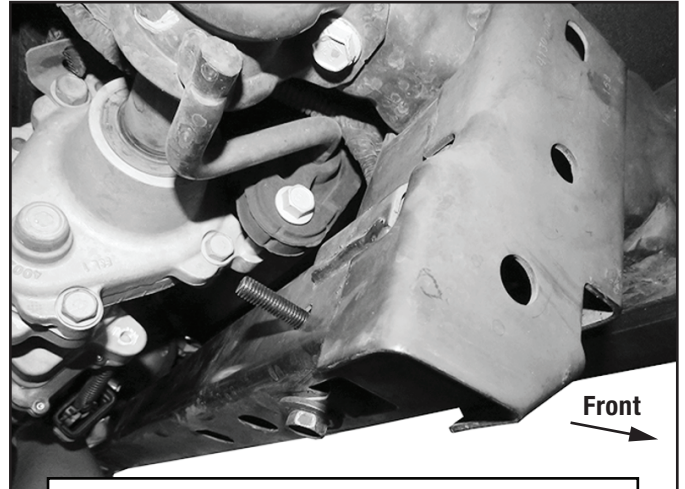

(Fig 2) For JK Models, insert (1) 8mm Bolt Plate into the crossbar (Passenger/Right shown)

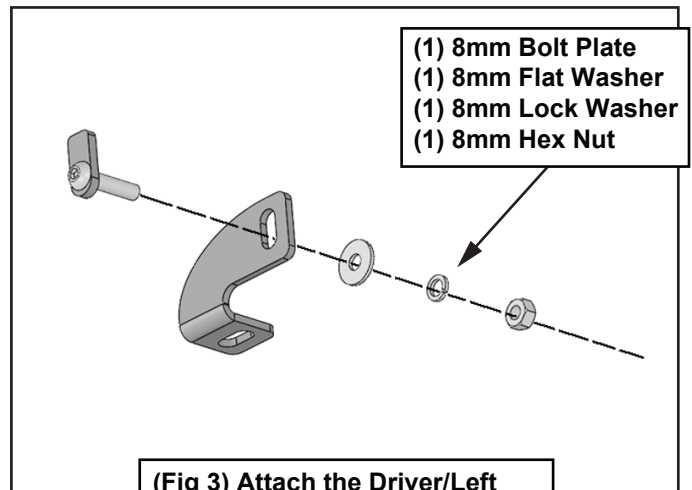

(Fig 3) Attach the Driver/Left Support Bracket to the crossbar


STEP 2

For JL and JT (Gladiator) models, Attach the Skid Plate to the bottom of the Bumper (Sold separately):

- Select the Driver/Left Support Bracket.
- Attach the Bracket to the inner hole in the back of the support strut on the bottom of the frame with (1) 8mm Bolt Plate, (1) 8mm Flat Washer, (1) 8mm Lock Washer and (1) 8mm Hex Nut (Figs 3 & 4). Repeat this STEP to attach the Passenger/Right Support Bracket.



TYGER[®]

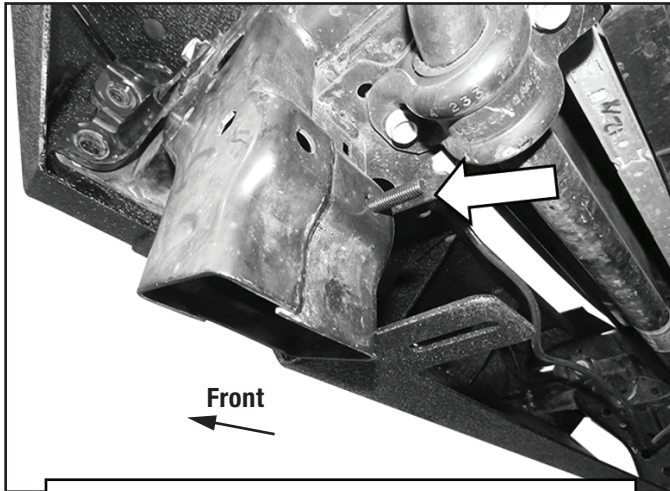


(Fig 4) For JL Models, insert (1) 8mm Bolt Plate into the support strut (Driver/Left shown)

STEP 3

Select the Skid Plate. Attach the Skid Plate to the middle bottom of the Bumper with (2) 6mm Button Head Bolts (4) 6mm Flat Washers and (2) 6mm Nylon Lock Nuts (Fig 5).

NOTE: Hardware in this step is found in the Tyger Short Bumper kit. DO NOT tighten hardware.

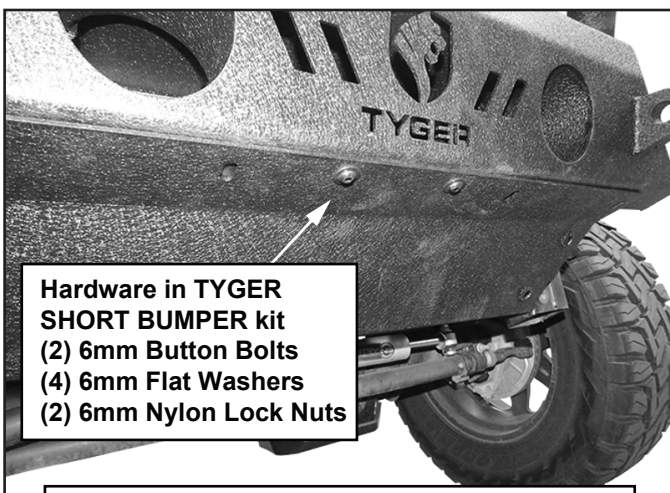


Hardware in TYGER
SHORT BUMPER kit
(2) 6mm Button Bolts
(4) 6mm Flat Washers
(2) 6mm Nylon Lock Nuts

(Fig 5) Attach the top middle of the Skid Plate to the License Plate Bracket Mounting Location

STEP 4

Attach the 4 outer slots in the top of the Skid Plate to the bottom of the Bumper with (4) 8mm Button Head Bolts, (8) 8mm Flat Washers, (4) 8mm Lock Washers and (4) 8mm Hex Nuts (Fig 6). DO NOT tighten hardware.

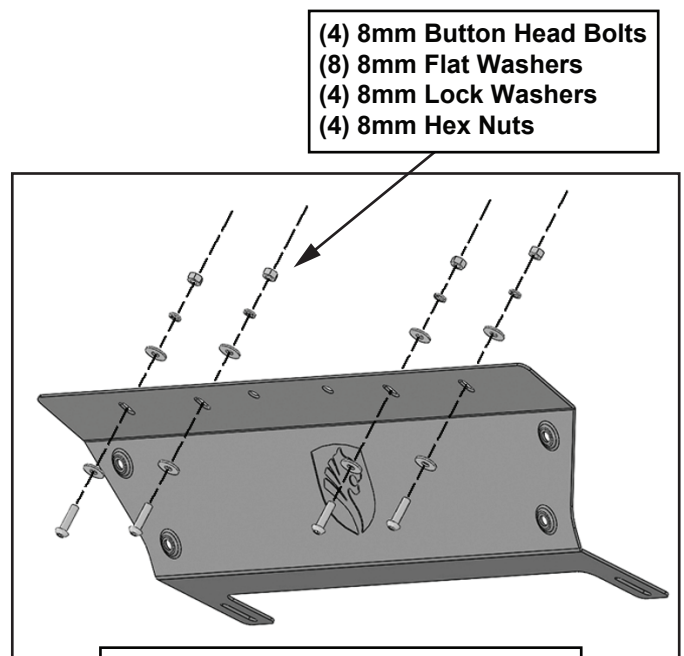

(Fig 6) Attach the top of the Skid Plate to the lower rear of the Bumper


STEP 5

Attach the Skid Plate to the Support Brackets with (2) 8mm Button Head Bolts, (4) 8mm Flat Washers, (2) 5mm Spacer Plates, (2) 8mm Lock Washers and (2) 8mm Hex Nuts (Fig 7).



TYGER®

- (1) 8mm Button Head Bolt
- (2) 8mm Flat Washers
- (1) 5mm Spacer
- (1) 8mm Lock Washer
- (1) 8mm Hex Nut

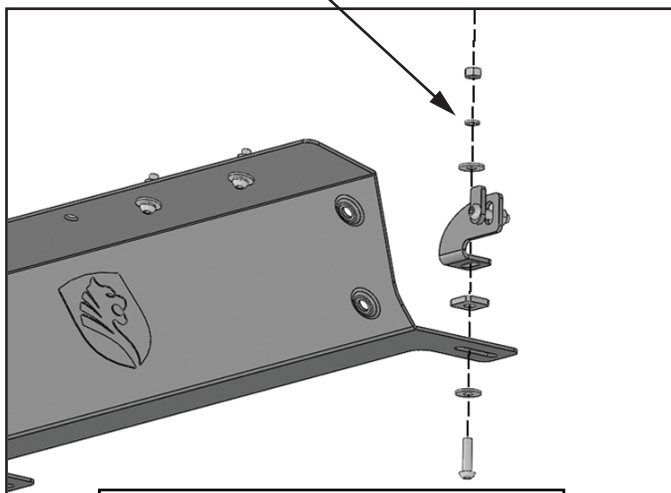

(Fig 7) Attach the bottom of the Skid Plate to the Skid Plate Brackets

STEP 6

Stand back from the vehicle and check to see that the Skid Plate is centered and level on the vehicle and adjust as required. Once properly aligned, fully tighten all hardware.

STEP 7

Do periodic inspections of the installation to make sure that all hardware is secure and tight.