



# TYGER®

## TYGER RIDER®

TG-SS2F35138

### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)


### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


### Parts List

- x1 Driver/Left Sidebar
- x1 Passenger/Right Sidebar
- x2 Front Mounting Brackets
- x4 Center/Rear Mounting Brackets
- x12 10-1.5mm x 25mm Hex Bolts
- x12 10mm Lock Washers
- x12 10mm x 27mm x 3mm Flat Washers
- x12 8-1.25mm x 25mm Combo Bolts


### Passenger Right Side

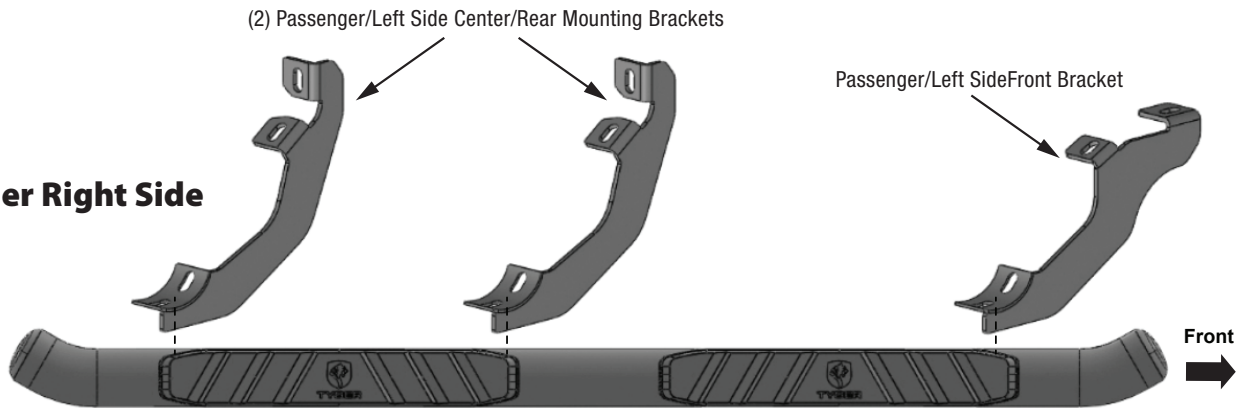

### Driver Left Side

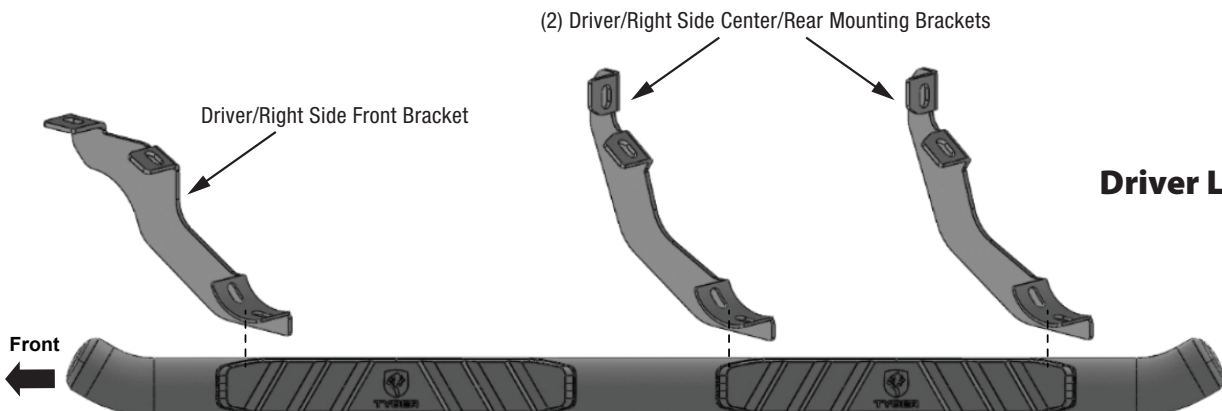

## Bottom View

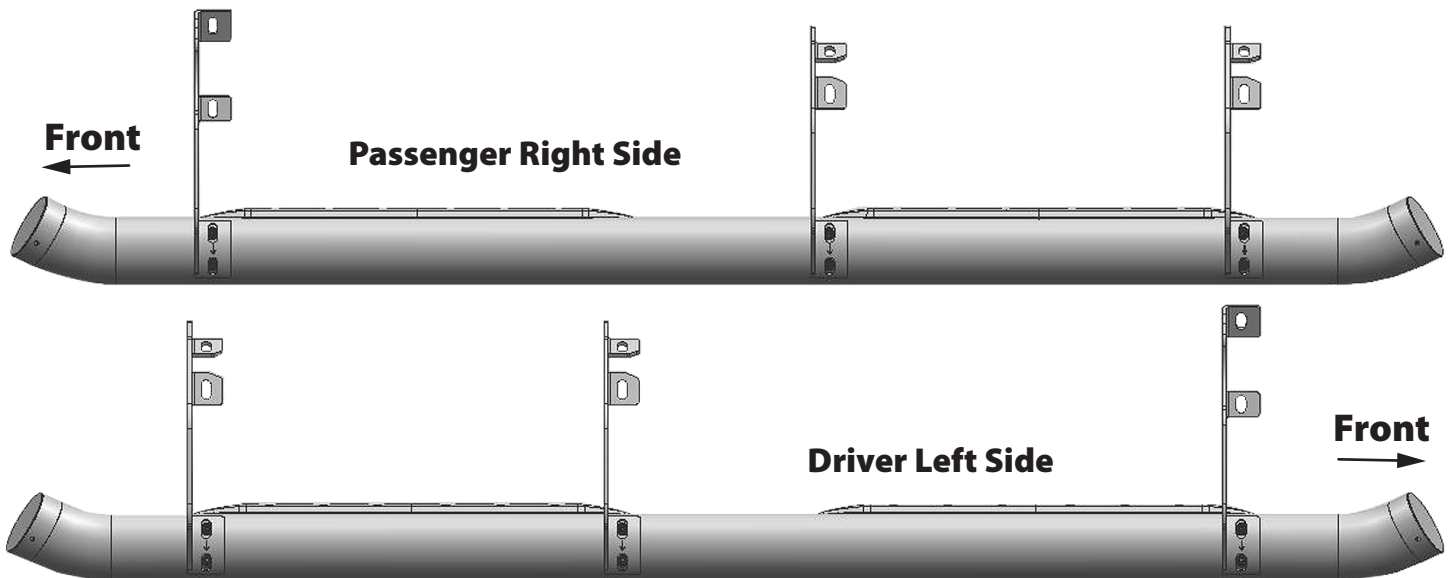


### STEP 1

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

### STEP 2

Starting on the Driver/Left side inner rocker panel, locate the threaded mounting holes in the rocker panel, (Fig 1). Remove the plastic plugs covering the mounting holes.


**Driver/Left Side Installation Pictured**

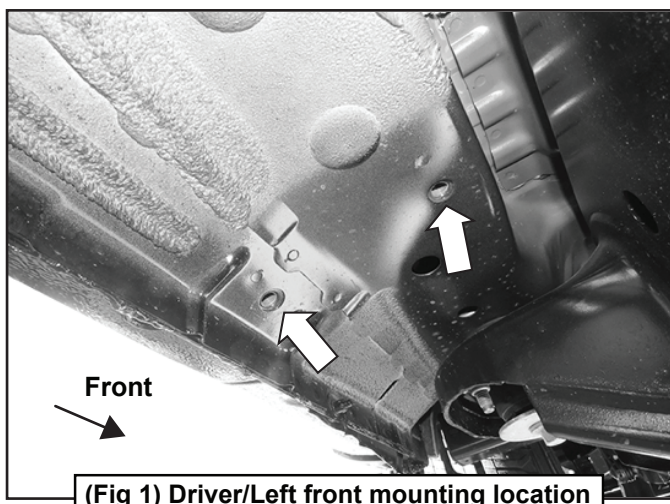


### STEP 3


Select (1) Front Mounting Bracket. Attach the Bracket to the Driver/Left front location with (2) 10mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers (Figs 2 & 3). DO NOT tighten hardware at this time.

**Driver/Left Side Installation Pictured**

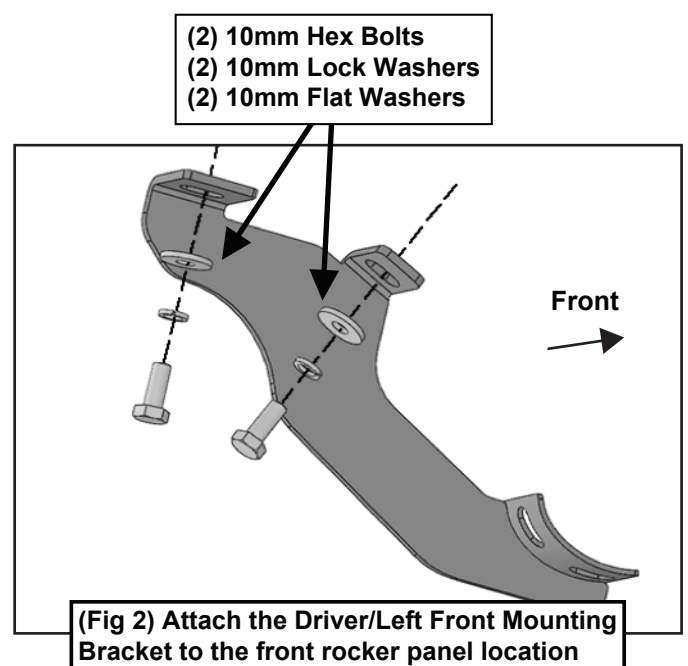

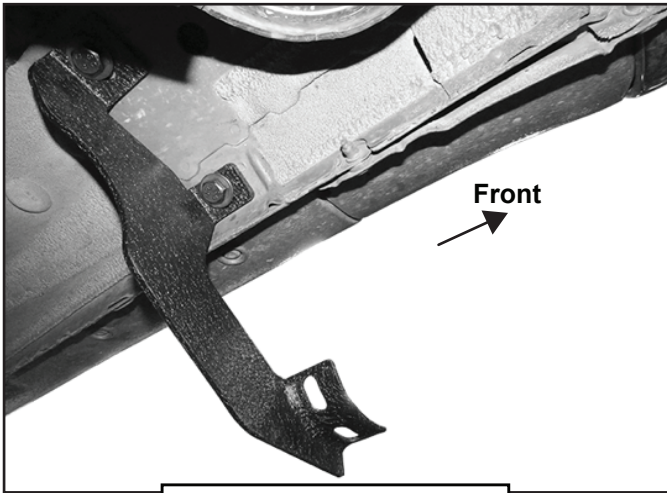


**(Fig 3) Driver/Left Front Mounting Bracket attached**

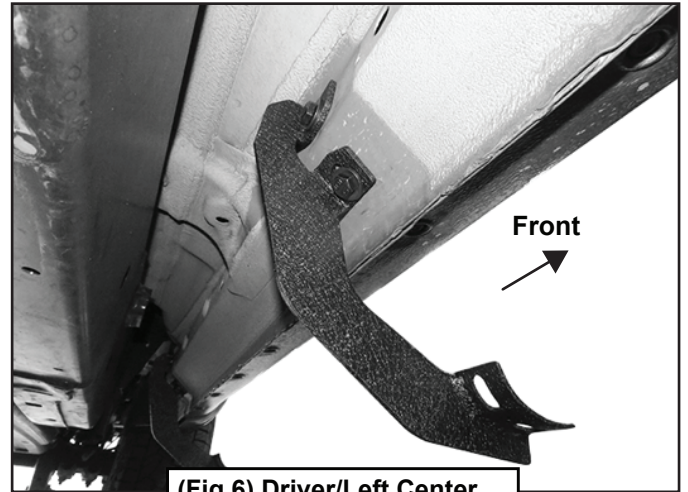


**(Fig 6) Driver/Left Center Mounting Bracket attached**

## STEP 4

Locate the Center threaded mounting holes. Select (1) Center/Rear Mounting Bracket. Attach with (2) 10mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers (Figs 4-6). DO NOT tighten hardware at this time.

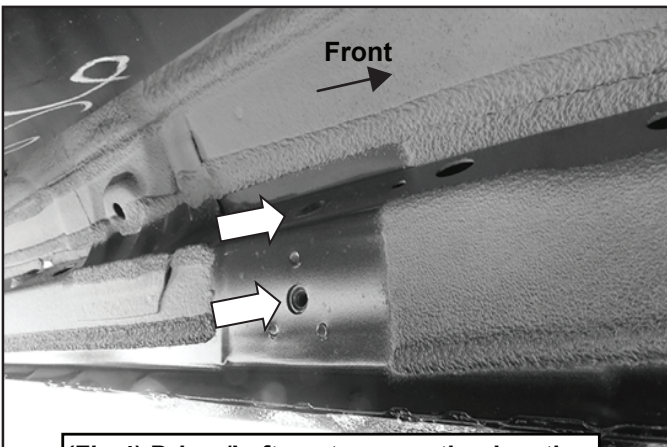

**(Fig 4) Driver/Left center mounting location**

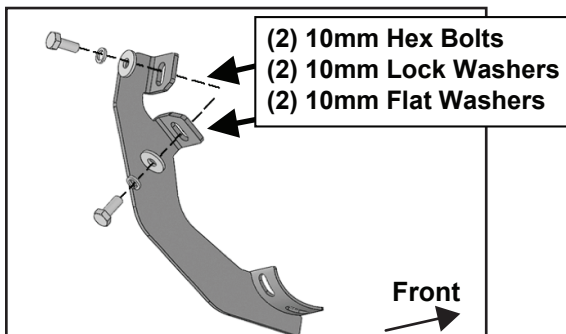


**(Fig 5) Attach the Driver/Left Center and Rear mounting Brackets to the rocker panel**


## STEP 5

Repeat **STEP 3** to attach (1) Center/Rear Mounting Bracket to the rear location, (Figs 5, 7 & 8).

**Driver/Left Side Installation Pictured**

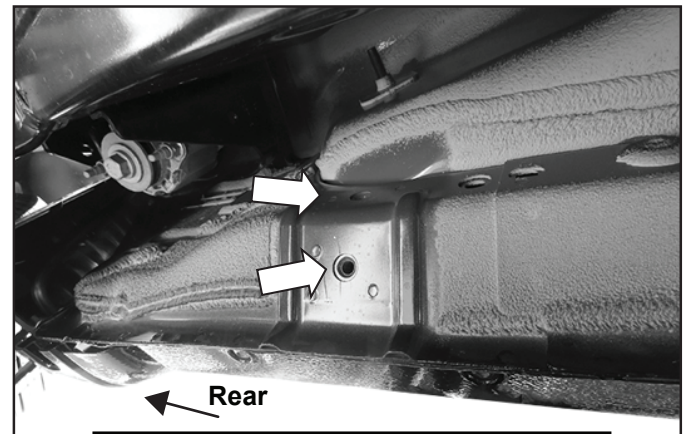

**(Fig 7) Driver/Left rear mounting location**

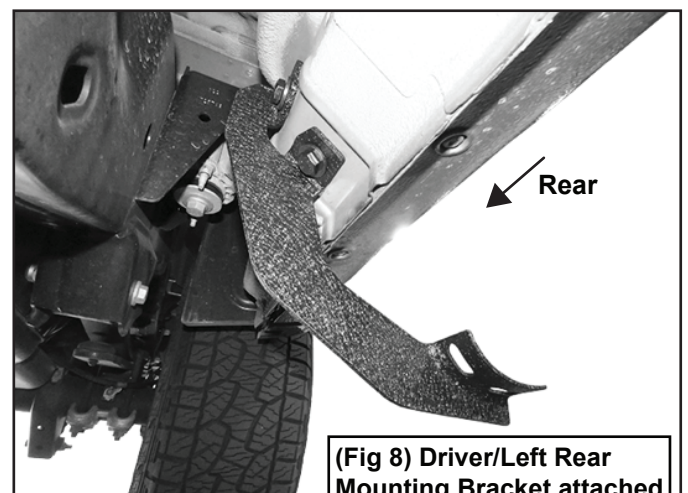

**(Fig 8) Driver/Left Rear Mounting Bracket attached**




## STEP 6


Unwrap the Driver/Left Sidebar. Carefully place Sidebar on the brackets.

**IMPORTANT:** DO NOT slide or rotate Sidebar on cradles, or damage to the finish may result. Attach Sidebar to the Mounting Brackets with (6) 8mm Combo Bolts. DO NOT tighten hardware at this time (Figs 9-12).


### Driver/Left Side Installation Pictured

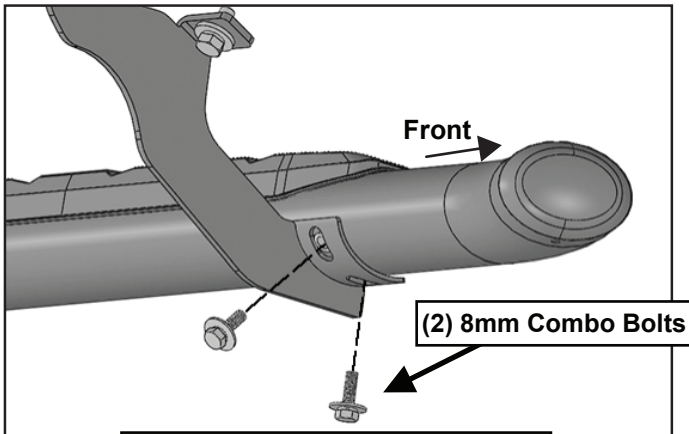


(Fig 9) Attach the Driver/Left Sidebar to the Mounting Brackets

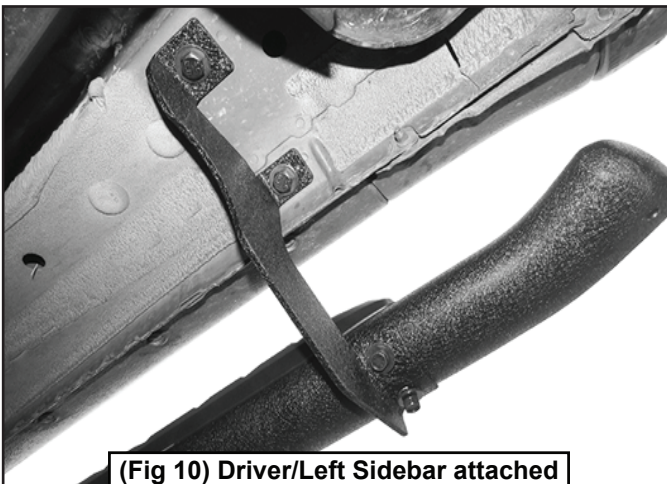

(Fig 10) Driver/Left Sidebar attached to the Front Mounting Bracket

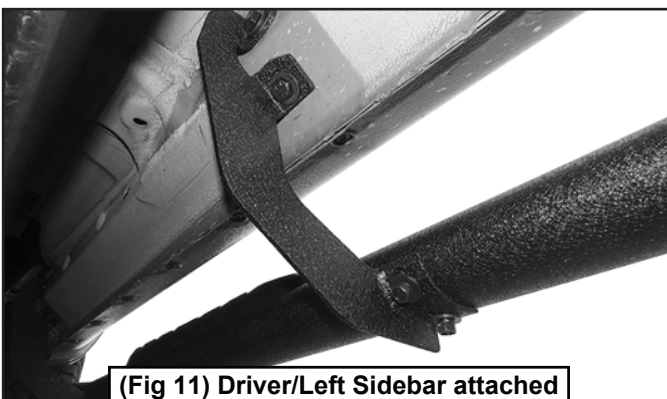

(Fig 11) Driver/Left Sidebar attached to the Center Mounting Bracket

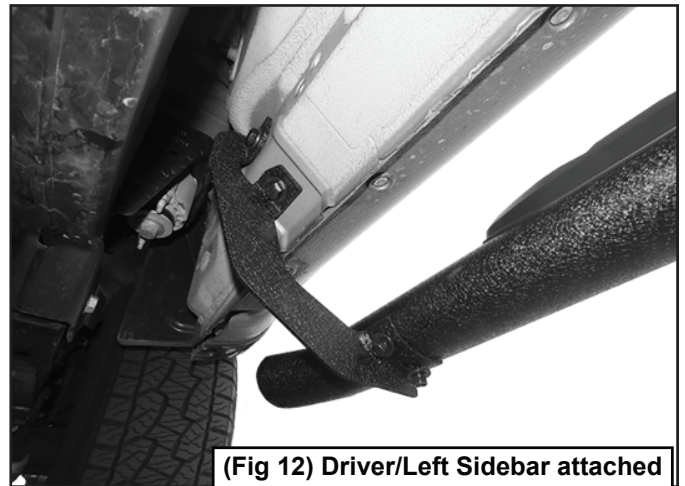

(Fig 12) Driver/Left Sidebar attached to the Rear Mounting Bracket

## STEP 7

Level and adjust the Sidebar and fully tighten all hardware

## STEP 8

Repeat **STEPS 2—7** to attach the Passenger/Right Sidebar.

## STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight