



# TYGER®

## TYGER RIDER®

TG-SS2F35308

### BEFORE INSTALLATION

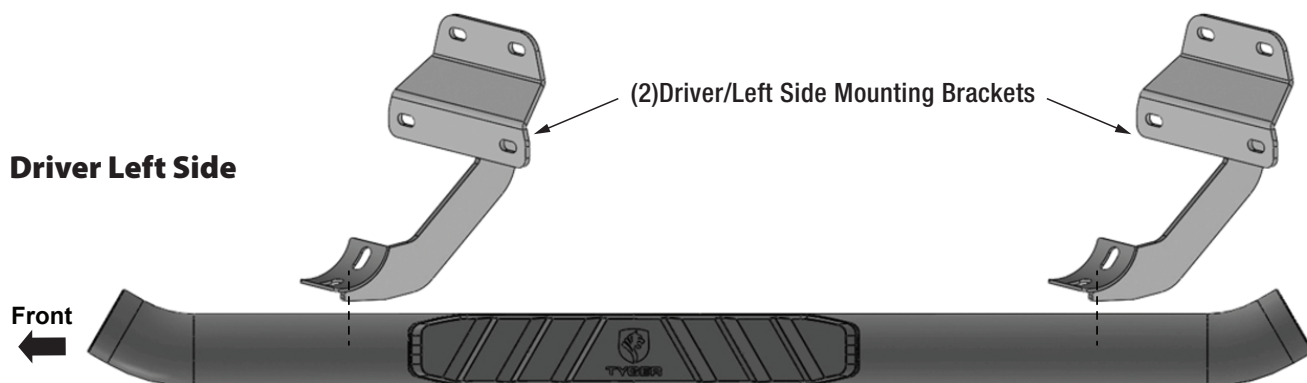
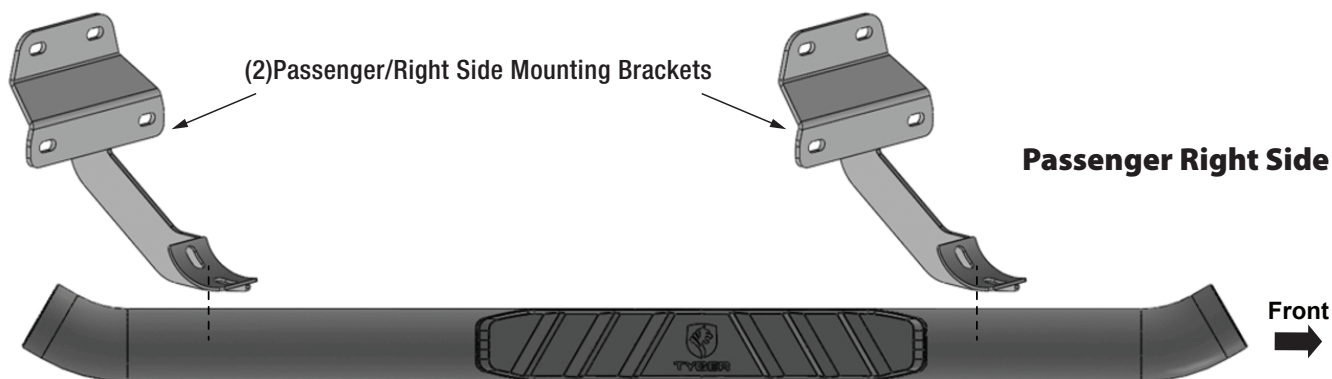
READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

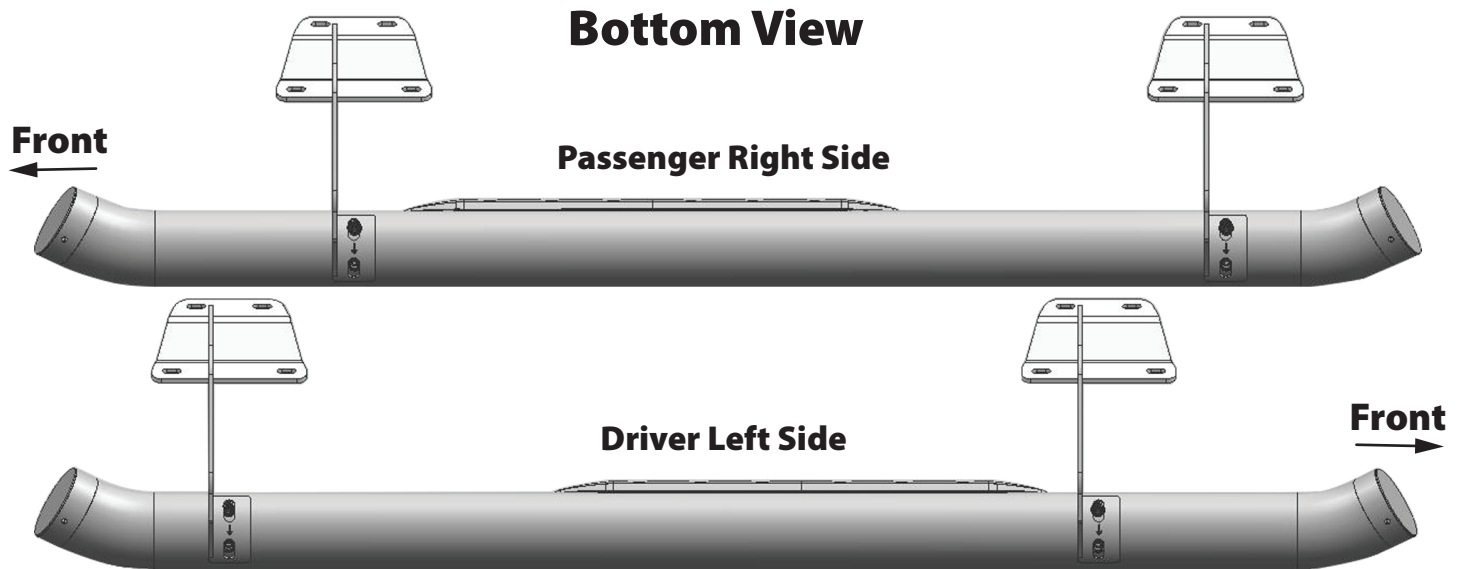
### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

### Parts List

- x1 Driver/Left Sidebar
- x1 Passenger/Right Sidebar
- x4 Mounting Brackets
- x8 8mm x 25mm Combo Bolts
- x12 8mm x 24mm OD x 2mm Flat Washers
- x12 8mm Nylon Lock Nuts
- x12 8mm Plastic Retainers



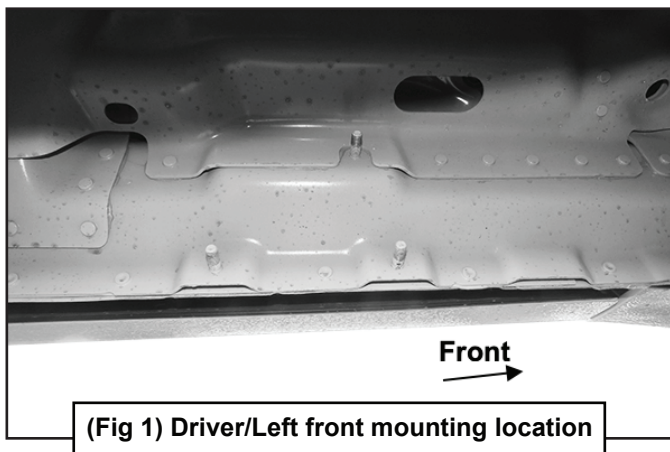

**PROCEDURE:**

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

**STEP 1**

Starting on the Driver/Left front of the vehicle, locate the threaded mounting studs in the rocker panel (Fig 1). **Clean mounting studs with wire brush to remove paint and debris.**

**Driver/Left Side Installation Pictured**


**STEP 2**

Slide (1) Plastic Retainer over each of the (3) factory mounting studs in the rocker panel.

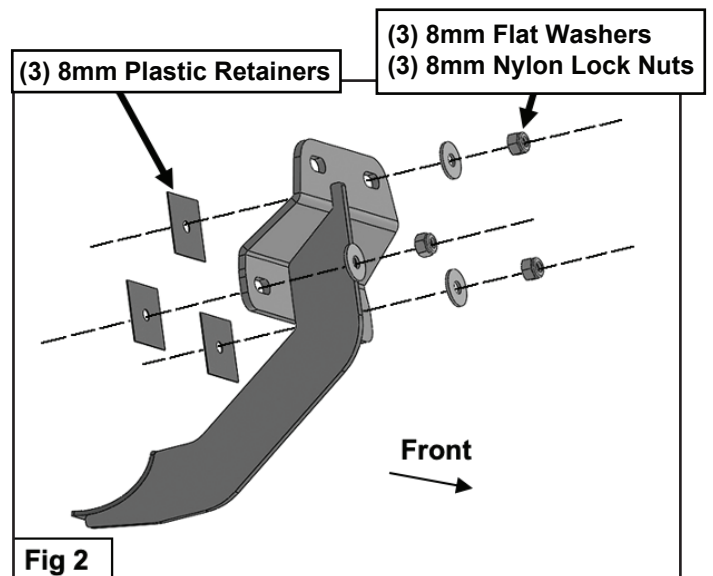
**IMPORTANT:** The Plastic Washers are designed to prevent corrosion between the aluminum rocker panel and the steel mounting brackets. **DO NOT install the Brackets without the Plastic Retainers.**

**STEP 3**

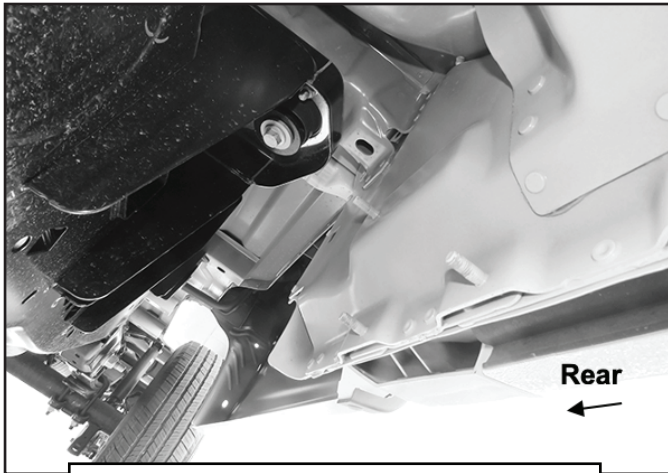
Select (1) Mounting Bracket.

**NOTE:** All (4) Brackets are universal and will fit left or right in all mounting locations. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts (Fig 2). **DO NOT** tighten hardware.

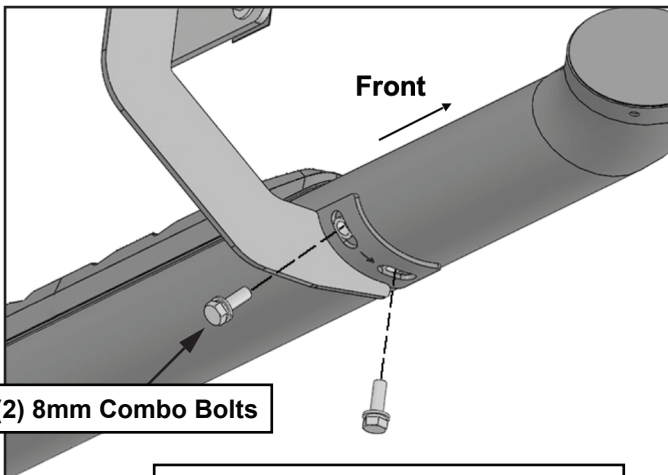
**Driver/Left Side Installation Pictured**


**STEP 4**

Repeat **STEPS 1-3** to attach (1) Mounting Bracket to the Driver/Left rear mounting location (Fig 3). **DO NOT** tighten hardware.

**Driver/Left Side Installation Pictured**

**(Fig 3) Driver/Left rear mounting location**
**STEP 5**

Select the Driver/Left Sidebar. Attach the Sidebar to the Mounting Brackets with (4) 8mm Combo Bolts (Fig 4). DO NOT tighten hardware.

**Driver/Left Side Installation Pictured**

**(2) 8mm Combo Bolts**
**(Fig 4) Attach the Driver/Left Sidebar to the (2) Mounting Brackets**
**STEP 6**

Level and adjust the sidebar as necessary and fully tighten all hardware.

**STEP 7**

Repeat **STEPS 2-6** to attach the Passenger/Right Sidebar.

**STEP 8**

Do periodic inspections to the installation to make sure that all hardware is secure and tight.