



TYGER®

TYGER RIDER®

TG-SS2N35208

BEFORE INSTALLATION



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT


TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/Left Sidebar
- x1 Passenger/Right Sidebar
- x3 Driver/Left Mounting Brackets
- x3 Passenger/Right Mounting Bracket
- x12 8-1.25mm x 25mm Combo Bolts
- x12 8mm x 24mm OD x 2mm Flat Washers
- x12 8mm Flange Nuts

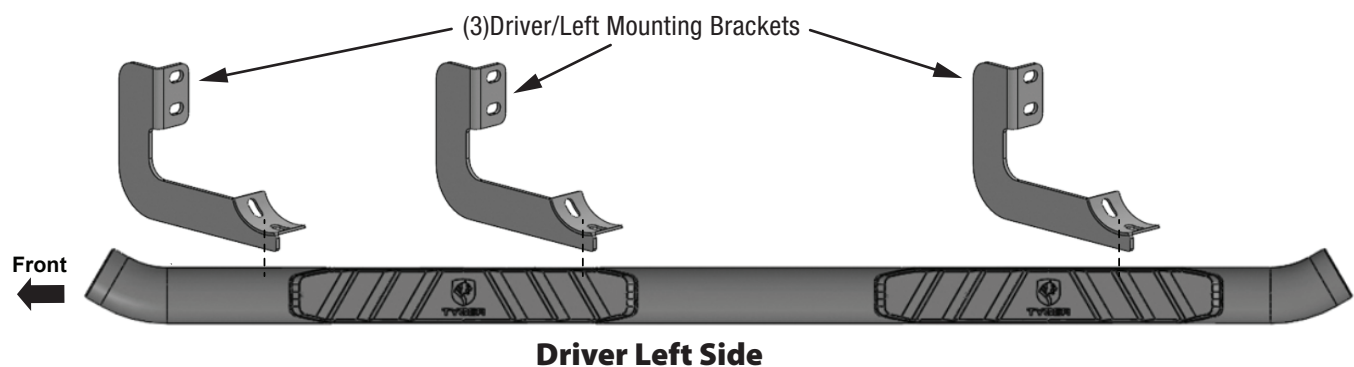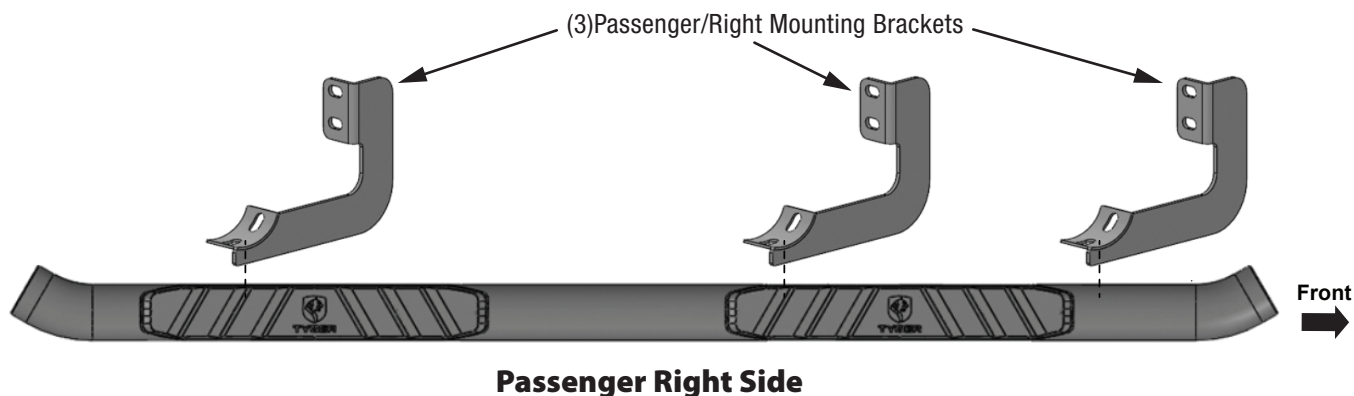

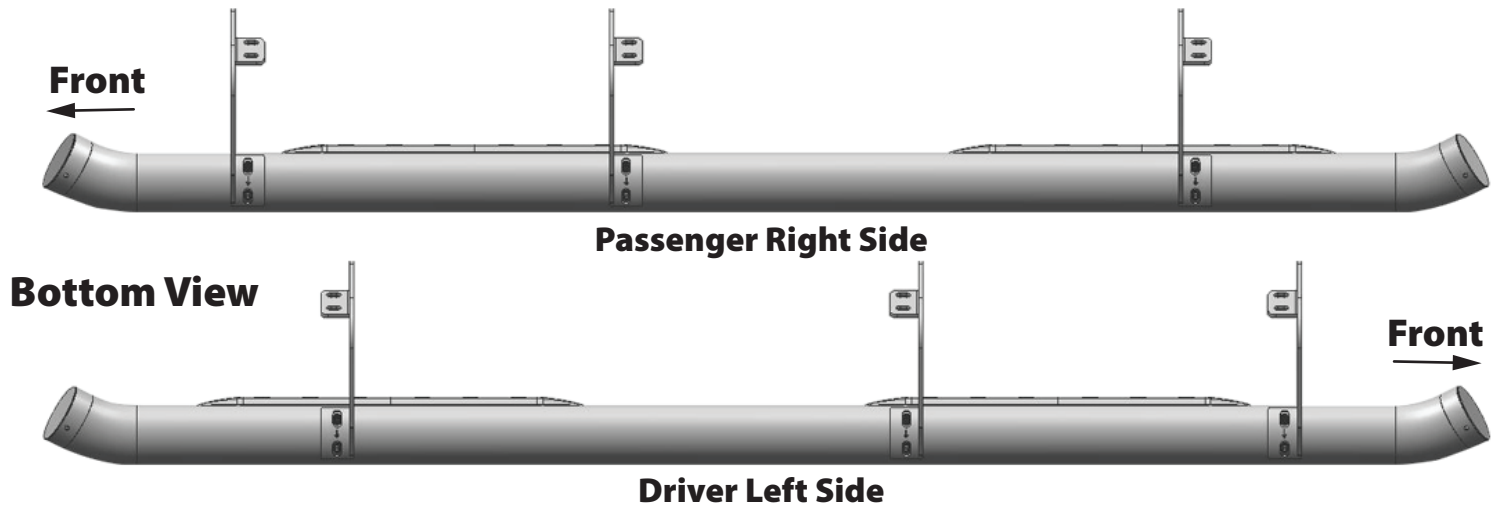


STEP 1

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. CLEAN MOUNTING STUDS WITH WIRE BRUSH TO REMOVE PAINT AND DEBRIS.

STEP 2

Starting on the Passenger/Right side front of the vehicle (Fig1).

Passenger Side Installation Pictured

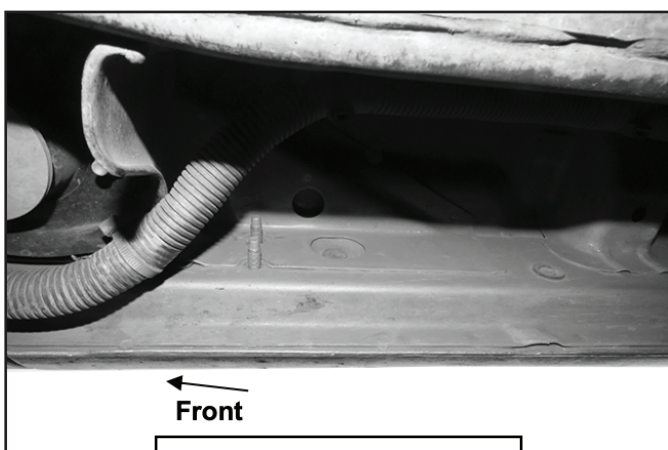

(Fig 1) Passenger/Right side front mounting location

Attach (1) Passenger/Right Mounting Bracket to the Front Location with (2) 8mm Flat Washers and (2) 8mm Flange Nuts. (Fig 2A)

Fig 2A

**(2) 8mm Flat Washers
(2) 8mm Flange Nuts**

Front ←

ATTENTION:

Some Frontier models have front factory studs that are too short to fit both Flat Washers and Flange Nuts. In this case, **omit the Flat Washers and only install the Flange Nuts.** (Fig 2B)

Fig 2B

(2) 8mm Flange Nuts


Front ←

(Fig 2B) (Only for models with shorter front studs)


STEP 3

Repeat **STEP 2** to attach the remaining Passenger/Right Mounting Brackets to the center and rear locations (Figs 3 & 4).

Passenger Side Installation Pictured

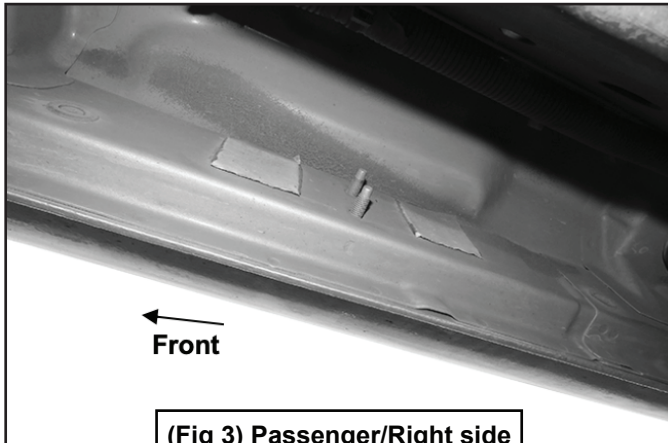

(Fig 3) Passenger/Right side center mounting location

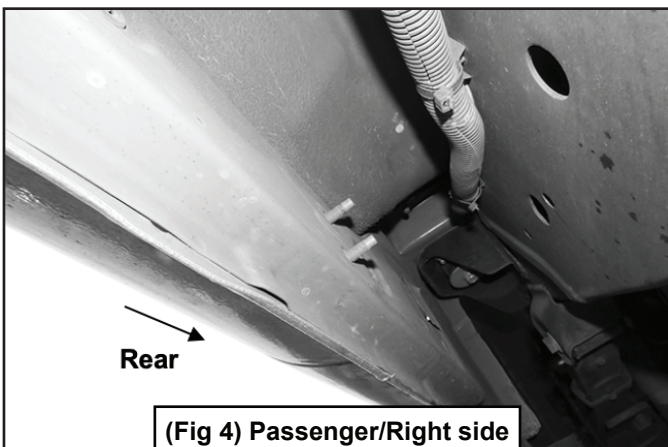


(Fig 4) Passenger/Right side rear mounting location

STEP 4

Select the Passenger/Right Sidebar. Carefully place Sidebar on the brackets.

IMPORTANT: DO NOT slide or rotate Sidebar on cradles, or damage to the finish may result. Attach Sidebar to the Mounting Brackets with (6) 8mm Combo Bolts (Figs 5 & 6). DO NOT tighten hardware at this time.

Passenger Side Installation Pictured

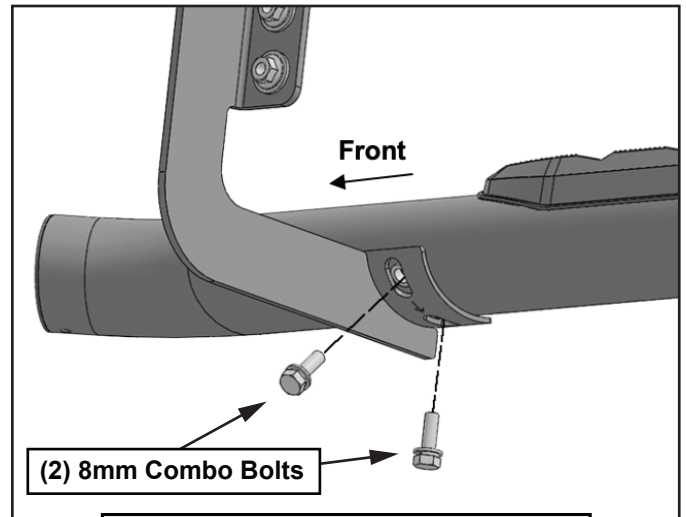

(Fig 5) Attach the Passenger/Right Sidebar to the Mounting Brackets



(Fig 6) Sidebar attached to the Front Mounting Bracket

STEP 5

Level and adjust the Sidebar and tighten all hardware.

STEP 6

Repeat **STEPS 1-5** to attach the Driver/Left Sidebar.

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.